
#### FRU (Field Replaceable Unit) LIST

This chapter gives you the FRU (Field Replaceable Unit) listing in global configuration of AL1916. Refer to this chapter whenever ordering for parts to repair or for RMA (Return Merchandise Authorization).

**NOTE:** Please not WHEN ORDER FRU PARTS, that you should check the most up-to-date information available on your regional web or channel (<a href="http://aicsl.acer.com.tw/spl/">http://aicsl.acer.com.tw/spl/</a>). For whatever reasons a part number change is made, it will not be noted in the printed Service Guide. You MUST use the local FRU list provided by your regional Acer office of order FRU parts for repair and service of customer machines.

Note: To scrap or to return the defective parts. You should follow the local government ordinance or regulations on how best to dispose it, or follow the rules set by your regional Acer office on how to return it.

# **Exploded Diagram**

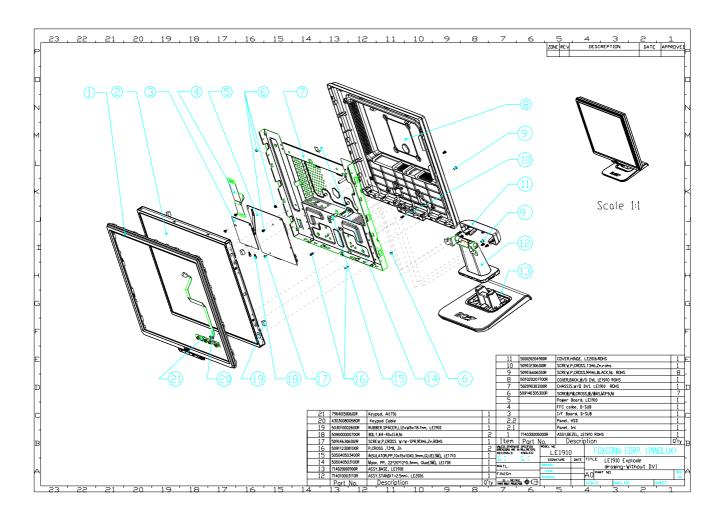


## **PART LIST**

CATEGORY	PARTNAME	DESCRIPTION
CASE/COVER/BRACKET	HRN ASS'Y 8P 240mm	
ASSEMBLY	UL2561#28, RoHS	HRN ASS'Y 8P 240mm UL2561#28,RoHS
Cable	HRN LVDS FFC 30P 200mm, RoHS	HRN LVDS FFC 30P 200mm, RoHS
Cable	VGA cable black	CABLE, D-SUB 15P MALE 6FT BLACK, SZ4120955
		PWR CORD 16A/250V BLK 6FT
Cable	Euro power cord black	VDE,H05VV-F 3G
Cable	UK power cord black	PWRCORD 6A/250V BLK 6FT UK
Cable	Swiss power cord black	PWRCORD 6A/250V BLK 6FT SWISS
CASE/COVER/BRACKET		
ASSEMBLY	COVER,HINGE	COVER,HINGE, LE2016
CASE/COVER/BRACKET		
ASSEMBLY	COVER,BACK	COVER,BACK, LE1910
CASE/COVER/BRACKET		
ASSEMBLY	BASE	BASE, LE1918
CASE/COVER/BRACKET		
ASSEMBLY	STAND, LE1710	STAND, LE1918
CASE/COVER/BRACKET		
ASSEMBLY	BRACKET,FINGER	BRACKET,FINGER, LE1710
CASE/COVER/BRACKET		
ASSEMBLY	HINGE, LE2016	HINGE, LE2016
CASE/COVER/BRACKET		
ASSEMBLY	CHASSIS (main metal part)	CHASSIS, LE1910


l		
screw	BOLT,#4-40x11.8,NiFOR D-SUB/DVI CONN.	BOLT,#4-40x11.8,NiFOR D-SUB/DVI CONN.
screw	SCREW,P,CROSS,M4*10,Zn,NL(NYLOK)	SCREW, PW, CROSS, W/WAS, M3*5, NI
screw	SCREW,P,CROSS,M4*18,Zn	SCREW,P,CROSS W/W-SPR,M3*6,Zn,ROHS
screw	SCREW,P,CROSS,M4*6,BLACK,NL ROHS (NYLOK)	SCREW,P,CROSS,M4*6,BLACK,NL ROHS (NYLOK)
screw	SCREW,P,CROSS,T.T-3*8,Zn ROHS REV:A	SCREW,P,CROSS,T.T-3*8,Zn ROHS REV:A
screw	SCREW, P, CROSS, T. T-3*6, Zn	SCREW,P,CROSS,T.T-3*6,Zn
screw	SCREW,P,CROSS,T.T-4*6,Zn	SCREW,P,CROSS,T.T-4*6,Zn
Board	main board	PCBA, IF BOARD (EMEA), LE1910-6G0
Board	power + invertor board	PCBA,PWR&INV./B, LE1910-6H2
PANEL	LCD PANEL 19" MT190EN02-V0-G1/2/3,AM19000030	LCD PANEL 19" MT190EN02-V0-G1/2/3,AM19000030
Board	Key pad	PCBA,KEYPAD BOARD+ Bezel


## **SHEMATIC DIAGRAM**


## Keypad Diagram

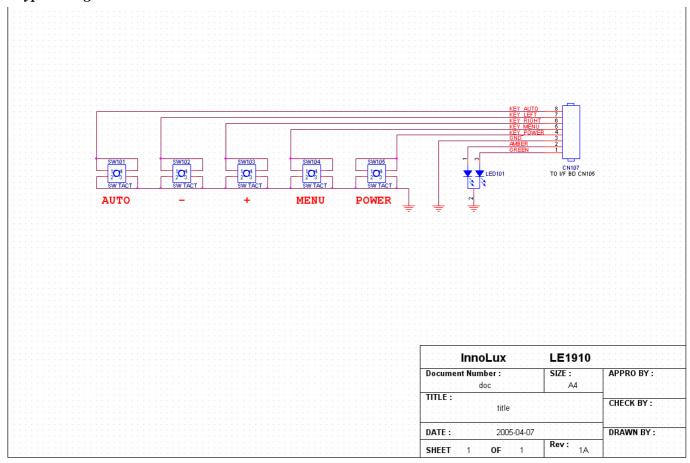



Interface Board Schematic

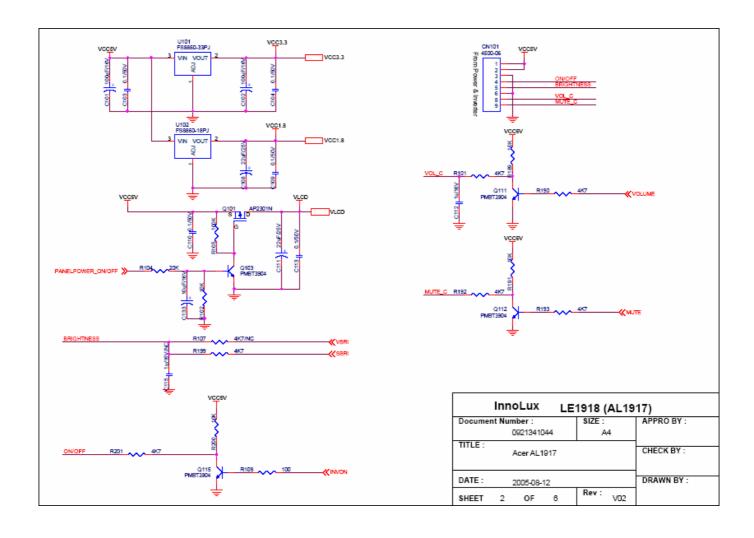

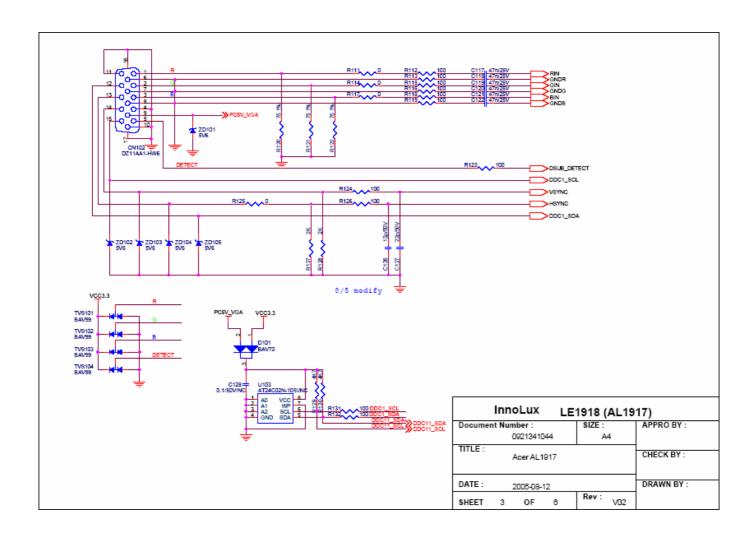

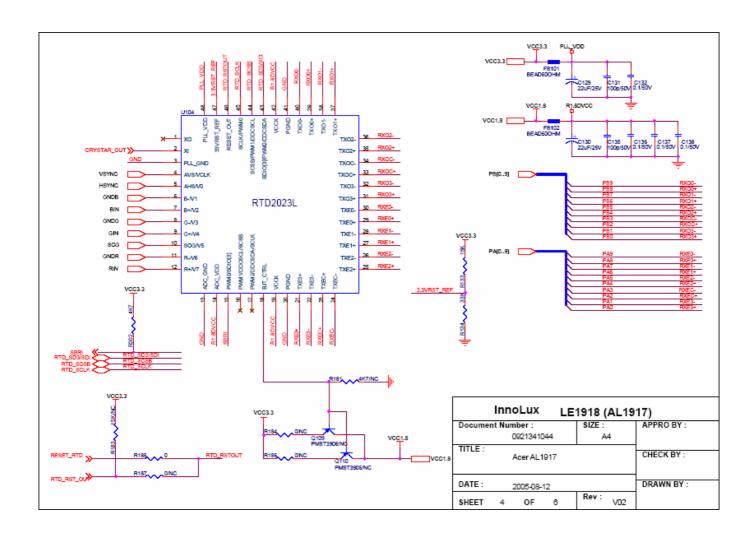

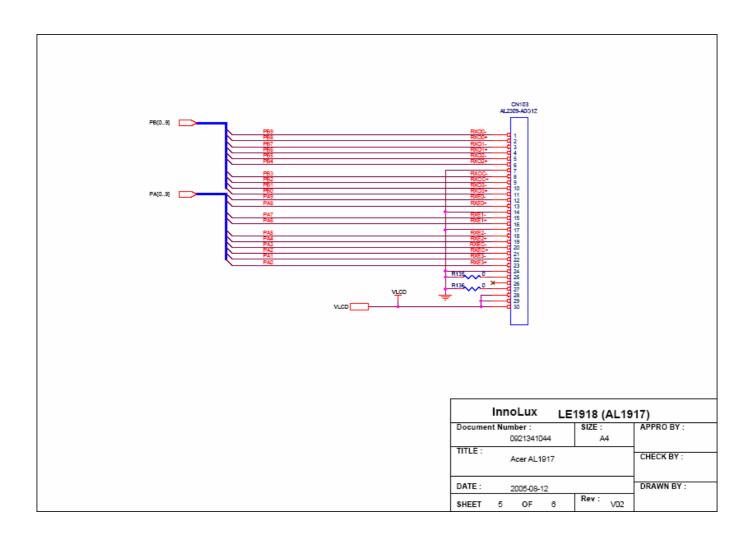

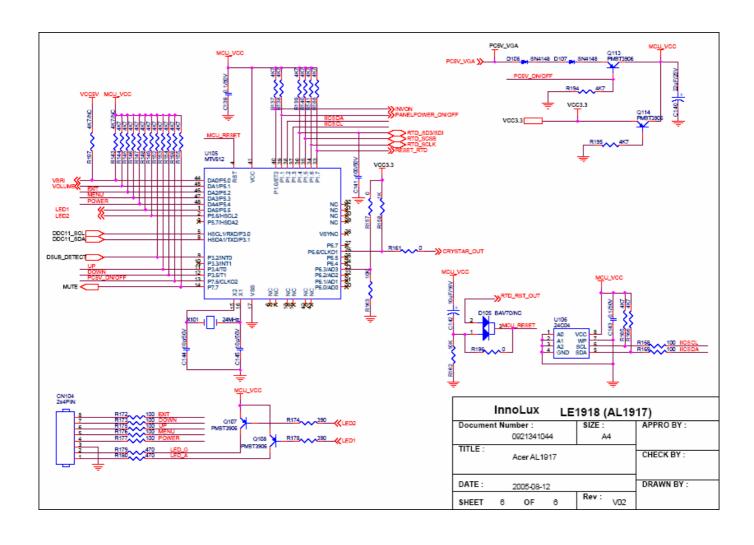

#### POW/INV Board Schematic

