
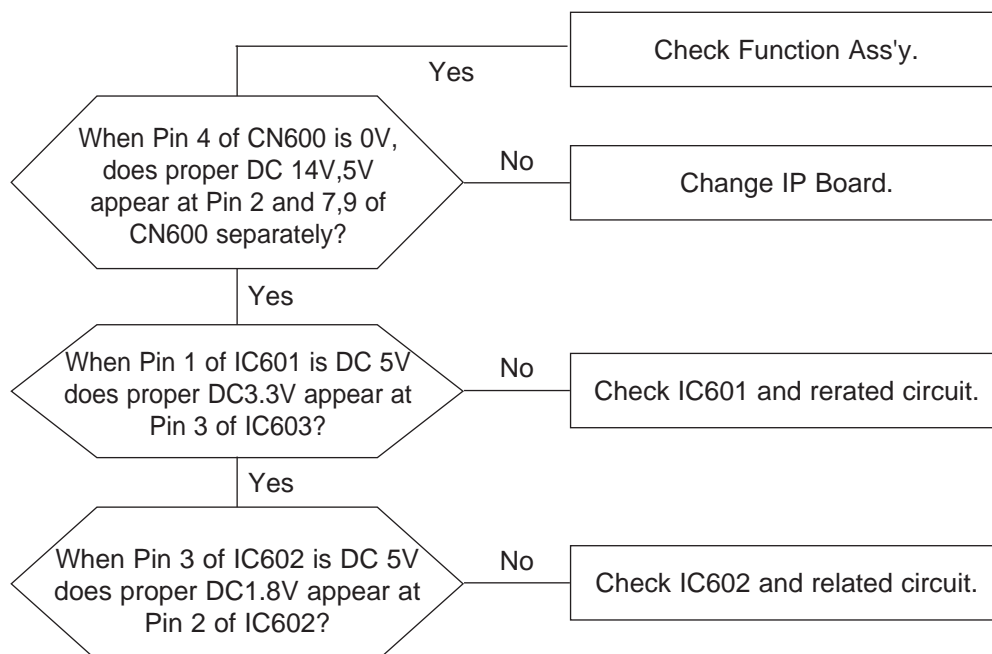



## 4 Troubleshooting

- Notes:
- Before troubleshooting, setup the PC's display as below.
    - Resolution: 1280 x 1024
    - H-frequency: 64 kHz
    - V-frequency: 60 Hz
  - If no picture appears, make sure the power cord is correctly connected.
  - Check the following circuits.
    - No raster appears: Function PBA, Main PBA, I/P PBA
    - 5V develop but no screen: Main PBA
    - 5V does not develop: I/P PBA
  - If you select Brightness adjust menu and push the " (Enter/Source)" button for 5 seconds, the monitor automatically returns to factory reset.





### 4-1 No Power




## 4-2 No Video (ANALOG)

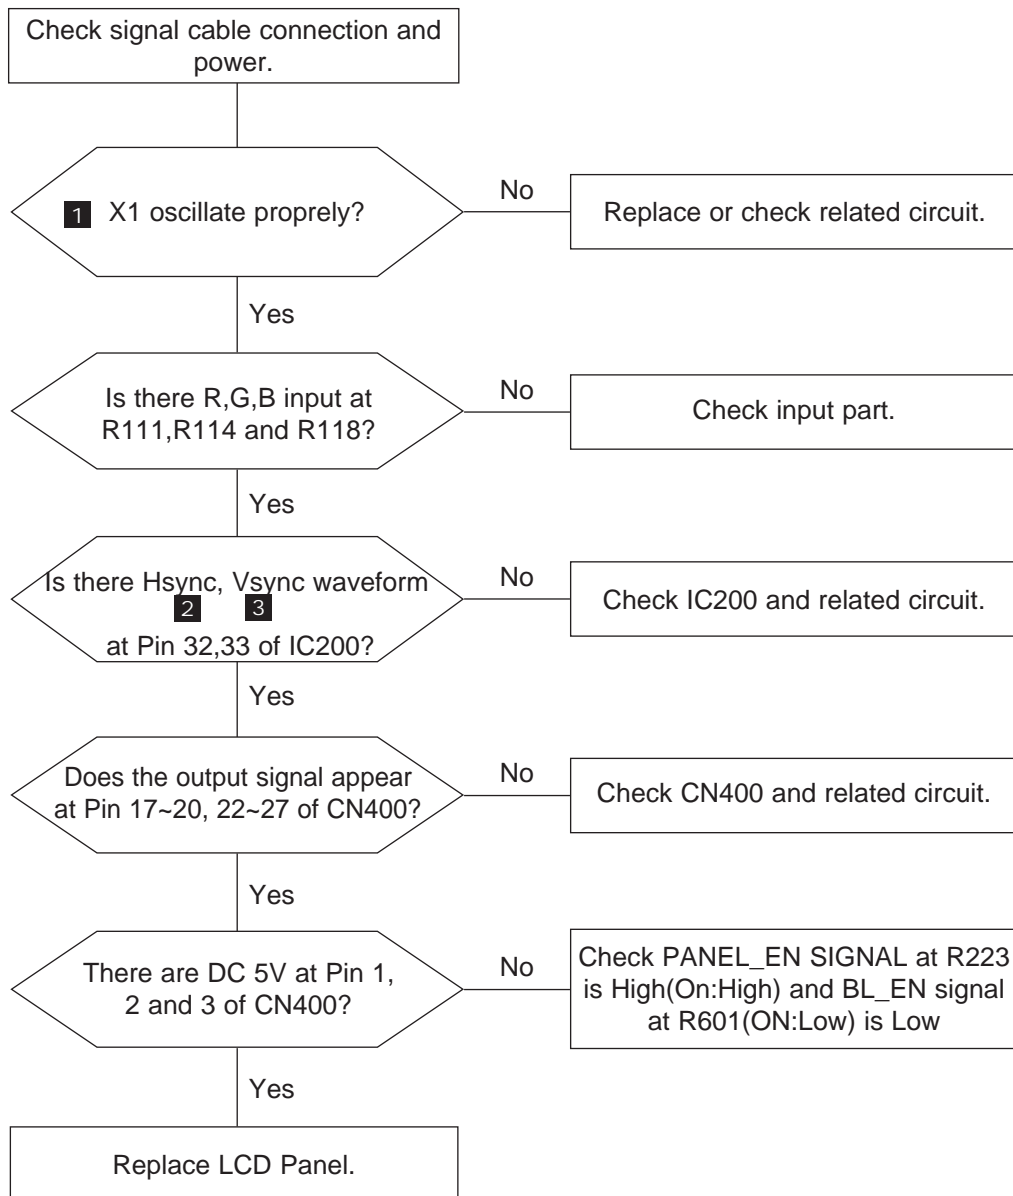






## WAVEFORMS

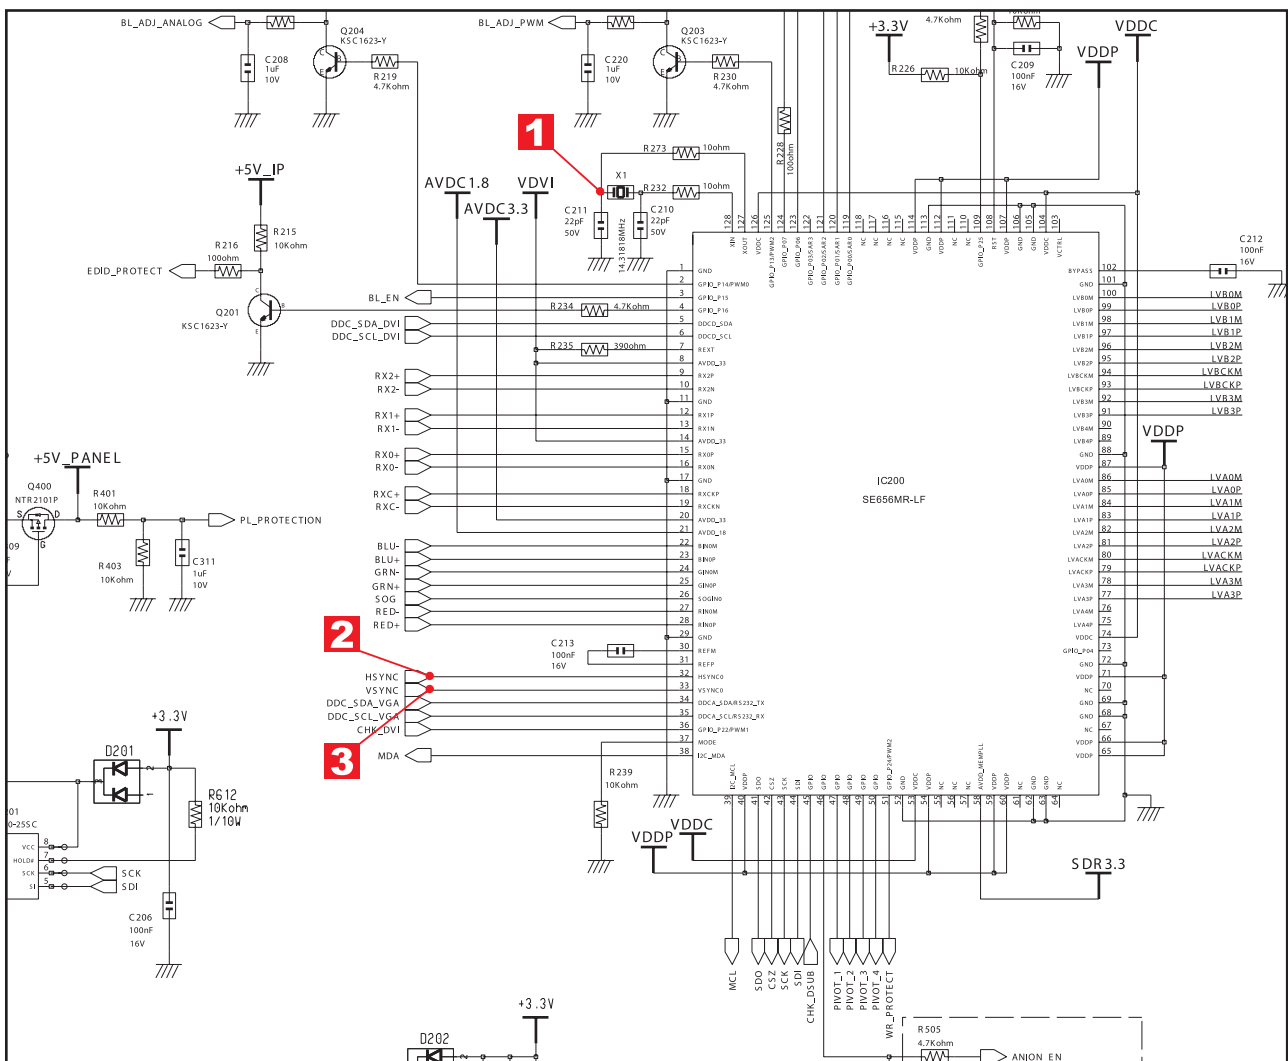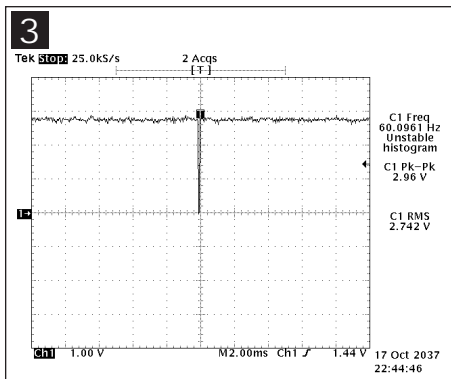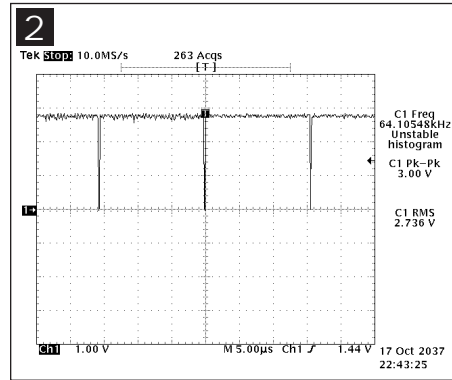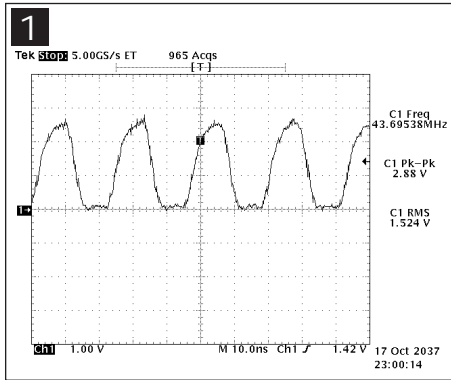

## 4-3 No Video (DIGITAL)

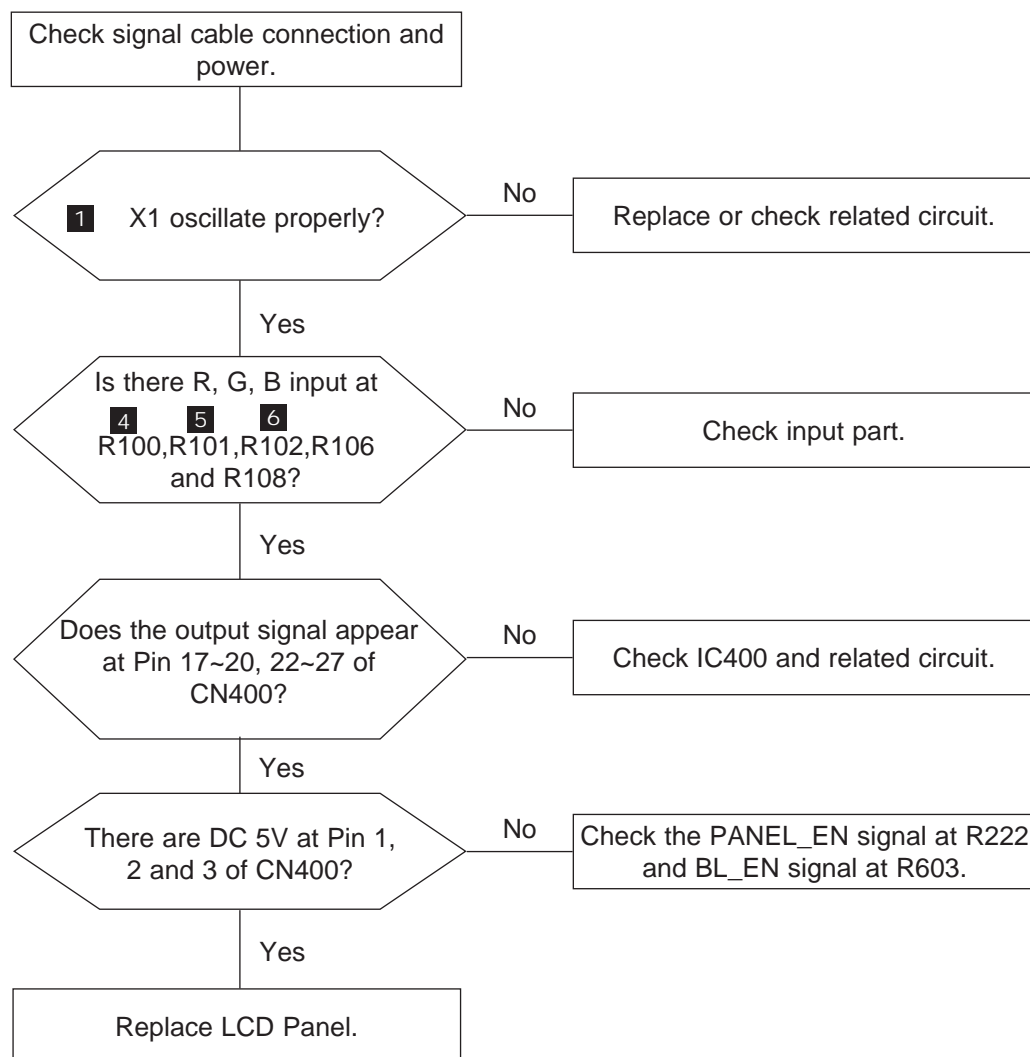

# WAVEFORMS

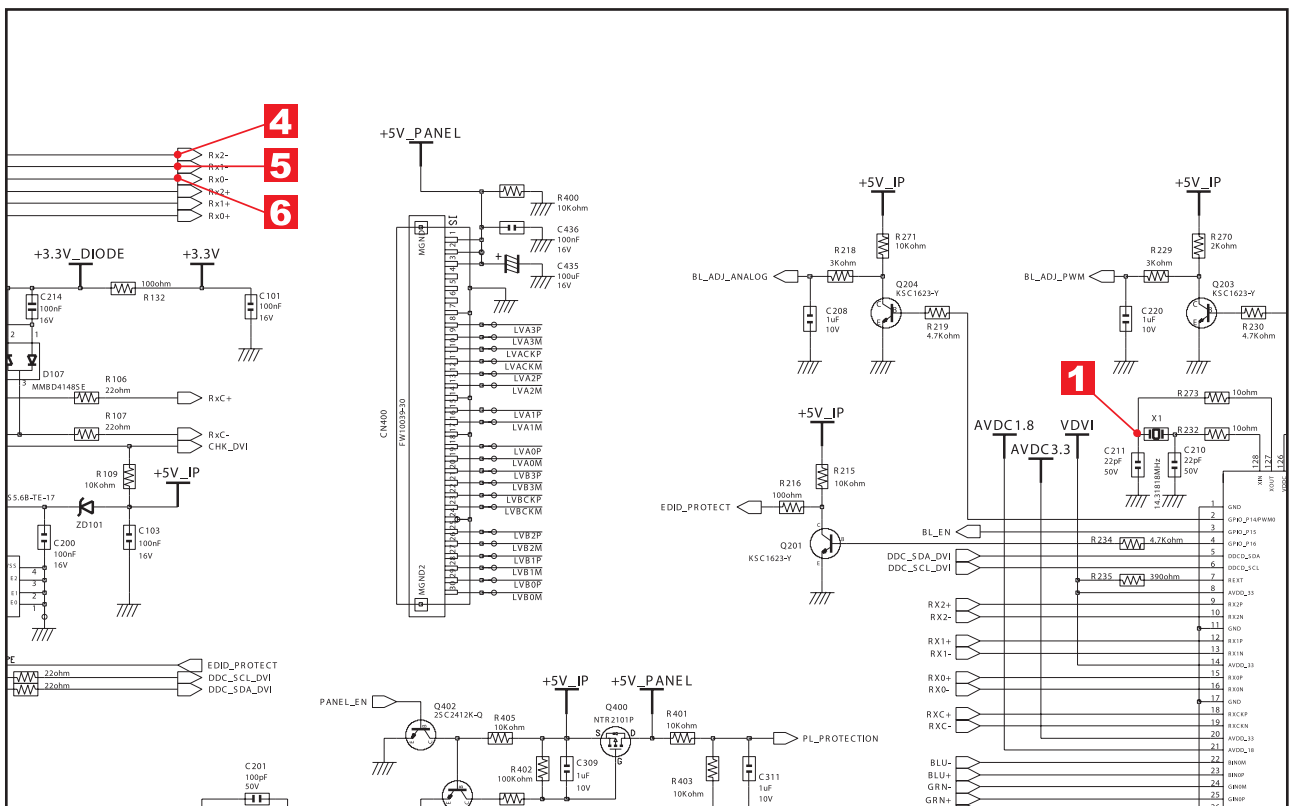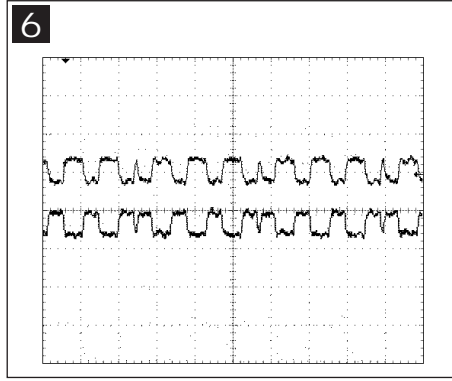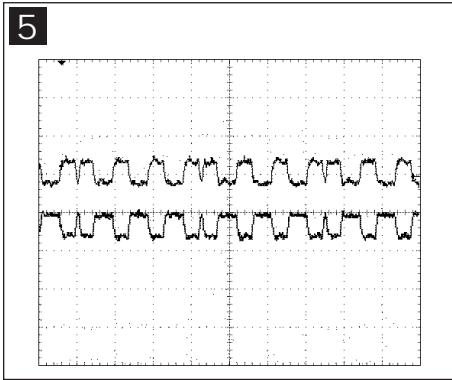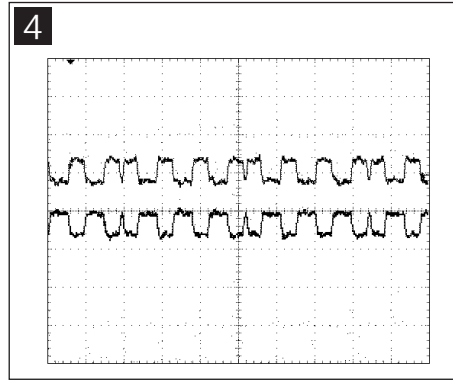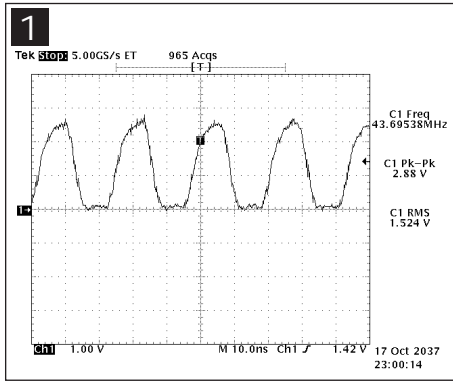

## Memo