

11 Disassembly and Reassembly




This section of the service manual describes the disassembly and reassembly procedures for the LS17DOA, LS19DOA TFT-LCD monitors.





⚠ WARNING: This monitor contains electrostatically sensitive devices. Use caution when handling these components.




11-1 Disassembly

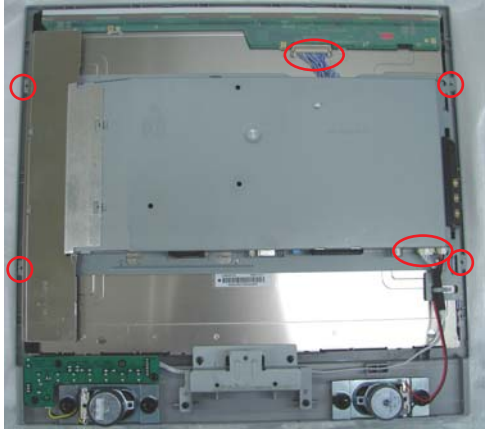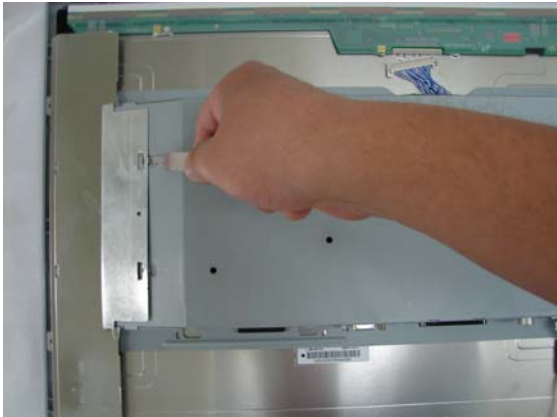

⚠ Cautions:

1. Disconnect the monitor from the power source before disassembly.
2. Follow these directions carefully; never use metal instruments to pry apart the cabinet.

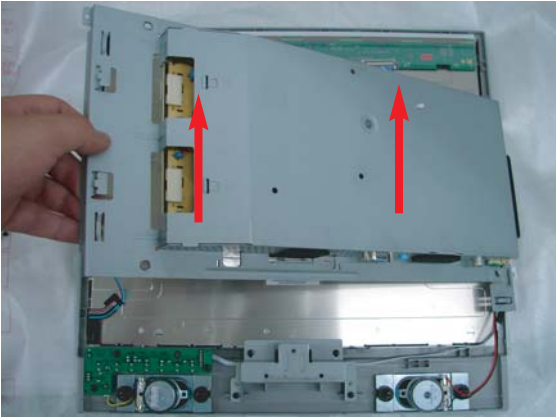Description	Picture Description
<p>1. Place monitor face down on cushioned table. Remove 3 screws from the stand.</p>	
<p>2. Lift up the rear-cover.</p>	 

Description	Picture Description
3. Remove 4 screws from the shield-cover and Disconnect cables.	
4. Use the jig to remove the shield lamp.	 
5. Disconnect cables.	

Description	Picture Description
6. Remove the board.	
7. Remove 4 screws.	
	

Description	Picture Description
<p>8. Lift up the LCD Panel</p>	
	

11-2 Reassembly

-Reassembly procedures are in the reverse order of disassembly procedures.