




# GDM-F500R

## SERVICE MANUAL

*US Model*  
*Canadian Model*  
*AEP Model*  
Chassis No. SCC-L22S-A

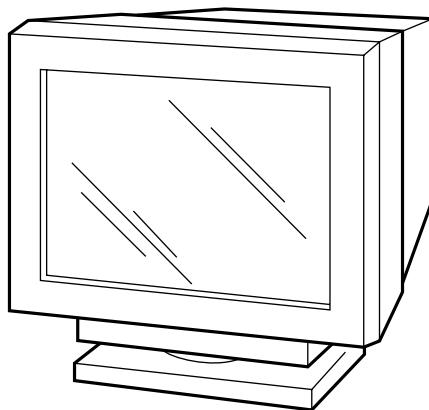

# G1 CHASSIS

### SPECIFICATIONS

CRT	0.22 mm aperture grille pitch 21 inches measured diagonally 90-degree deflection FD Trinitron	Power consumption	Approx. 145 W (with no USB devices connected)
Viewable image size	Approx. 403.8 × 302.2 mm (w/h) (16 × 12 inches) 19.8" viewing image	Operating temperature	10°C to 40°C
Resolution		Dimensions	Approx. 502 × 511 × 480.3 mm (w/h/d) (19 <sup>7</sup> / <sub>8</sub> × 20 <sup>1</sup> / <sub>8</sub> × 19 <sup>1</sup> / <sub>4</sub> inches)
Maximum	Horizontal: 2048 dots Vertical: 1536 lines	Mass	Approx. 33 kg (72 lb 12 oz)
Recommended	Horizontal: 1600 dots Vertical: 1200 lines	Plug and Play	DDC1/DDC2B/DDC2Bi,GTF**
Standard image area	Approx. 388 × 291 mm (w/h) (15 <sup>3</sup> / <sub>8</sub> × 11 <sup>1</sup> / <sub>2</sub> inches) or Approx. 364 × 291 mm (w/h) (14 <sup>3</sup> / <sub>8</sub> × 11 <sup>1</sup> / <sub>2</sub> inches)	Supplied accessories	See page 6
Deflection frequency*	Horizontal: 30 to 121 kHz Vertical: 48 to 160 Hz		
AC input voltage/current	100 to 240 V, 50 – 60 Hz, 2.0 – 1.0 A		

- \* Recommended horizontal and vertical timing condition
- Horizontal sync width duty should be more than 4.8% of total horizontal time or 0.8 μs, whichever is larger.
  - Horizontal blanking width should be more than 2.3 μsec.
  - Vertical blanking width should be more than 450 μsec.
- \*\* If the input signal is Generalized Timing Formula (GTF) compliant, the GTF feature of the monitor will automatically provide an optimal image for the screen.

Design and specifications are subject to change without notice.


## COLOR GRAPHIC DISPLAY

# SONY®

## SAFETY CHECK-OUT

After correcting the original service problem, perform the following safety checks before releasing the set to the customer:

1. Check the area of your repair for unsoldered or poorly-soldered connections. Check the entire board surface for solder splashes and bridges.
2. Check the interboard wiring to ensure that no wires are "pinched" or contact high-wattage resistors.
3. Check that all control knobs, shields, covers, ground straps, and mounting hardware have been replaced. Be absolutely certain that you have replaced all the insulators.
4. Look for unauthorized replacement parts, particularly transistors, that were installed during a previous repair. Point them out to the customer and recommend their replacement.
5. Look for parts which, though functioning, show obvious signs of deterioration. Point them out to the customer and recommend their replacement.
6. Check the line cords for cracks and abrasion. Recommend the replacement of any such line cord to the customer.
7. Check the B+ and HV to see if they are specified values. Make sure your instruments are accurate; be suspicious of your HV meter if sets always have low HV.
8. Check the antenna terminals, metal trim, "metallized" knobs, screws, and all other exposed metal parts for AC Leakage. Check leakage as described below.

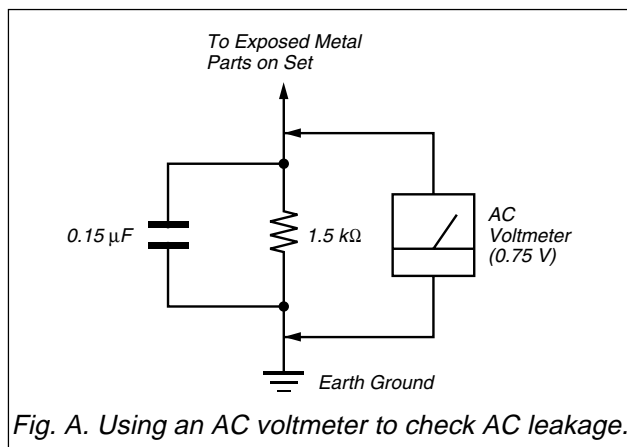

## LEAKAGE TEST

The AC leakage from any exposed metal part to earth ground and from all exposed metal parts to any exposed metal part having a return to chassis, must not exceed 0.5 mA (500 microamperes).

Leakage current can be measured by any one of three methods.

1. A commercial leakage tester, such as the Simpson 229 or RCA WT-540A. Follow the manufacturers' instructions to use these instruments.
2. A battery-operated AC milliammeter. The Data Precision 245 digital multimeter is suitable for this job.
3. Measuring the voltage drop across a resistor by means of a VOM or battery-operated AC voltmeter. The "limit" indication is 0.75 V, so analog meters must have an accurate low-voltage scale. The Simpson 250 and Sanwa SH-63Trd are examples of a passive VOMs that are suitable. Nearly all battery operated digital multimeters that have a 2 V AC range are suitable. (See Fig. A)

**WARNING!!**

**NEVER TURN ON THE POWER IN A CONDITION IN WHICH THE DEGAUSS COIL HAS BEEN REMOVED.**

**SAFETY-RELATED COMPONENT WARNING!!**

**COMPONENTS IDENTIFIED BY SHADING AND MARK  $\triangle$  ON THE SCHEMATIC DIAGRAMS, EXPLODED VIEWS AND IN THE PARTS LIST ARE CRITICAL FOR SAFE OPERATION. REPLACE THESE COMPONENTS WITH SONY PARTS WHOSE PART NUMBERS APPEAR AS SHOWN IN THIS MANUAL OR IN SUPPLEMENTS PUBLISHED BY SONY. CIRCUIT ADJUSTMENTS THAT ARE CRITICAL FOR SAFE OPERATION ARE IDENTIFIED IN THIS MANUAL. FOLLOW THESE PROCEDURES WHENEVER CRITICAL COMPONENTS ARE REPLACED OR IMPROPER OPERATION IS SUSPECTED.**

**AVERTISSEMENT!!**

**NE JAMAIS METTRE SOUS TENSION QUAND LA BOBINE DE DEMAGNETISATION EST ENLEVÉE.**

**ATTENTION AUX COMPOSANTS RELATIFS À LA SÉCURITÉ!!**

**LES COMPOSANTS IDENTIFIÉS PAR UNE TRAME ET UNE MARQUE  $\triangle$  SONT CRITIQUES POUR LA SÉCURITÉ. NE LES REMPLACER QUE PAR UNE PIÈCE PORTANT LE NUMÉRO SPECIFIÉ. LES RÉGLAGES DE CIRCUIT DONT L'IMPORTANCE EST CRITIQUE POUR LA SÉCURITÉ DU FONCTIONNEMENT SONT IDENTIFIÉS DANS LE PRÉSENT MANUEL. SUIVRE CES PROCÉDURES LORS DE CHAQUE REMPLACEMENT DE COMPOSANTS CRITIQUES, OU LORSQU'UN MAUVAIS FONCTIONNEMENT EST SUSPECTÉ.**

## POWER SAVING FUNCTION


This monitor meets the power-saving guidelines set by VESA, ENERGY STAR, and NUTEK. If the monitor is connected to a computer or video graphics board that is DPMS (Display Power Management Signaling) compliant, the monitor will automatically reduce power consumption in three stages as shown below.

Power mode	Power consumption*	⏻ (power) indicator
normal operation	≤ 145 W	green
1 standby	≤ 15 W	green and orange alternate
2 suspend (sleep)**	≤ 15 W	green and orange alternate
3 active off*** (deep sleep)**	≤ 1 W	orange
power off	0 W	off

- \* Figures reflect power consumption when no USB compatible peripherals are connected to the monitor.
- \*\* “Sleep” and “deep sleep” are power saving modes defined by the Environmental Protection Agency.
- \*\*\* When your computer enters in a power saving mode, the input signal is cut and NO INPUT SIGNAL appears on the screen. After a few seconds, the monitor enters power saving mode.

## DIAGNOSIS

This monitor is equipped with a self-diagnosis function. If there is a problem with your monitor or computer(s), the screen will go blank and the ⏻ (power) indicator will either light up green or flash orange. If the ⏻ (power) indicator is lit in orange, the computer is in power saving mode. Try pressing any key on the keyboard.

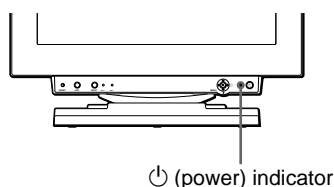

If all four color bars appear (white, red, green, blue), the monitor is working properly. Reconnect the video input cables and check the condition of your computer(s).

If the color bars do not appear, there is a potential monitor failure. Inform your authorized Sony dealer of the monitor's condition.

### If the ⏻ (power) indicator is flashing orange


**Press the ⏻ (power) button twice to turn the monitor off and then on.**

If the ⏻ (power) indicator lights up green, the monitor is working properly.

If the ⏻ (power) indicator is still flashing, there is a potential monitor failure. Count the number of seconds between orange flashes of the ⏻ (power) indicator and inform your authorized Sony dealer of the monitor's condition. Be sure to note the model name and serial number of your monitor. Also note the make and model of your computer and video board.

### If the ⏻ (power) indicator is green

- 1 Remove any plugs from the video input 1 and 2 connectors, or turn off the connected computer(s).**
- 2 Press the ⏻ (power) button twice to turn the monitor off and then on.**
- 3 Move the joystick to the right ➡ for 2 seconds before the monitor enters power saving mode.**

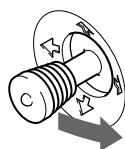

## TIMING SPECIFICATION

MODE AT PRODUCTION	MODE 1	MODE 2	MODE 3	MODE 4	MODE 5
RESOLUTION	640 X 480	1600 X 1200	1920 X 1440	1800 X 1440	1800 X 1350
CLOCK	25.175 MHz	229.500 MHz	297.000 MHz	299.436 MHz	300.000 MHz
— HORIZONTAL —					
H-FREQ	31.469 kHz	106.250 kHz	112.500 kHz	120.740 kHz	120.968 kHz
	usec	usec	usec	usec	usec
H. TOTAL	31.778	9.412	8.889	8.282	8.267
H. BLK	6.356	2.440	2.424	2.271	2.267
H. FP	0.636	0.279	0.485	0.668	0.480
H. SYNC	3.813	0.837	0.754	0.481	0.667
H. BP	1.907	1.325	1.185	1.122	1.120
H. ACTIV	25.422	6.972	6.465	6.011	6.000
— VERTICAL —					
V. FREQ(HZ)	59.940 Hz	85.000 Hz	75.000 Hz	80.120 Hz	85.009 Hz
lines	lines	lines	lines	lines	lines
V. TOTAL	525	1250	1500	1507	1423
V. BLK	45	50	60	67	73
V. FP	10	1	1	1	1
V. SYNC	2	3	3	3	3
V. BP	33	46	56	63	69
V. ACTIV	480	1200	1440	1440	1350
— SYNC —					
INT(G)	NO	NO	NO	NO	NO
EXT(H/V)/POLARITY	YES N/N	YES P/P	YES P/P	YES P/P	YES P/P
EXT(CS) /POLARITY	NO	NO	NO	NO	NO
INT/NON INT	NON INT	NON INT	NON INT	NON INT	NON INT

99.11.09 VER.

## TABLE OF CONTENTS

<i>Section</i>	<i>Title</i>	<i>Page</i>
<b>1. GENERAL</b>		1-1
<b>2. DISASSEMBLY</b>		
2-1.	Cabinet Removal	2-1
2-2.	D Board Removal	2-1
2-3.	G Board Removal	2-2
2-4.	A Board, I/O Terminal Board Assembly Removal	2-2
2-5.	N Board Removal	2-3
2-6.	Service Position	2-3
2-7.	H5 and H6 Boards Removal	2-4
2-8.	Picture Tube Removal	2-4
2-9.	J Board Removal	2-5
2-10.	US Board Removal	2-6
2-11.	Harness Location	2-7
<b>3. SAFETY RELATED ADJUSTMENT</b>		3-1
<b>4. ADJUSTMENTS</b>		4-1
<b>5. DIAGRAMS</b>		
5-1.	Block Diagrams	5-1
5-2.	Frame Schematic Diagram	5-7
5-3.	Circuit Boards Location	5-9
5-4.	Schematic Diagrams and Printed Wiring Boards	5-9
(1)	Schematic Diagram of A Board	5-11
(2)	Schematic Diagrams of H5, H6, J Boards	5-17
(3)	Schematic Diagram of D Board	5-19
(4)	Schematic Diagrams of N (a), (b), (c) Board	5-23
(5)	Schematic Diagram of G Board	5-31
(6)	Schematic Diagram of US Board	5-35
5-5.	Semiconductors	5-38
<b>6. EXPLODED VIEWS</b>		
6-1.	Chassis	6-1
6-2.	Picture Tube	6-2
6-3.	Packing Materials	6-3
<b>7. ELECTRICAL PARTS LIST</b>		7-1

Note: Hand degauss must be used on stand-by or power-off condition.

This model has an automatic earth magnetism correction function by using an earth magnetism sensor and a LCC coil. When using a hand degauss while monitor (LCC coil) is being operated, it sometimes gets magnetized, and the system may not work properly as a result.

The operating instructions mentioned here are partial abstracts from the Operating Instruction Manual. The page numbers of the Operating Instruction Manual remain as in the manual.


## SECTION 1 GENERAL

### Precautions


#### Warning on power connections

- Use the supplied power cord. If you use a different power cord, be sure that it is compatible with your local power supply.
- For the customers in the U.S.A.**  
If you do not use the appropriate cord, this monitor will not conform to mandatory FCC standards.

Example of plug types



for 100 to 120 V AC



for 200 to 240 V AC

- Before disconnecting the power cord, wait at least 30 seconds after turning off the power to allow the static electricity on the screen's surface to discharge.
- After the power is turned on, the screen is demagnetized (degaussed) for about 3 seconds. This generates a strong magnetic field around the screen which may affect data stored on magnetic tapes and disks placed near the monitor. Be sure to keep magnetic recording equipment, tapes, and disks away from the monitor.

The equipment should be installed near an easily accessible outlet.

#### Installation

- Do not install the monitor in the following places:
- on surfaces (rugs, blankets, etc.) or near materials (curtains, draperies, etc.) that may block the ventilation holes
  - near heat sources such as radiators or air ducts, or in a place subject to direct sunlight
  - in a place subject to severe temperature changes
  - in a place subject to mechanical vibration or shock
  - on an unstable surface
  - near equipment which generates magnetism, such as a transformer or high voltage power lines
  - near or on an electrically charged metal surface

#### Maintenance


- Clean the screen with a soft cloth. If you use a glass cleaning liquid, do not use any type of cleaner containing an anti-static solution or similar additive as this may scratch the screen's coating.
- Do not rub, touch, or tap the surface of the screen with sharp or abrasive items such as a ballpoint pen or screwdriver. This type of contact may result in a scratched picture tube.
- Clean the cabinet, panel and controls with a soft cloth lightly moistened with a mild detergent solution. Do not use any type of abrasive pad, scouring powder or solvent, such as alcohol or benzene.

#### Transportation

When you transport this monitor for repair or shipment, use the original carton and packing materials.

#### Use of the tilt-swivel


This monitor can be adjusted within the angles shown below. To turn the monitor vertically or horizontally, hold it at the bottom with both hands.

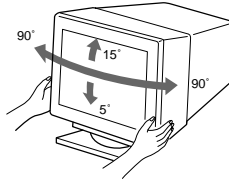

### Identifying parts and controls


See the pages in parentheses for further details.

#### Front

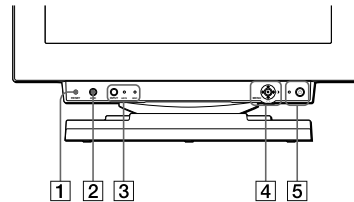


- RESET (reset) button (page 16)**  
This button resets the adjustments to the factory settings.
- ASC (auto sizing and centering) button (page 9)**  
This button automatically adjusts the size and centering of the picture.
- INPUT button and HD15 / BNC indicators (page 9)**  
This button selects the HD15 or BNC video input signal. Each time you press this button, the input signal and corresponding indicator alternate.
- Joystick (page 10)**  
The joystick is used to display the menu and make adjustments to the monitor, including brightness and contrast adjustments.
- ⏻ (power) switch and indicator (pages 7, 16, 20)**  
This button turns the monitor on and off. The power indicator lights up in green when the monitor is turned on, and either flashes in green and orange, or lights up in orange when the monitor is in power saving mode.
- AC IN connector (page 7)**  
This connector provides AC power to the monitor.
- USB (universal serial bus) upstream connector (page 8)**  
Use this connector to link the monitor to a USB compliant computer.
- USB (universal serial bus) downstream connectors (page 8)**  
Use these connectors to link USB peripheral devices to the monitor.

#### Rear

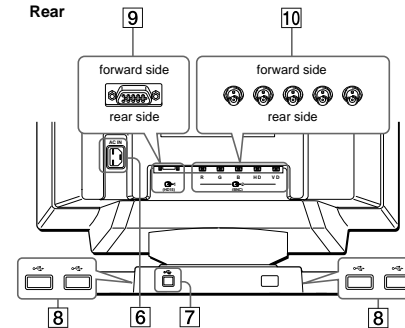

- Video input 1 connector (HD15) (page 6)**  
This connector inputs RGB video signals (0.700 Vp-p, positive) and sync signals.



Pin No.	Signal
1	Red
2	Green (Composite Sync on Green)
3	Blue
4	ID (Ground)
5	DDC Ground*
6	Red Ground
7	Green Ground
8	Blue Ground
9	DDC + 5V*
10	Ground
11	ID (Ground)
12	Bi-Directional Data (SDA)*
13	H. Sync
14	V. Sync
15	Data Clock (SCL)*

\* DDC (Display Data Channel) is a standard of VESA.

- Video input 2 connector (BNC) (page 6)**  
This connector inputs RGB video signals (0.700 Vp-p, positive) and sync signals.

US

## Setup

Before using your monitor, check that the following accessories are included in your carton:

- Power cord (1)
- HD15 video signal cable (1)
- USB cable (1)
- Current G3 adapter (for beige system) (1)
- Setup Disk (1)
- Warranty card (1)
- Notes on cleaning the screen's surface (1)
- This instruction manual (1)


### Step 1: Connect your monitor to your computer

Turn off the monitor and computer before connecting.

#### Notes


- Do not touch the pins of the video signal cable connector as this might bend the pins.
- When connecting the video signal cable, check the alignment of the HD15 connector. Do not force the connector in the wrong way or the pins might bend.

#### ■ Connecting to an IBM PC/AT or compatible computer

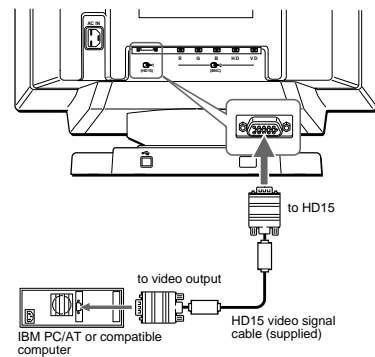


IBM PC/AT or compatible computer

#### ■ Connecting to a Macintosh or compatible computer

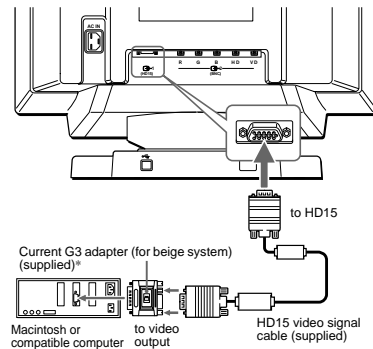

- \* Connect the supplied Macintosh adapter to the computer before connecting the cable. This adapter is compatible with Macintosh LC, Performa, Quadra, Power Macintosh, and Power Macintosh G3 series computers that have two rows of pins. If you are connecting to the other version of Power Macintosh G3 series with three rows of pins or models other than those stated above, you will need a different adapter (not supplied).

#### ■ Connecting to the five BNC connectors

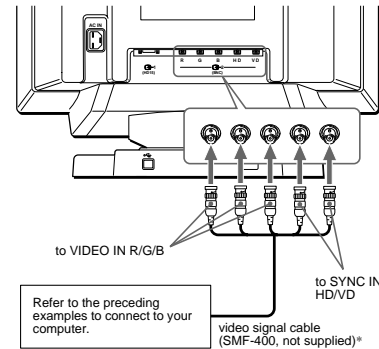


- \* Connect the cables from left to right in the following order: Red-Green-Blue-HD-VD.

#### Note

Plug & Play (DDC) does not apply to the five BNC connectors. If you want to use Plug & Play, connect your computer to the HD15 connector using the supplied video signal cable.

### Step 2: Connect the power cord

With the monitor and computer switched off, first connect the power cord to the monitor, then connect it to a power outlet.

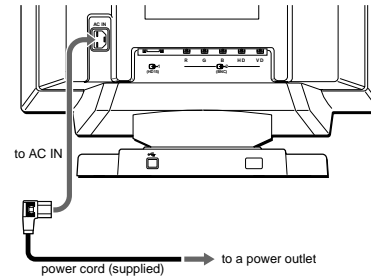

### Step 3: Turn on the monitor and computer

First turn on the monitor, then turn on the computer.



The installation of your monitor is complete. If necessary, use the monitor's controls to adjust the picture.

#### If no picture appears on your screen

- Check that the monitor is correctly connected to the computer.
- If NO INPUT SIGNAL appears on the screen, try changing the input signal (page 9), and confirm that your computer's graphic board is completely seated in the correct bus slot.
- If you are replacing an old monitor with this model and OUT OF SCAN RANGE appears on the screen, reconnect the old monitor. Then adjust the computer's graphic board so that the horizontal frequency is between 30 – 121 kHz, and the vertical frequency is between 48 – 160 Hz.

For more information about the on-screen messages, see "Trouble symptoms and remedies" on page 18.

#### Setup on various OS (Operating System)

This monitor complies with the "DDC" Plug & Play standard and automatically detects all the monitor's information with the Windows Plug & Play function. No specific driver needs to be installed to the computer.

If you connect the monitor to your PC, and then boot your PC for the first time, the setup Wizard may be displayed on the screen. Click on "Next" several times according to the instructions from the Wizard until the Plug & Play Monitor is automatically selected so that you can use this monitor. If your PC/graphics board has difficulty communicating with this monitor, load the supplied Setup Disk. Refer to the "Read Me" file on the Disk about the procedure to install. You can also download the information by accessing the web site of the graphics board's manufacturer.

#### For customers using Windows NT4.0


Monitor setup in Windows NT4.0 does not use the display driver. Refer to the Windows NT4.0 instruction manual for further details on adjusting the resolution, refresh rate, and number of colors.

US



## Connecting Universal Serial Bus (USB) compliant peripherals

Your monitor has one upstream and four downstream USB connectors. They provide a fast and easy way to connect USB compliant peripheral devices (such as keyboards, mice, printers and scanners) to your computer using a standardized USB cable. To use your monitor as a hub for your peripheral devices, connect the USBs as illustrated below.

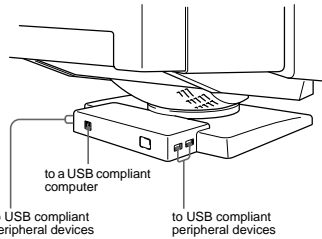

- 1 Turn on the monitor and computer.
- 2 Connect your computer to the square upstream USB connector using the supplied USB cable.

### For customers using Windows

If a message appears on your screen, follow the on-screen instructions and select Generic USB Hub as the default setting.

- 3 Connect your USB compliant peripheral devices to the rectangular downstream USB connectors.


### Notes

- Not all computers and /or operating systems support USB configurations. Check your computer's instruction manual to see if you can connect USB devices.
- In most cases, USB driver software needs to be installed on the host computer. Refer to the peripheral device's instruction manual for further details.
- The monitor functions as a USB hub as long as the monitor is either "on" or in power saving mode.
- If you connect a keyboard or mouse to the USB connectors and then boot your computer for the first time, the peripheral devices may not function. First connect the keyboard and mouse directly to the computer and set up the USB compliant devices. Then connect them to this monitor.
- Do not lean on the monitor when plugging in the USB cables. The monitor may suddenly shift and cause injury.


## Selecting the on-screen menu language (LANG)

English, French, German, Spanish, Italian, Dutch, Swedish, Russian and Japanese versions of the on-screen menus are available. The default setting is English.

- 1 Press the joystick. See page 10 for more information on using the joystick.

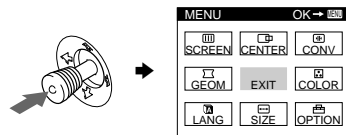

- 2 Move the joystick to highlight LANG and press the joystick again.

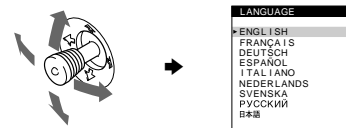

- 3 Move the joystick up or down to select a language and press the joystick again.

- ENGLISH
- FRANÇAIS: French
- DEUTSCH: German
- ESPAÑOL: Spanish
- ITALIANO: Italian
- NEDERLANDS: Dutch
- SVENSKA: Swedish
- РУССКИЙ: Russian
- 日本語: Japanese

### To close the menu

Press the joystick once to return to the main menu, and twice to return to normal viewing. If no buttons are pressed, the menu closes automatically after about 30 seconds.

### To reset to English

Press the RESET button while the LANGUAGE menu is displayed on the screen.

## Selecting the input signal

You can connect two computers to this monitor using the HD15 and BNC connectors. To switch between the two computers, use the INPUT button.

### Press the INPUT button.

Each time you press this button, the input signal and corresponding indicator alternate. When the button is pressed, BNC is selected, when the button is unpressed, HD15 is selected.



The selected connector appears on the screen for a few seconds. "HD15" or "BNC" appears on the screen.

### Note


If no signal is input to the selected connector, NO INPUT SIGNAL appears on the screen. After a few seconds, the monitor enters the power saving mode. If this happens, switch to the other connector.

## Automatically sizing and centering the picture

You can easily adjust the picture to fill the screen by pressing the ASC (auto sizing and centering) button.

### Press the ASC button.

The picture automatically fills the screen.



### Notes


- This function is intended for use with a computer running Windows or similar graphic user interface software that provides a full-screen picture. It may not work properly if the background color is dark or if the input picture does not fill the screen to the edges (such as an MS-DOS prompt).
- Pictures with an aspect ratio of 5:4 (resolution: 1280 x 1024, 1800 x 1440) are displayed at their actual resolution and do not fill the screen to the edges.
- The screen may go blank for a few seconds when the ASC button is pressed. This is not a malfunction.

## Customizing Your Monitor

You can make numerous adjustments to your monitor using the on-screen menu.

### Navigating the menu


Press the joystick to display the main MENU on your screen. See page 10 for more information on using the joystick.

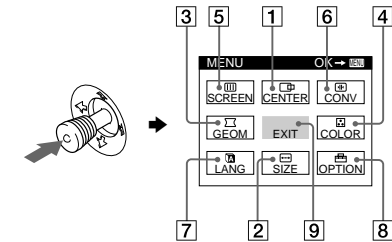

Use the joystick to select one of the following menus.


- 1 CENTER (page 11)

Selects the CENTER menu to adjust the picture's centering, size or zoom.




- 2 SIZE (page 11)

Selects the SIZE menu to adjust the picture's size, centering or zoom.




- 3 GEOM (page 12)

Select the GEOM menu to adjust the picture's rotation and shape.




- 4 COLOR (page 13)

Select the COLOR menu to adjust the picture's color temperature. You can use this to match the monitor's colors to a printed picture's colors.

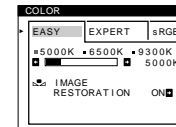

- 5 SCREEN (page 13)

Select the SCREEN menu to adjust the picture's quality. You can adjust the landing and moire cancellation effect.




US

(continued)

**6 CONV (page 12)**

Select the CONV menu to adjust the picture's horizontal and vertical convergence.



**7 LANG (page 8)**


Select the LANG menu to choose the on-screen menu's language.



**8 OPTION (page 15)**

Select the OPTION menu to adjust the monitor's options. The options include:

- degaussing the screen
- changing the on-screen menu position
- locking the controls




**9 EXIT**

Select EXIT to close the menu.

**■ Displaying the current input signal**

The horizontal and vertical frequencies of the current input signal are displayed in the main MENU. If the signal matches one of this monitor's factory preset modes, the resolution is also displayed.

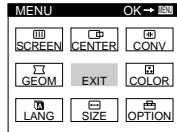


the resolution of the current input signal  
68.7kHz / 85Hz  
(1024x768)

the horizontal and vertical frequencies of the current input signal

**■ Using the joystick**


**1 Display the main MENU and select the menu you want to adjust.**

Press the joystick once to display the main MENU. Then move the joystick up, down, left, or right to highlight the desired menu. Press the joystick to select the menu item.




**2 Adjust the menu.**

Move the joystick up, down, left, or right to make the adjustment.



**3 Close the menu.**

Press the joystick once to return to the main menu, and twice to return to normal viewing. If no buttons are pressed, the menu closes automatically after about 30 seconds.



**■ Resetting the adjustments**

Press the RESET button. See page 16 for more information on resetting the adjustments.



**Adjusting the brightness and contrast**

Brightness and contrast adjustments are made using a separate BRIGHTNESS/CONTRAST menu. These settings are stored in memory for the signals from the currently selected input connector.

**1 Move the joystick in any direction.**


The BRIGHTNESS/CONTRAST menu appears on the screen.



**2 Move the joystick up or down to adjust the brightness (☼), and left or right to adjust the contrast (◐).**

**If you are using the sRGB mode**

If you selected the sRGB mode in the COLOR menu, the following BRIGHTNESS/CONTRAST menu appears on the screen.



For more information about using the sRGB mode, see "Adjusting the color of the picture (COLOR)" on page 13.

The menu automatically disappears after about 3 seconds.

**Adjusting the size of the picture (SIZE)**

This setting is stored in memory for the current input signal.

**1 Press the joystick.**

The main MENU appears on the screen.

**2 Move the joystick to highlight SIZE and press the joystick again.**

The SIZE/CENTER menu appears on the screen.

**3 First move the joystick up or down to select SIZE for horizontal adjustment, or SIZE for vertical adjustment. Then move the joystick left or right to adjust the size.**

**Adjusting the centering of the picture (CENTER)**

This setting is stored in memory for the current input signal.

**1 Press the joystick.**

The main MENU appears on the screen.

**2 Move the joystick to highlight CENTER and press the joystick again.**

The SIZE/CENTER menu appears on the screen.

**3 First move the joystick up or down to select SIZE for horizontal adjustment, or CENTER for vertical adjustment. Then move the joystick left or right to adjust the centering.**

**Enlarging or reducing the picture (ZOOM)**

This setting is stored in memory for the current input signal.

**1 Press the joystick.**

The main MENU appears on the screen.

**2 Move the joystick to highlight SIZE or CENTER and press the joystick again.**

The SIZE/CENTER menu appears on the screen.

**3 Move the joystick up or down to select ZOOM, and move the joystick left or right to enlarge or reduce the picture.**


**Note**


Adjustment stops when either the horizontal or vertical size reaches its maximum or minimum value.






US

## Adjusting the shape of the picture (GEOM)

The GEOM settings allow you to adjust the rotation and shape of the picture.

The  (rotation) setting is stored in memory for all input signals. All other settings are stored in memory for the current input signal.

- 1 Press the joystick.**  
The main MENU appears on the screen.
- 2 Move the joystick to highlight  GEOM and press the joystick again.**  
The GEOMETRY menu appears on the screen.
- 3 First move the joystick up or down to select the desired adjustment item. Then move the joystick left or right to make the adjustment.**


Select	To
	rotate the picture
	expand or contract the picture sides
	shift the picture sides to the left or right
	adjust the picture width at the top of the screen
	shift the picture to the left or right at the top of the screen





## Adjusting the convergence (CONV)

The CONV settings allow you to adjust the quality of the picture by controlling the convergence. The convergence refers to the alignment of the red, green, and blue color signals.

If you see red or blue shadows around letters or lines, adjust the convergence.

These settings are stored in memory for all input signals.

- 1 Press the joystick.**  
The main MENU appears on the screen.
- 2 Move the joystick to highlight  CONV and press the joystick again.**  
The CONVERGENCE menu appears on the screen.
- 3 First move the joystick up or down to select the desired adjustment item. Then move the joystick left or right to make the adjustment.**


Select	To
	horizontally shift red or blue shadows
	vertically shift red or blue shadows
 TOP	vertically shift red or blue shadows at the top of the screen
 BOT	vertically shift red or blue shadows at the bottom of the screen








## Adjusting the quality of the picture (SCREEN)

The SCREEN settings allow you to adjust the quality of the picture by controlling the moire and landing.

- If the color is irregular at the corners of the screen, adjust the landing.
- If elliptical or wavy patterns appear on the screen, cancel the moire.

The CANCEL MOIRE and MOIRE ADJUST settings are stored in memory for the current input signal. All other settings are stored in memory for all input signals.

- 1 Press the joystick.**  
The main MENU appears on the screen.
- 2 Move the joystick to highlight  SCREEN and press the joystick again.**  
The SCREEN menu appears on the screen.
- 3 First move the joystick up or down to select the desired adjustment item. Then move the joystick left or right to make the adjustment.**

Select	To
	reduce any color irregularities in the screen's top left corner to a minimum.
	reduce any color irregularities in the screen's top right corner to a minimum.
	reduce any color irregularities in the screen's bottom left corner to a minimum.
	reduce any color irregularities in the screen's bottom right corner to a minimum.
 CANCEL MOIRE*	turn the moire cancellation function ON or OFF.  (MOIRE ADJUST) appears in the menu when you select ON.
 MOIRE ADJUST	adjust the degree of moire cancellation until the moire is at a minimum.

\* Moire is a type of natural interference which produces soft, wavy lines on your screen. It may appear due to interference between the pattern of the picture on the screen and the phosphor pitch pattern of the monitor.

Example of moire




### Note


The picture may become fuzzy when CANCEL MOIRE is set to ON.







## Adjusting the color of the picture (COLOR)

The COLOR settings allow you to adjust the picture's color temperature by changing the color level of the white color field. Colors appear reddish if the temperature is low, and bluish if the temperature is high. This adjustment is useful for matching the monitor's color to a printed picture's colors.

- 1 Press the joystick.**  
The main MENU appears on the screen.
- 2 Move the joystick to highlight  COLOR and press the joystick again.**  
The COLOR menu appears on the screen.
- 3 Move the joystick left or right to select the adjustment mode.**  
There are three types of adjustment modes, EASY, EXPERT and sRGB.
- 4 First move the joystick up or down to select the desired adjustment item. Then move the joystick left or right to make the adjustment.**  
Adjust the selected mode according to the following instructions.

### EASY mode

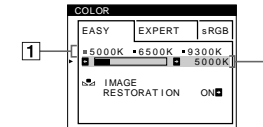


- 1 Move the joystick up or down to select the color temperature row . Then move the joystick left or right to select a color temperature.**  
The preset color temperatures are 5000K, 6500K, and 9300K. Since the default setting is 9300K, the whites will change from a bluish hue to a reddish hue as the temperature is lowered to 6500K and 5000K.
- 2 If necessary, fine tune the color temperature. Move the joystick up or down to select the color temperature row . Then move the joystick left or right to fine tune the color temperature.**  
If you fine tune the color temperature, the new color settings are stored in memory for each of the three color temperatures and item  of the on-screen menu changes as follows.
  - [5000K] →  [1]
  - [6500K] →  [2]
  - [9300K] →  [3]

US

## EXPERT mode

You can make additional adjustments to the color in greater detail by selecting the EXPERT mode.

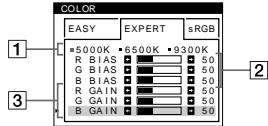

- 1 Move the joystick up or down to select the color temperature row [1]. Then move the joystick left or right to select a color temperature.
- 2 Move the joystick up or down to select the adjustment item [2]. Then move joystick left or right to adjust the BIAS (black level). This adjusts the dark areas of an image.
- 3 Move the joystick up or down to select the adjustment item [3]. Then move the joystick left or right to adjust the GAIN (white level). This adjusts the light areas of an image.

You can adjust the R (red), G (green), B (blue) component of the input signal when making changes to items [2] and [3].

If you fine tune the color temperature, the new color settings are stored in memory for each of the three color temperatures and item [1] of the on-screen menu change as follows.

- [5000K] → [1] 1
- [6500K] → [1] 2
- [9300K] → [1] 3

## Setting the color temperature for each of the video input connectors

You can set the fine tuning of the color temperature in EASY or EXPERT mode for each of the video input connectors (HD15 and BNC).

- 1 Select the same adjustment mode and color temperature in the COLOR menu for both HD15 and BNC.
- 2 Fine tune the color temperature in each menu for HD15 and BNC. The settings are stored in memory for each of the HD15 and BNC connectors.

For information on how to select the connector, see page 9.

## sRGB mode

The sRGB color setting is an industry standard color space protocol designed to correlate the displayed and printed colors of sRGB compliant computer products. To adjust the colors to the sRGB profile, simply select the sRGB mode in the COLOR menu. However, in order to display the sRGB colors correctly ( $\gamma=2.2$ , 6500K), you must set your computer to the sRGB profile and adjust the brightness (☉) and contrast (●) to the numbers shown in the menu. For information on how to change the brightness (☉) and contrast (●), see page 11.

### Note

Your computer and other connected products (such as a printer), must be sRGB compliant.



## Restoring the color from the EASY or sRGB menus

The colors of most display monitors tend to gradually lose brilliance over several years of service. The IMAGE RESTORATION feature found in the EASY and sRGB menus allows you to restore the color to the original factory quality levels. The explanation below explains how to restore the monitor's color from the EASY menu.

- 1 Move the joystick left or right to select EASY or sRGB mode.
- 2 First move the joystick up or down to select IMAGE RESTORATION. Then move the joystick to the right. The picture disappears while the color is being restored (about 2 seconds). After the color is restored, the picture reappears on the screen again.

### Notes

- Before using this feature, the monitor must be in normal operation mode (green power indicator on) for at least 30 minutes. If the monitor goes into power saving mode, you must return the monitor to normal operation mode and wait for 30 minutes for the monitor to be ready. You may need to adjust your computer's power saving settings to keep the monitor in normal operation mode for the full 30 minutes. If the monitor is not ready, the following message will appear.



- The monitor may gradually lose its ability to perform this function due to the natural aging of the picture tube.

## Additional settings (OPTION)

You can manually degauss (demagnetize) the monitor, change the menu position, and lock the controls.

- 1 Press the joystick. The main MENU appears on the screen.
- 2 Move the joystick to highlight OPTION and press the joystick again. The OPTION menu appears on the screen.
- 3 Move the joystick up or down to select the desired adjustment item. Adjust the selected item according to the following instructions.

### Degaussing the screen

The monitor is automatically demagnetized (degaussed) when the power is turned on.

To manually degauss the monitor, first move the joystick up or down to select DEGAUSS. Then move the joystick to the right.

The screen is degaussed for about 2 seconds. If a second degauss cycle is needed, allow a minimum interval of 20 minutes for the best result.

### Changing the menu's position

Change the menu's position if it is blocking an image on the screen.

To change the menu's on-screen position, first move the joystick up or down to select OSD H POSITION for horizontal adjustment, or OSD V POSITION for vertical adjustment. Then move the joystick left or right to shift the on-screen menu.

### Locking the controls

To protect adjustment data by locking the controls, first move the joystick up or down to select CONTROL LOCK. Then move the joystick to the right, to select ON.

Only the (power) switch, EXIT, and CONTROL LOCK of the OPTION menu will operate. If any other items are selected, the ON mark appears on the screen.

### To cancel the control lock

Repeat the procedure above and set CONTROL LOCK to OFF.

US

## Resetting the adjustments

This monitor has the following three reset methods. Use the RESET button to reset the adjustments.



### Resetting a single adjustment item

Use the joystick to select the adjustment item you want to reset, and press the RESET button.

### Resetting all of the adjustment data for the current input signal

Press the RESET button when no menu is displayed on the screen. Note that the following items are not reset by this method:

- on-screen menu language (page 8)
- adjustment mode in the COLOR menu (EASY, EXPERT, sRGB) (page 13)
- on-screen menu position (page 15)
- control lock (page 15)

### Resetting all of the adjustment data for all input signals

Press and hold the RESET button for more than two seconds.

#### Note

The RESET button does not function when **ON** (CONTROL LOCK) is set to ON.

## Technical Features

### Preset and user modes

When the monitor receives an input signal, it automatically matches the signal to one of the factory preset modes stored in the monitor's memory to provide a high quality picture at the center of the screen. (See Appendix for a list of the factory preset modes.) For input signals that do not match one of the factory preset modes, the digital Multiscan technology of this monitor ensures that a clear picture appears on the screen for any timing in the monitor's frequency range (horizontal: 30 – 121 kHz, vertical: 48 – 160 Hz). If the picture is adjusted, the adjustment data is stored as a user mode and automatically recalled whenever the same input signal is received.

#### Note for Windows users

For Windows users, check your video board manual or the utility program which comes with your graphic board and select the highest available refresh rate to maximize monitor performance.

### Power saving function

This monitor meets the power-saving guidelines set by VESA, ENERGY STAR, and NUTEK. If the monitor is connected to a computer or video graphics board that is DPMS (Display Power Management Signaling) compliant, the monitor will automatically reduce power consumption in three stages as shown below.

Power mode	Power consumption*	(power) indicator
normal operation	≤ 145 W	green
1 standby	≤ 15 W	green and orange alternate
2 suspend (sleep)**	≤ 15 W	green and orange alternate
3 active off*** ≤ 1 W (deep sleep)**	≤ 1 W	orange
power off	0 W	off

\* Figures reflect power consumption when no USB compatible peripherals are connected to the monitor.

\*\* "Sleep" and "deep sleep" are power saving modes defined by the Environmental Protection Agency.


\*\*\* When your computer enters in a power saving mode, the input signal is cut and NO INPUT SIGNAL appears on the screen. After a few seconds, the monitor enters power saving mode.

## Troubleshooting

Before contacting technical support, refer to this section.

### If thin lines appear on your screen (damper wires)


The lines you are experiencing on your screen are normal for the Trinitron monitor and are not a malfunction. These are shadows from the damper wires used to stabilize the aperture grille and are most noticeable when the screen's background is light (usually white). The aperture grille is the essential element that makes a Trinitron picture tube unique by allowing more light to reach the screen, resulting in a brighter, more detailed picture.



### On-screen messages

If there is something wrong with the input signal, one of the following messages appears on the screen.

#### If NO INPUT SIGNAL appears on the screen

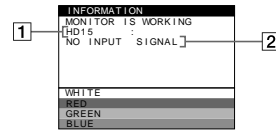


##### 1 The selected connector

This message shows the currently selected connector (HD15 or BNC).

##### 2 The input signal condition NO INPUT SIGNAL

This indicates that no signal is input, or that no signal is input from the selected connector.

#### If OUT OF SCAN RANGE appears on the screen

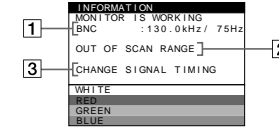

##### 1 The selected connector and the frequencies of the current input signal

This message shows the currently selected connector (HD15 or BNC). If the monitor recognizes the frequencies of the current input signal, the horizontal and vertical frequencies are also displayed.

##### 2 The input signal condition OUT OF SCAN RANGE

This indicates that the input signal is not supported by the monitor's specifications.

##### 3 The remedies

CHANGE SIGNAL TIMING appears on the screen. If you are replacing an old monitor with this monitor, reconnect the old monitor. Then adjust the computer's graphic board so that the horizontal frequency is between 30 - 121 kHz, and the vertical frequency is between 48 - 160 Hz.

**US**

For more information, see "Trouble symptoms and remedies" on page 18.

#### Displaying this monitor's name, serial number, and date of manufacture.

While the monitor is receiving a video signal, press and hold the joystick for more than three seconds to display this monitor's information box.



Example

INFORMATION
MODEL : GDM-F500R
SER NO : 1234567
MANUFACTURED : 1999-52


If the problem persists, call your authorized Sony dealer and give the following information.

- Model name: GDM-F500R
- Serial number
- Name and specifications of your computer and graphics board.

## Trouble symptoms and remedies

If the problem is caused by the connected computer or other equipment, please refer to the connected equipment's instruction manual. Use the self-diagnosis function (page 20) if the following recommendations do not resolve the problem.



Symptom	Check these items
<b>No picture</b>	
If the ⏻ (power) indicator is not lit	<ul style="list-style-type: none"> <li>Check that the power cord is properly connected.</li> <li>Check that the ⏻ (power) switch is in the "on" position.</li> </ul>
If the NO INPUT SIGNAL message appears on the screen, or if the ⏻ (power) indicator is either orange or alternating between green and orange	<ul style="list-style-type: none"> <li>Check that the video signal cable is properly connected and all plugs are firmly seated in their sockets. If you are using the five BNC connectors, connect them in the correct order (from left to right: Red-Green-Blue-HD-VD) (page 6).</li> <li>Check that the INPUT switch setting is correct (page 9).</li> <li>Check that the HD15 video input connector's pins are not bent or pushed in.</li> </ul> <p>■ <b>Problems caused by the connected computer or other equipment</b></p> <ul style="list-style-type: none"> <li>The computer is in power saving mode. Try pressing any key on the computer keyboard.</li> <li>Check that the computer's power is "on."</li> <li>Check that the graphic board is completely seated in the proper bus slot.</li> </ul>
If the OUT OF SCAN RANGE message appears on the screen	<p>■ <b>Problems caused by the connected computer or other equipment</b></p> <ul style="list-style-type: none"> <li>Check that the video frequency range is within that specified for the monitor. If you replaced an old monitor with this monitor, reconnect the old monitor and adjust the frequency range to the following. Horizontal: 30 – 121 kHz Vertical: 48 – 160 Hz</li> </ul>
If no message is displayed and the ⏻ (power) indicator is green or flashing orange	<ul style="list-style-type: none"> <li>Use the Self-diagnosis function (page 20).</li> </ul>
If using Windows 95/98	<ul style="list-style-type: none"> <li>If you replaced an old monitor with this monitor, reconnect the old monitor and do the following. Install the supplied Setup Disk (page 7) and select this monitor ("GDM-F500R") from among the Sony monitors in the Windows 95/98 monitor selection screen. If you choose to select "Plug and Play," connect the monitor to the computer with the HD15 video signal cable. You cannot use the five BNC connectors.</li> </ul>
If using a Macintosh system	<ul style="list-style-type: none"> <li>Check that the Macintosh adapter and the video signal cable are properly connected (page 6).</li> </ul>
<b>Picture flickers, bounces, oscillates, or is scrambled</b>	<ul style="list-style-type: none"> <li>Isolate and eliminate any potential sources of electric or magnetic fields such as other monitors, laser printers, electric fans, fluorescent lighting, or televisions.</li> <li>Move the monitor away from power lines or place a magnetic shield near the monitor.</li> <li>Try plugging the monitor into a different AC outlet, preferably on a different circuit.</li> <li>Try turning the monitor 90° to the left or right.</li> </ul> <p>■ <b>Problems caused by the connected computer or other equipment</b></p> <ul style="list-style-type: none"> <li>Check your graphics board manual for the proper monitor setting.</li> <li>Confirm that the graphics mode (VESA, Macintosh 21" Color, etc.) and the frequency of the input signal are supported by this monitor (Appendix). Even if the frequency is within the proper range, some video boards may have a sync pulse that is too narrow for the monitor to sync correctly.</li> <li>Adjust the computer's refresh rate (vertical frequency) to obtain the best possible picture.</li> </ul>
<b>Picture is fuzzy</b>	<ul style="list-style-type: none"> <li>Adjust the brightness and contrast (page 11).</li> <li>Degauss the monitor* (page 15).</li> <li>If CANCEL MOIRE is ON, the picture may become fuzzy. Decrease the moire cancellation effect or set CANCEL MOIRE to OFF (page 13).</li> </ul>

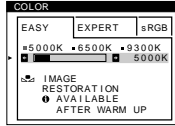
Symptom	Check these items
<b>Picture is ghosting</b>	<ul style="list-style-type: none"> <li>Eliminate the use of video cable extensions and/or video switch boxes.</li> <li>Check that all plugs are firmly seated in their sockets.</li> </ul>
<b>Picture is not centered or sized properly</b>	<ul style="list-style-type: none"> <li>Press the ASC button (page 9).</li> <li>Adjust the size (page 11) or centering (page 11). Note that some video modes do not fill the screen to the edges.</li> </ul>
<b>Edges of the image are curved</b>	<ul style="list-style-type: none"> <li>Adjust the geometry (page 12).</li> </ul>
<b>Wavy or elliptical pattern (moire) is visible</b>	<ul style="list-style-type: none"> <li>Set CANCEL MOIRE to ON and adjust the degree of moire cancellation until the moire is at a minimum (page 13).</li> </ul> <p>■ <b>Problems caused by the connected computer or other equipment</b></p> <ul style="list-style-type: none"> <li>Change your desktop pattern.</li> </ul>
<b>Color is not uniform</b>	<ul style="list-style-type: none"> <li>Degauss the monitor* (page 15). If you place equipment that generates a magnetic field, such as a speaker, near the monitor, or if you change the direction the monitor faces, color may lose uniformity.</li> <li>Adjust the landing (page 13).</li> </ul>
<b>White does not look white</b>	<ul style="list-style-type: none"> <li>Adjust the color temperature (page 13).</li> <li>Check that the five BNC connectors are connected in the correct order (from left to right: Red-Green-Blue-HD-VD) (page 6).</li> </ul>
<b>Letters and lines show red or blue shadows at the edges</b>	<ul style="list-style-type: none"> <li>Adjust the convergence (page 12).</li> </ul>
<b>Monitor buttons do not operate (On appears on the screen)</b>	<ul style="list-style-type: none"> <li>If the control lock is set to ON, set it to OFF (page 15).</li> </ul>
<b>IMAGE RESTORATION function does not operate</b>	<ul style="list-style-type: none"> <li>Before using this function, the monitor must be in normal operation mode (green power indicator on) for at least 30 minutes. For more information on using the IMAGE RESTORATION function, see page 15.</li> <li>Adjust the computer's power saving settings to keep the monitor in normal operation mode for more than 30 minutes.</li> <li>The monitor may gradually lose its ability to perform this function due to the natural aging of the picture tube.</li> </ul>
	
<b>USB peripherals do not function</b>	<ul style="list-style-type: none"> <li>Check that the appropriate USB connectors are securely connected (page 8).</li> <li>Check that the ⏻ (power) switch is in the "on" position.</li> </ul> <p>■ <b>Problems caused by the connected computer or other equipment</b></p> <ul style="list-style-type: none"> <li>Check that the power of any self-powered USB compliant peripheral devices is "on."</li> <li>Install the latest version of the device driver on your computer. Contact your device's manufacturer for information about the appropriate device driver.</li> <li>If your USB compliant keyboard or mouse does not function, connect them directly to your computer, reboot your computer, and make any necessary adjustments to the USB settings. Then reconnect the keyboard or mouse to the monitor.</li> <li>For customers using Windows 95             <ol style="list-style-type: none"> <li>Right-click on My Computer and select Properties.</li> <li>Click on the Device Manager tab. Scroll down and select Universal Serial Bus Controller.</li> <li>If Universal Serial Bus Controller does not appear, you need to load a USB supplement disk. Contact your computer's manufacturer for more information about obtaining a USB supplement disk.</li> <li>Select Generic USB Device from the USB controller list and click on Properties.</li> <li>If there is a check in the box next to "Disable in this hardware profile," remove the check.</li> <li>Click on Refresh.</li> </ol> </li> </ul>
<b>A hum is heard right after the power is turned on</b>	<ul style="list-style-type: none"> <li>This is the sound of the auto-degauss cycle. When the power is turned on, the monitor is automatically degaussed for three seconds.</li> </ul>

\* If a second degauss cycle is needed, allow a minimum interval of 20 minutes for the best result. A humming noise may be heard, but this is not a malfunction.



US

## Self-diagnosis function

This monitor is equipped with a self-diagnosis function. If there is a problem with your monitor or computer(s), the screen will go blank and the  (power) indicator will either light up green or flash orange. If the  (power) indicator is lit in orange, the computer is in power saving mode. Try pressing any key on the keyboard.

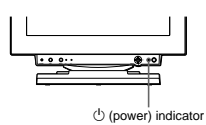

### If the (power) indicator is green

- 1 Remove any plugs from the video input 1 and 2 connectors, or turn off the connected computer(s).
- 2 Press the  (power) button twice to turn the monitor off and then on.
- 3 Move the joystick to the right  for 2 seconds before the monitor enters power saving mode.






If all four color bars appear (white, red, green, blue), the monitor is working properly. Reconnect the video input cables and check the condition of your computer(s).

If the color bars do not appear, there is a potential monitor failure. Inform your authorized Sony dealer of the monitor's condition.

### If the (power) indicator is flashing orange

Press the  (power) button twice to turn the monitor off and then on.

If the  (power) indicator lights up green, the monitor is working properly.

If the  (power) indicator is still flashing, there is a potential monitor failure. Count the number of seconds between orange flashes of the  (power) indicator and inform your authorized Sony dealer of the monitor's condition. Be sure to note the model name and serial number of your monitor. Also note the make and model of your computer and video board.

## Specifications


CRT	0.22 mm aperture grille pitch 21 inches measured diagonally 90-degree deflection FD Trinitron
Viewable image size	Approx. 403.8 × 302.2 mm (w/h) (16 × 12 inches) 19.8" viewing image
Resolution	Maximum Horizontal: 2048 dots Vertical: 1536 lines Recommended Horizontal: 1600 dots Vertical: 1200 lines
Standard image area	Approx. 388 × 291 mm (w/h) (15 <sup>3</sup> / <sub>8</sub> × 11 <sup>1</sup> / <sub>2</sub> inches) or Approx. 364 × 291 mm (w/h) (14 <sup>3</sup> / <sub>8</sub> × 11 <sup>1</sup> / <sub>2</sub> inches)
Deflection frequency*	Horizontal: 30 to 121 kHz Vertical: 48 to 160 Hz
AC input voltage/current	100 to 240 V, 50 – 60 Hz, 2.0 – 1.0 A
Power consumption	Approx. 145 W (with no USB devices connected)
Operating temperature	10°C to 40°C
Dimensions	Approx. 502 × 511 × 480.3 mm (w/h/d) (19 <sup>7</sup> / <sub>8</sub> × 20 <sup>1</sup> / <sub>8</sub> × 19 <sup>1</sup> / <sub>4</sub> inches)
Mass	Approx. 33 kg (72 lb 12 oz)
Plug and Play	DDC1/DDC2B/DDC2Bi,GTF**
Supplied accessories	See page 6

- \* Recommended horizontal and vertical timing condition
- Horizontal sync width duty should be more than 4.8% of total horizontal time or 0.8 μs, whichever is larger.
  - Horizontal blanking width should be more than 2.3 μsec.
  - Vertical blanking width should be more than 450 μsec.
- \*\* If the input signal is Generalized Timing Formula (GTF) compliant, the GTF feature of the monitor will automatically provide an optimal image for the screen.


Design and specifications are subject to change without notice.

## SECTION 2 DISASSEMBLY

### 2-1. CABINET REMOVAL

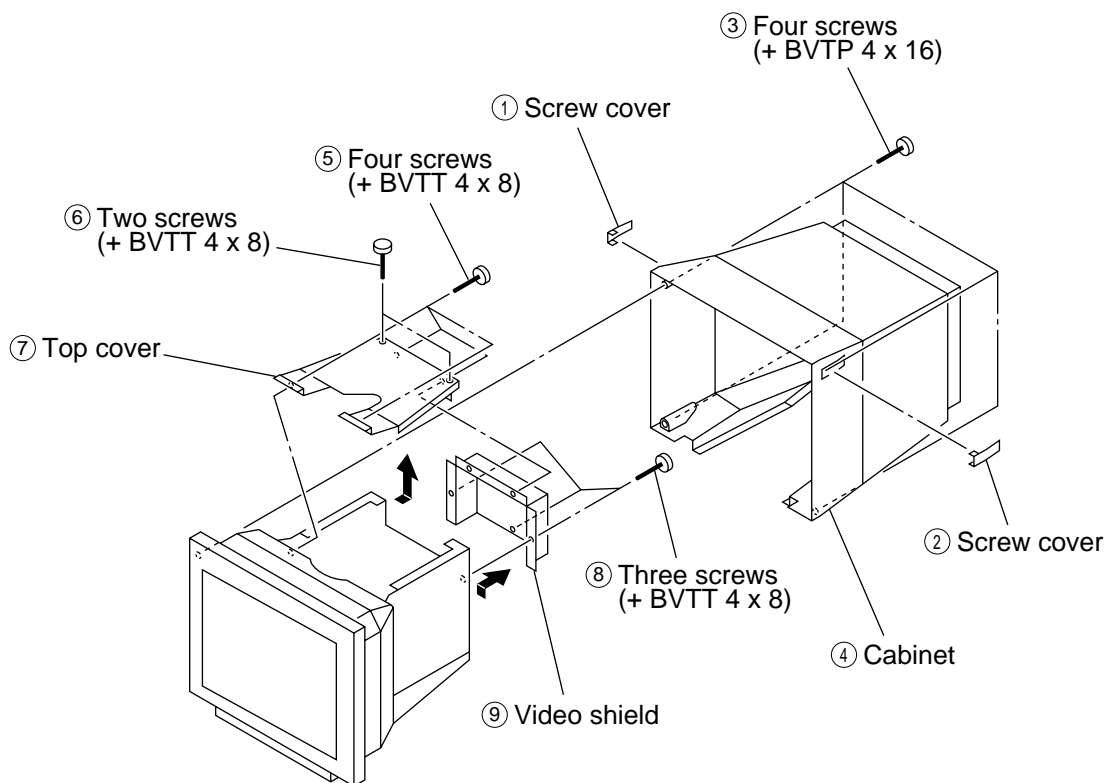


### 2-2. D BOARD REMOVAL

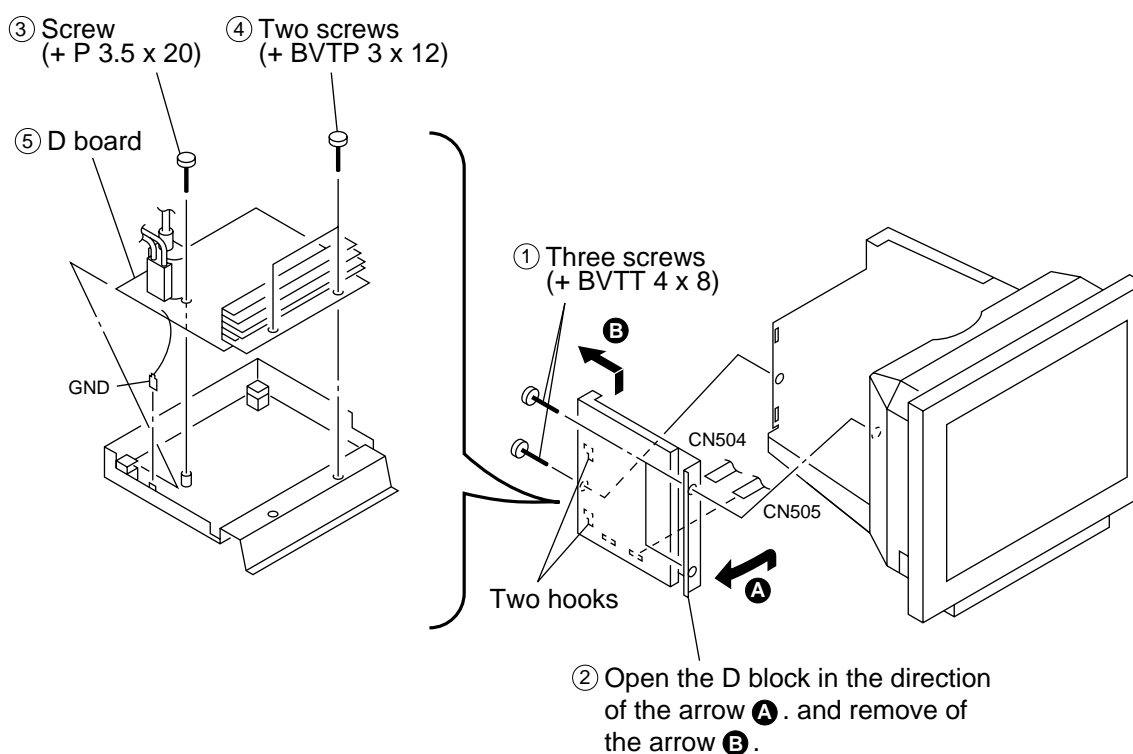





2-3. G BOARD REMOVAL

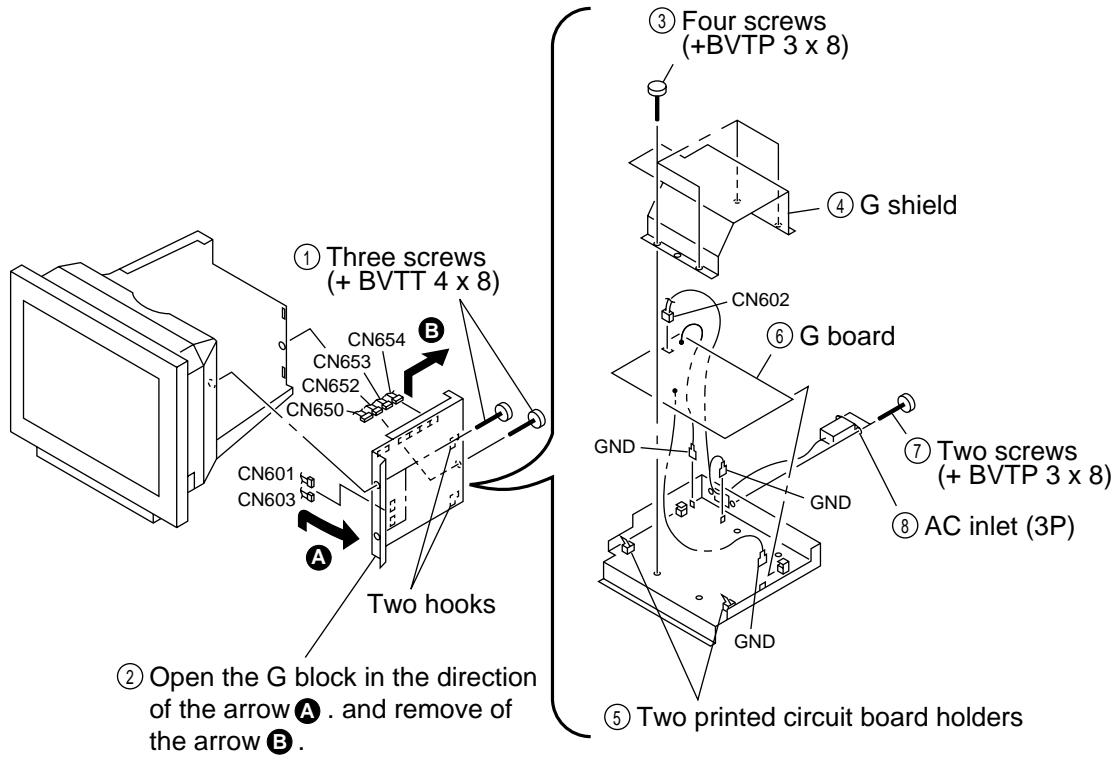

2-4. A BOARD, I/O TERMINAL BOARD ASSEMBLY REMOVAL

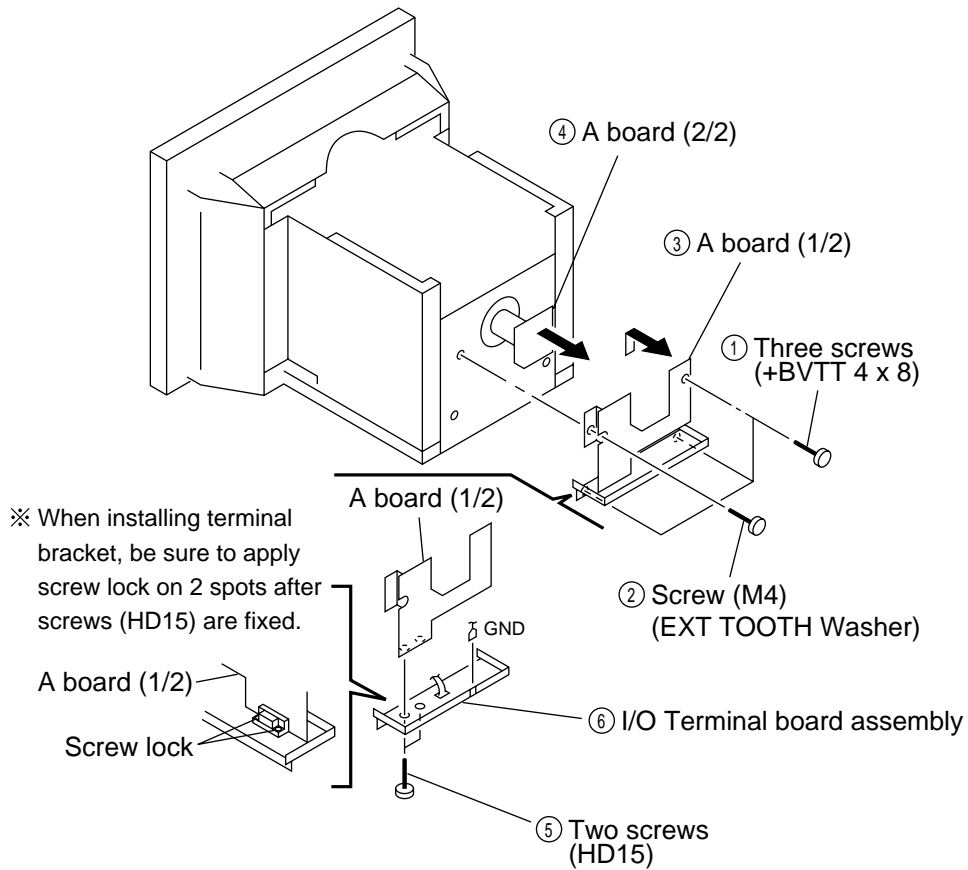


2-5. N BOARD REMOVAL

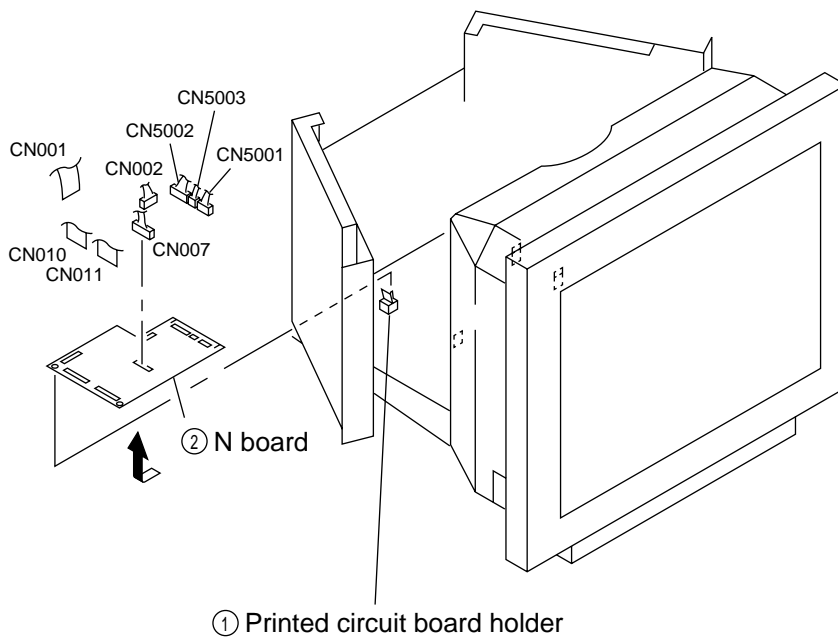


2-6. SERVICE POSITION

CAUTION : SHORT

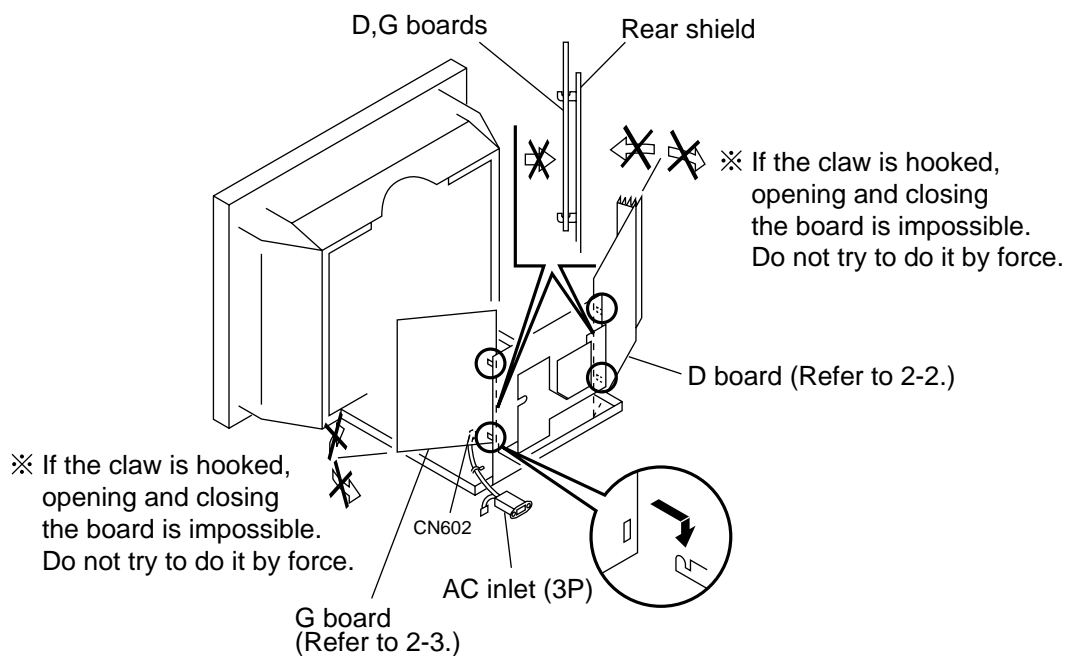


**2-7. H5 AND H6 BOARDS REMOVAL**


- ① Before removing the bezel assembly, secure the picture tube by attaching two screws to the picture tube shield at the positions shown with an arrow (diagonal two places) to prevent the picture tube from falling. (Use the screws +BVTT 4 x 8 that fix top cover.)

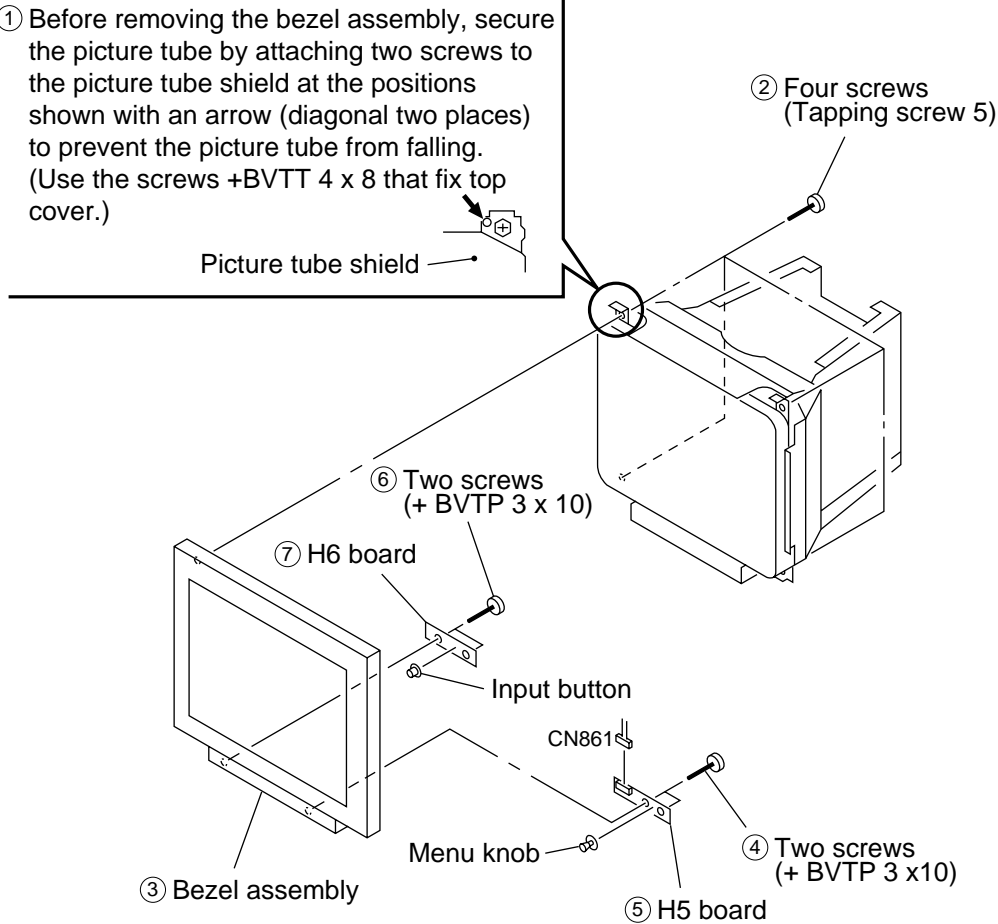

**2-8. PICTURE TUBE REMOVAL**

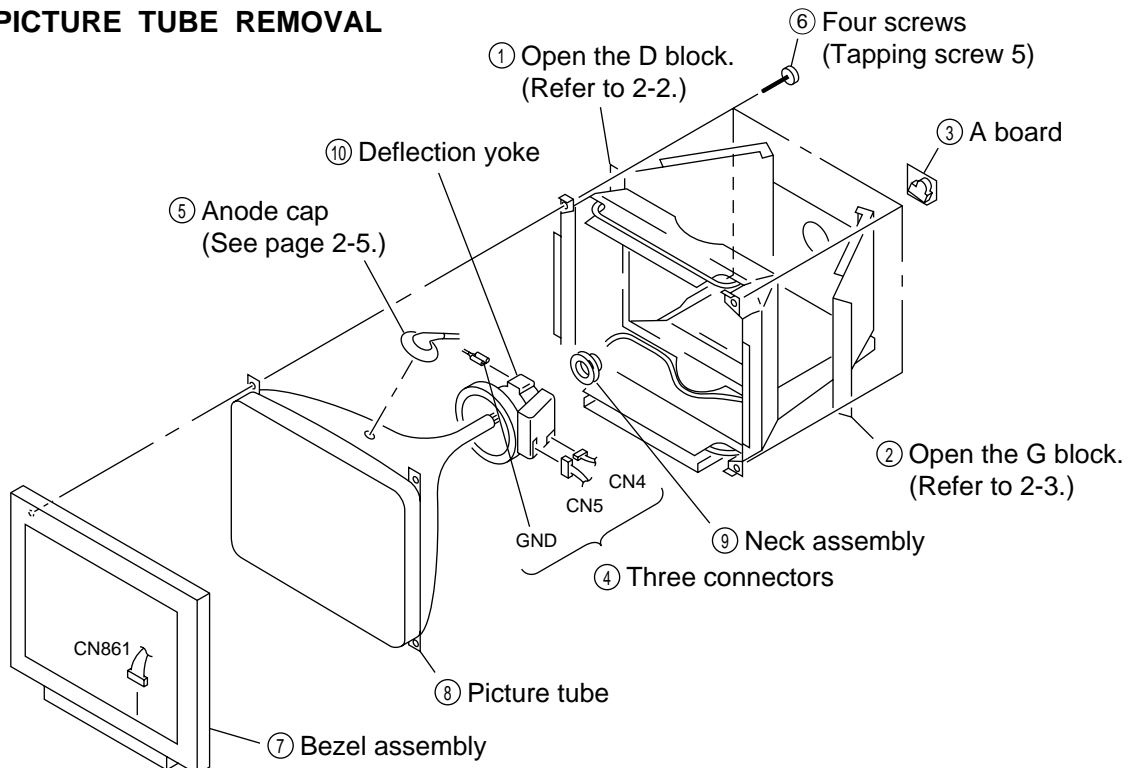


## 2-9. J BOARD REMOVAL

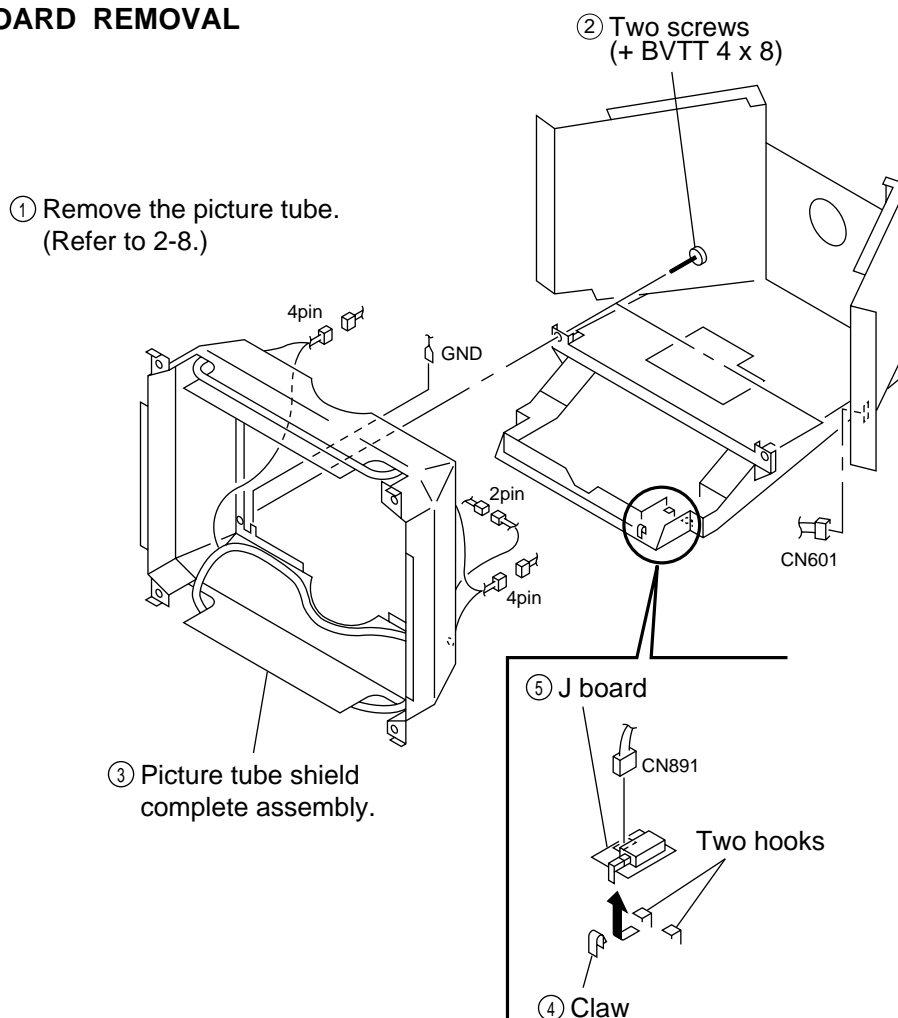

### • REMOVAL OF ANODE-CAP

NOTE: Short circuit the anode of the picture tube and the anode cap to the metal chassis, CRT shield or carbon painted on the CRT, after removing the anode.


### • REMOVING PROCEDURES

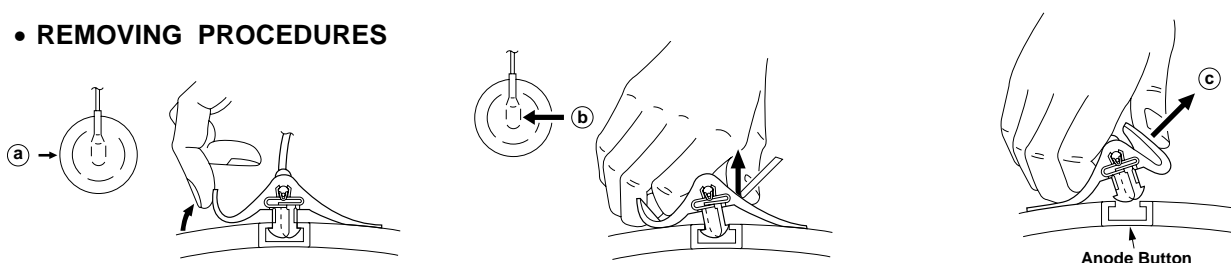


- ① Turn up one side of the rubber cap in the direction indicated by the arrow (a).
- ② Using a thumb pull up the rubber cap firmly in the direction indicated by the arrow (b).
- ③ When one side of the rubber cap is separated from the anode button, the anode-cap can be removed by turning up the rubber cap and pulling up it in the direction of the arrow (c).

### • HOW TO HANDLE AN ANODE-CAP


- ① Don't scratch the surface of anode-caps with sharp shaped material!
- ② Don't press the rubber hardly not to damage inside of anode-caps!  
A material fitting called as shatter-hook terminal is built in the rubber.
- ③ Don't turn the foot of rubber over hardly!  
The shatter-hook terminal will stick out or damage the rubber.

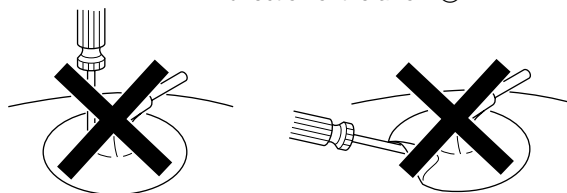

2-10. US BOARD REMOVAL

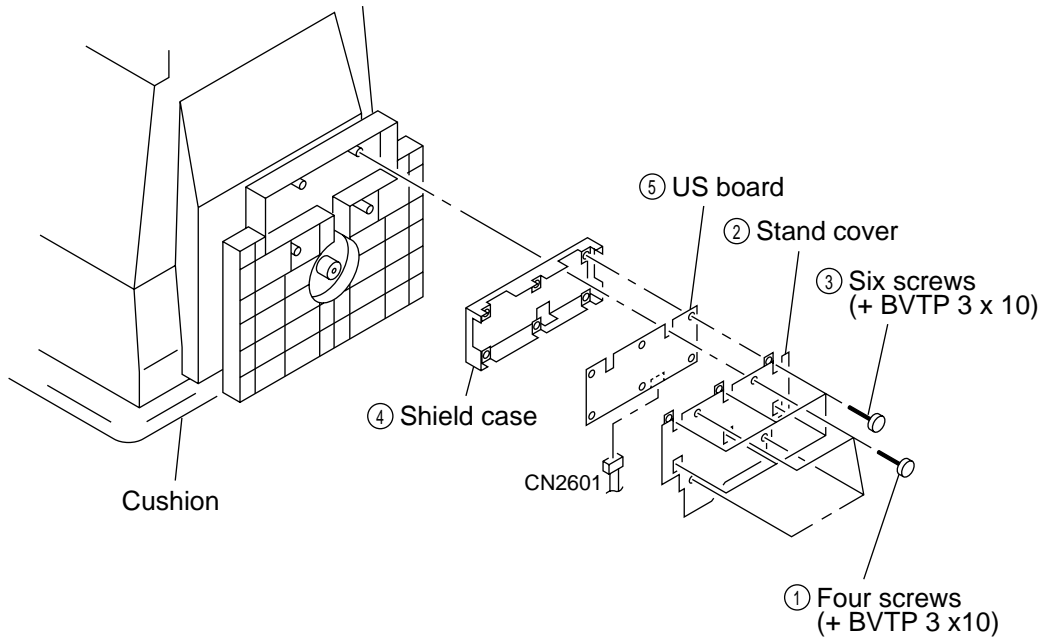

2-11. HARNESS LOCATION

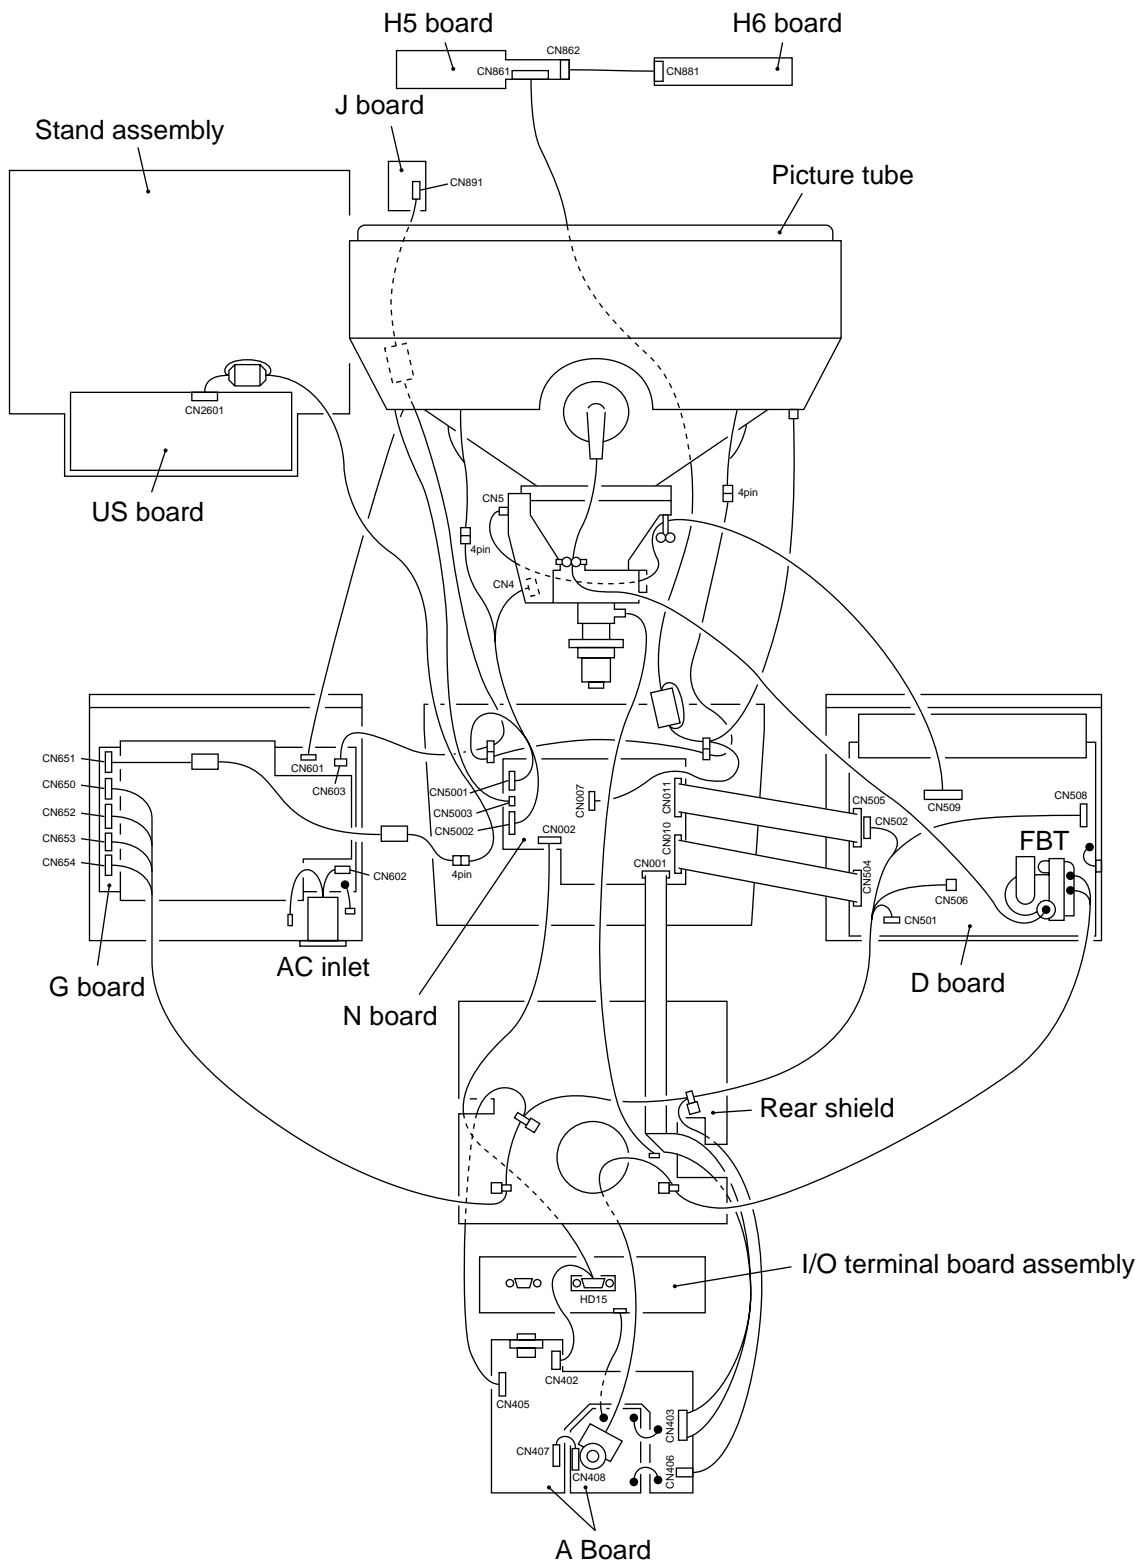

## SECTION 3

### SAFETY RELATED ADJUSTMENT

When replacing or repairing the shown below table, the following operational checks must be performed as a safety precaution against X-rays emissions from the unit.

	Part Replaced (☒)
HV ADJ	RV901

	Part Replaced (☑)
HV Regulator Circuit Check	D Board C920, IC901, R923, R924, R929, R945, RV901, T902(FBT) • Mounted D Board
HV Protector Circuit Check	D Board C922, C925, C926, D912, D914, D915, D921, Q907, Q908, R921, R922, R932, R937, R939, T902(FBT) • Mounted D Board
Beam Current Protector Circuit Check	D Board C910, C921, C933, D901, D902, D913, IC503, IC901, R901, R920, R928, R930, R931, R940, R941, T902(FBT) • Mounted D Board G Board IC652 • Mounted G Board N Board IC001, R031, R032 • Mounted N Board

\* Confirm one minute after turning on the power.

#### a) HV Regulator Circuit Check

- 1) Enter black crosshatch signal (black on white background), and check that high voltage is in the specified range.

[Specification]:  $27.00 \pm 0.10$  kV

- 2) Check that the voltage of D912 cathode on the D board is 27.0 V or more.

#### b) HV Protector Circuit Check

- 1) Enter black crosshatch signal (black on white background).
- 2) Apply the specified voltage to the D912 cathode on the D board, and check that high voltage is 0.1 kV or less.

[Specification]:  $31.90 + 0.00/- 0.05$  V

#### c) Beam Current Protector Circuit Check

##### (1st Protector): D Board

- 1) Apply 4.5 V DC to CN504 ⑩ pin on the D board, and check high voltage value.
- 2) Connect constant current source to a section between T902 (FBT) ⑪ pin and ⑫ pin (GND) on the D board, and check that high voltage checked in 1) lowers by 1.50 kV or more when the specified current flows to the ⑪ pin.  
[Specification]:  $2.00 + 0.00/- 0.01$  mA

#### d) Beam Current Protector Circuit Check

##### (2nd Protector): D Board

- 1) Connect constant current source to a section between T902 (FBT) ⑪ pin and ⑫ pin (GND) on the D board, and check that the voltage of CN504 ⑩ pin becomes 0 V or less when the specified current flows to the ⑪ pin.  
[Specification]:  $1.70 + 0.00/- 0.01$  mA

#### e) Beam Current Protector Circuit Check

##### : G Board

- 1) Apply 264 V AC.
- 2) Enter about 5 V to CN650 ④ pin on the G board, and check that the output voltage of CN653 ② pin is about 15 V.
- 3) Enter about  $0 \pm 0.2$  V to CN654 ④ pin, and check that the output voltage of CN653 ② pin becomes 1.0 V or less.

#### f) Beam Current Protector Circuit Check

##### : N Board

- 1) Check that the protector operates, when the voltage of CN010 ⑩ pin on the N board is lowered to 0 V or less (for more than 2 seconds).

## SECTION 4

### ADJUSTMENTS

**Note: Hand degauss must be used on stand-by or power-off condition.**

**This model has an automatic earth magnetism correction function by using an earth magnetism sensor and a LCC coil. When using a hand degauss while monitor (LCC coil) is being operated, it sometimes gets magnetized, and the system may not work properly as a result.**

#### • Landing Rough Adjustment

1. Enter the full white signal. (or the full black dots signal).
2. Adjust the contrast to the maximum.
3. Make the screen monogreen.

Note: Off the outputs from R ch and B ch of SG.

4. Reverse the DY, and adjust coarsely the purity magnet so that a green raster positions in the center of screen.
5. Adjust the tilt of DY, and fix lightly with a clamp.

Note: "TILT" = "128".

#### • Landing Fine Adjustment

1. Put the set inside the Helmholtz coil. ("LCC SW" = "12")
2. Input the single green signal and set the "CONTRAST" = "255".

Note: After the W/B adjustment with 9300K, measure an average of  $\Sigma I_k$  when a full white signal is entered in the CONT MAX/BRT CENT status. Then make adjustment so that the specified screen can be attained after aging for 2 hours with  $I_k$  equivalent to 30% of the average value.

3. Demagnetize the metal part of the chassis with the hand degausser and coil degausser, and the CRT surface with the hand degausser.

Input AC 230V to AC IN, turn on and off the power to perform auto degaussing. (Perform auto degaussing by setting "FUNCTION SW" = 1. Return to the original value after use.)

Demagnetize the CRT surface with the hand degausser again.

Note:

- (1) Hand degauss must be used on stand-by or power-off condition.

This model has an automatic earth magnetism correction function by using an earth magnetism sensor and a LCC coil. When using a hand degauss while monitor (LCC coil) is being operated, it sometimes gets magnetized, and the system may not work properly as a result.

- (2) Adjust in a non-magnetic field.
- (3) If adjusting in a magnetic fields, add the shift from the non-magnetic field in your estimation.
4. Attach the wobbling coil to the designated part of the CRT neck.
5. Attach the sensor of the landing adjustment unit on the CRT surface.
6. Adjust the DY position and purity, and the DY tilt, and landing of the center and 4 corners with the landing checker. After adjustment, set "LCC SW" to "13".

- Write terrestrial magnetism sensor reading VX and VY to "LCC VX" and "LCC VY" respectively. Adjust the landing by moving "LCC NS", "LCC LT", "LCC LB", "LCC RT" and "LCC RB". However, the register adjustment must be limited within the following range.

"LCC NS" 128 ± 15

"LCC LT", "LCC LB", "LCC RT", "LCC RB" 128 ± 45

Save the service data.

<Specifications>

Adjust so that the green is within the specification given right.

4 corner adjust target : within ± 1

(μm)		
0 ± 3	0 ± 7.5	0 ± 3
0 ± 3	0 ± 7.5	0 ± 3
0 ± 3	0 ± 7.5	0 ± 3

The red and blue must be within the specification given right with respect to the green.

(μm)		
± 6	± 6	± 6
± 6	± 6	± 6
± 6	± 6	± 6

A difference between red and blue must be within the specification given right.

(μm)		
10	10	10
10	7	10
10	10	10

\* Adjustment and measurement should be made at the points one inch inside the fluorescent screen.

7. Tighten DY screw.

Note: Torque  $22 \pm 2$  kg.cm ( $2.2 \pm 0.2$  Nm) auto degauss it.

8. For the up/down swing, swing the DY and insert a wedge so that the up and down pins are equal at the top and bottom. Adjust the H.TRP VR of DY so that the horizontal trapezoid is equal at the left and right. Insert the wedge firmly so that the DY does not shake.
9. Check the landing of each corner, and if it does not satisfy the specification, adjust the landing of four corners using "LCC LT", "LCC LB", "LCC RT" and "LCC RB".

However, the register adjustment must be limited within the following range.

"LCC NS" 128 ± 15

"LCC LT", "LCC LB", "LCC RT", "LCC RB" 128 ± 45


After adjustment, save the service data.

10. Remove the sensor and wobbling coil.
11. Switch the signal to R.G.B., and check that each color is pure.
12. Check that the DY is not tilting, and fix the purity Mg with a white pen. Fix wedges with RTV.




# GDM-F500R

Connect the communication cable of the computer to the connector located on the D board. Run the service software and then follow the instruction.

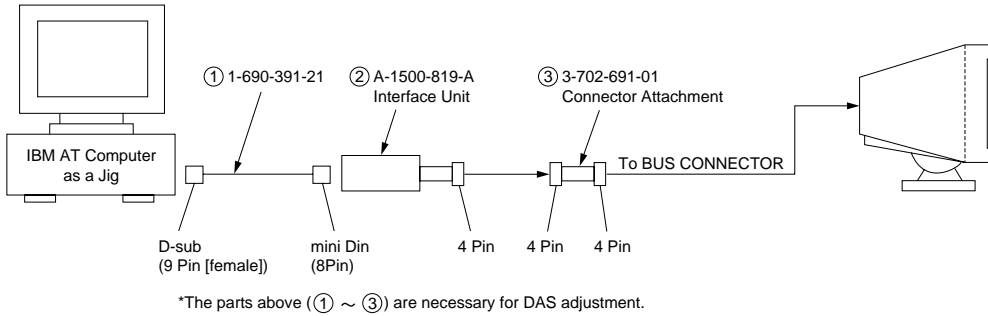


## • Convergence Rough Adjustment

- (1) Receive an image of the white crosshatch signals (white lines on black).
- (2) Place the protrusions of the 6-fold poles magnet attached to the CRT neck upon each other.
- (3) Make rough adjustment of the H and V direction convergence by using 4-fold poles magnet.

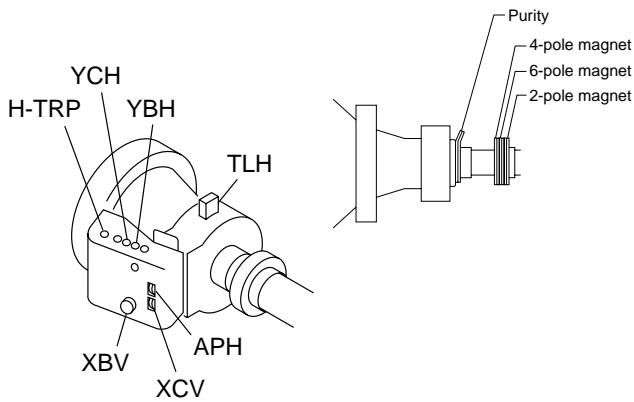

\* Set so that the protruding parts of the 2 magnet rings agree with each other.

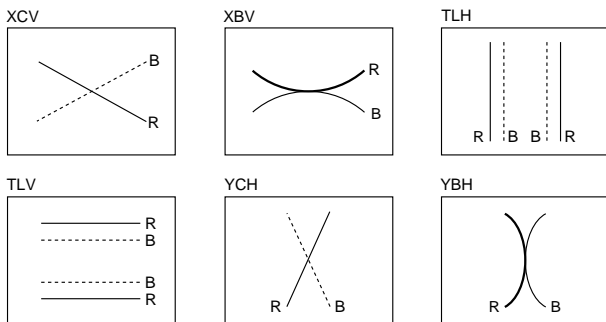


## • Convergence Specification

V		fH	60kHz ≤	60kHz >
		A	0.20 mm	0.24 mm
		B	0.24 mm	0.28 mm

## • White Balance Adjustment Specification


1. 9300K  
 $x = 0.283 \pm 0.005$   
 $y = 0.298 \pm 0.005$   
 (All White)
2. 6500K  
 $x = 0.313 \pm 0.005$   
 $y = 0.329 \pm 0.005$   
 (All White)
3. 5000K  
 $x = 0.346 \pm 0.005$   
 $y = 0.359 \pm 0.005$   
 (All White)

## • Vertical and Horizontal Position and Size Specification

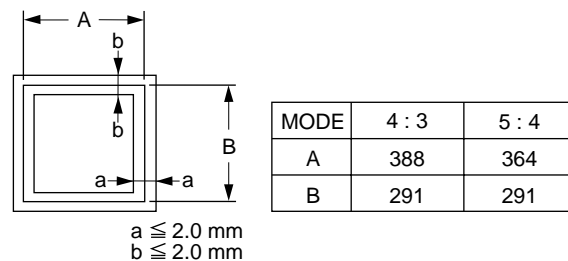



## • Focus adjustment


Adjust the focus volume 1 and 2 for the optimum focus.

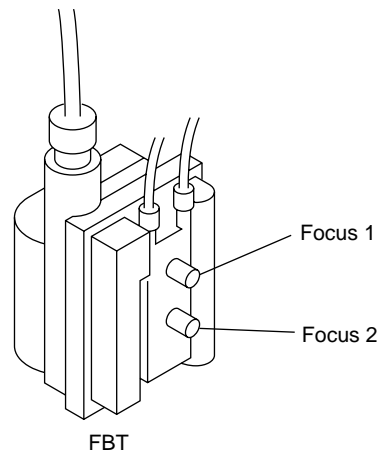


# SECTION 5 DIAGRAMS

## 5-1. BLOCK DIAGRAMS

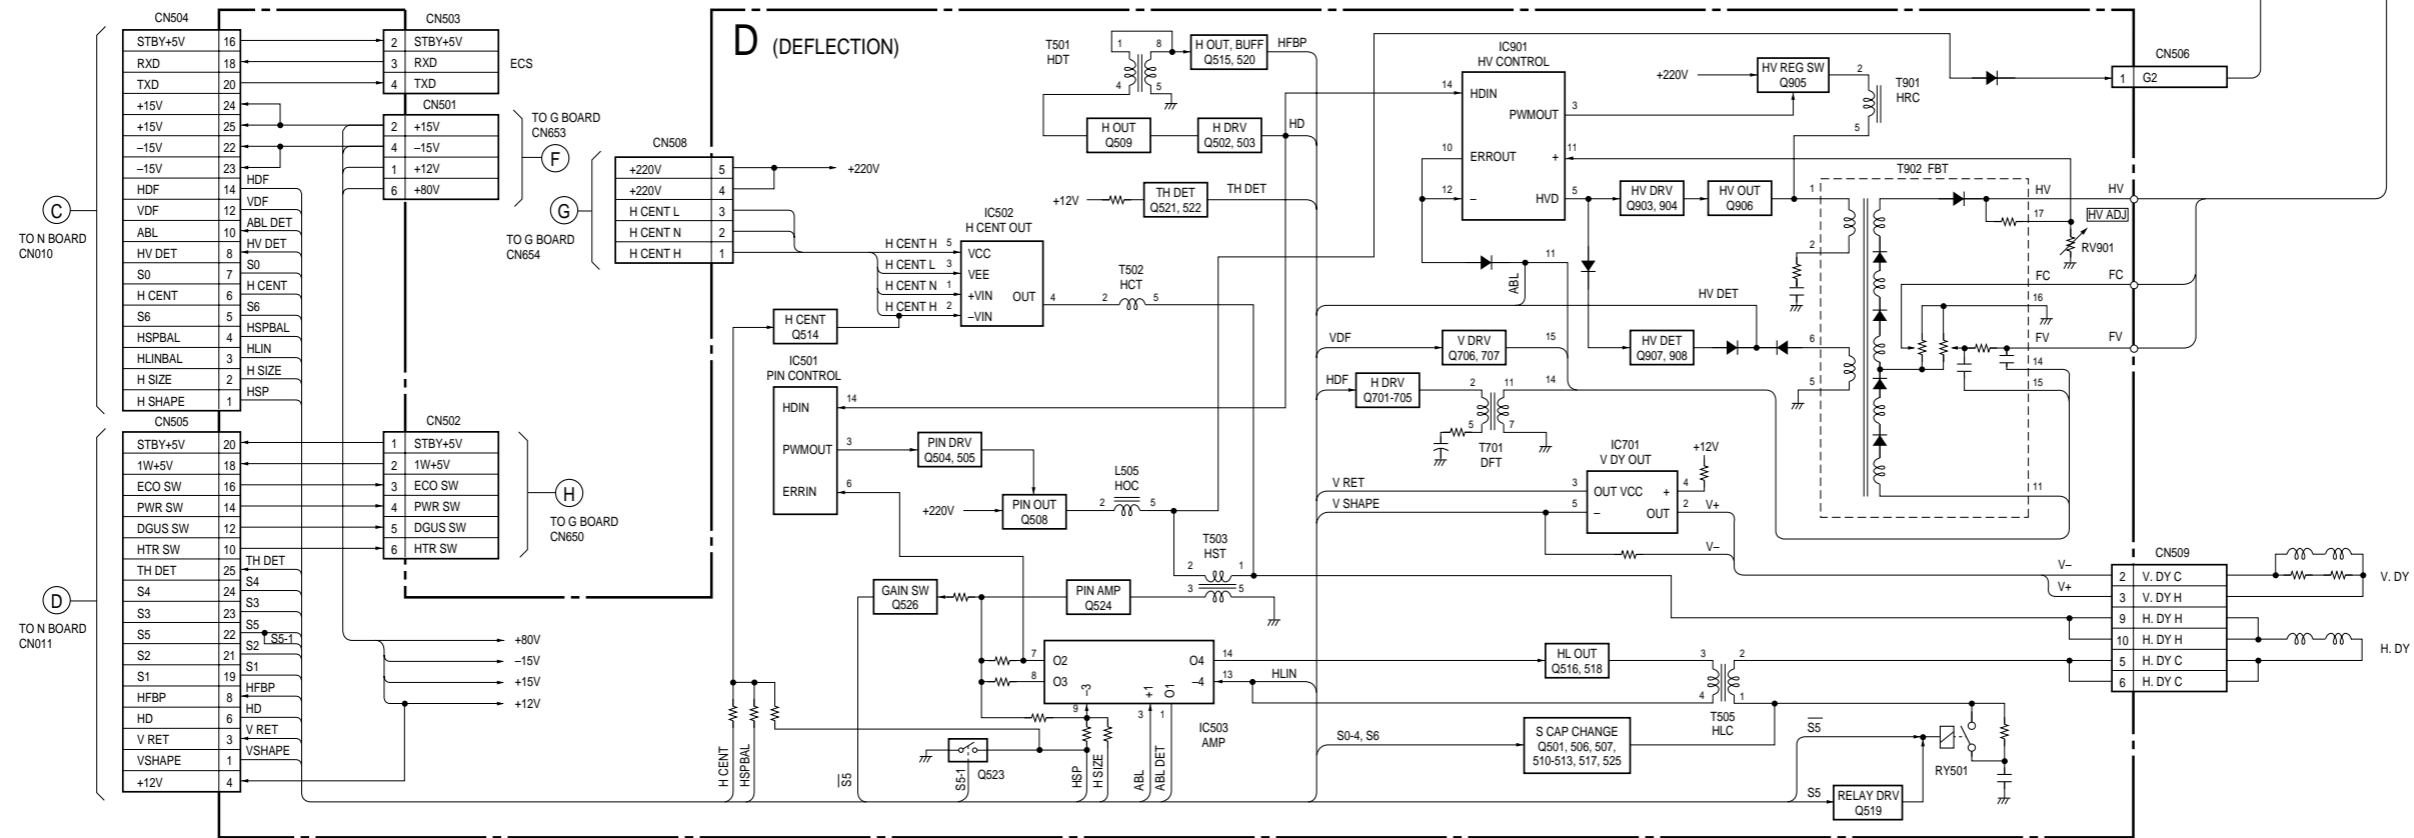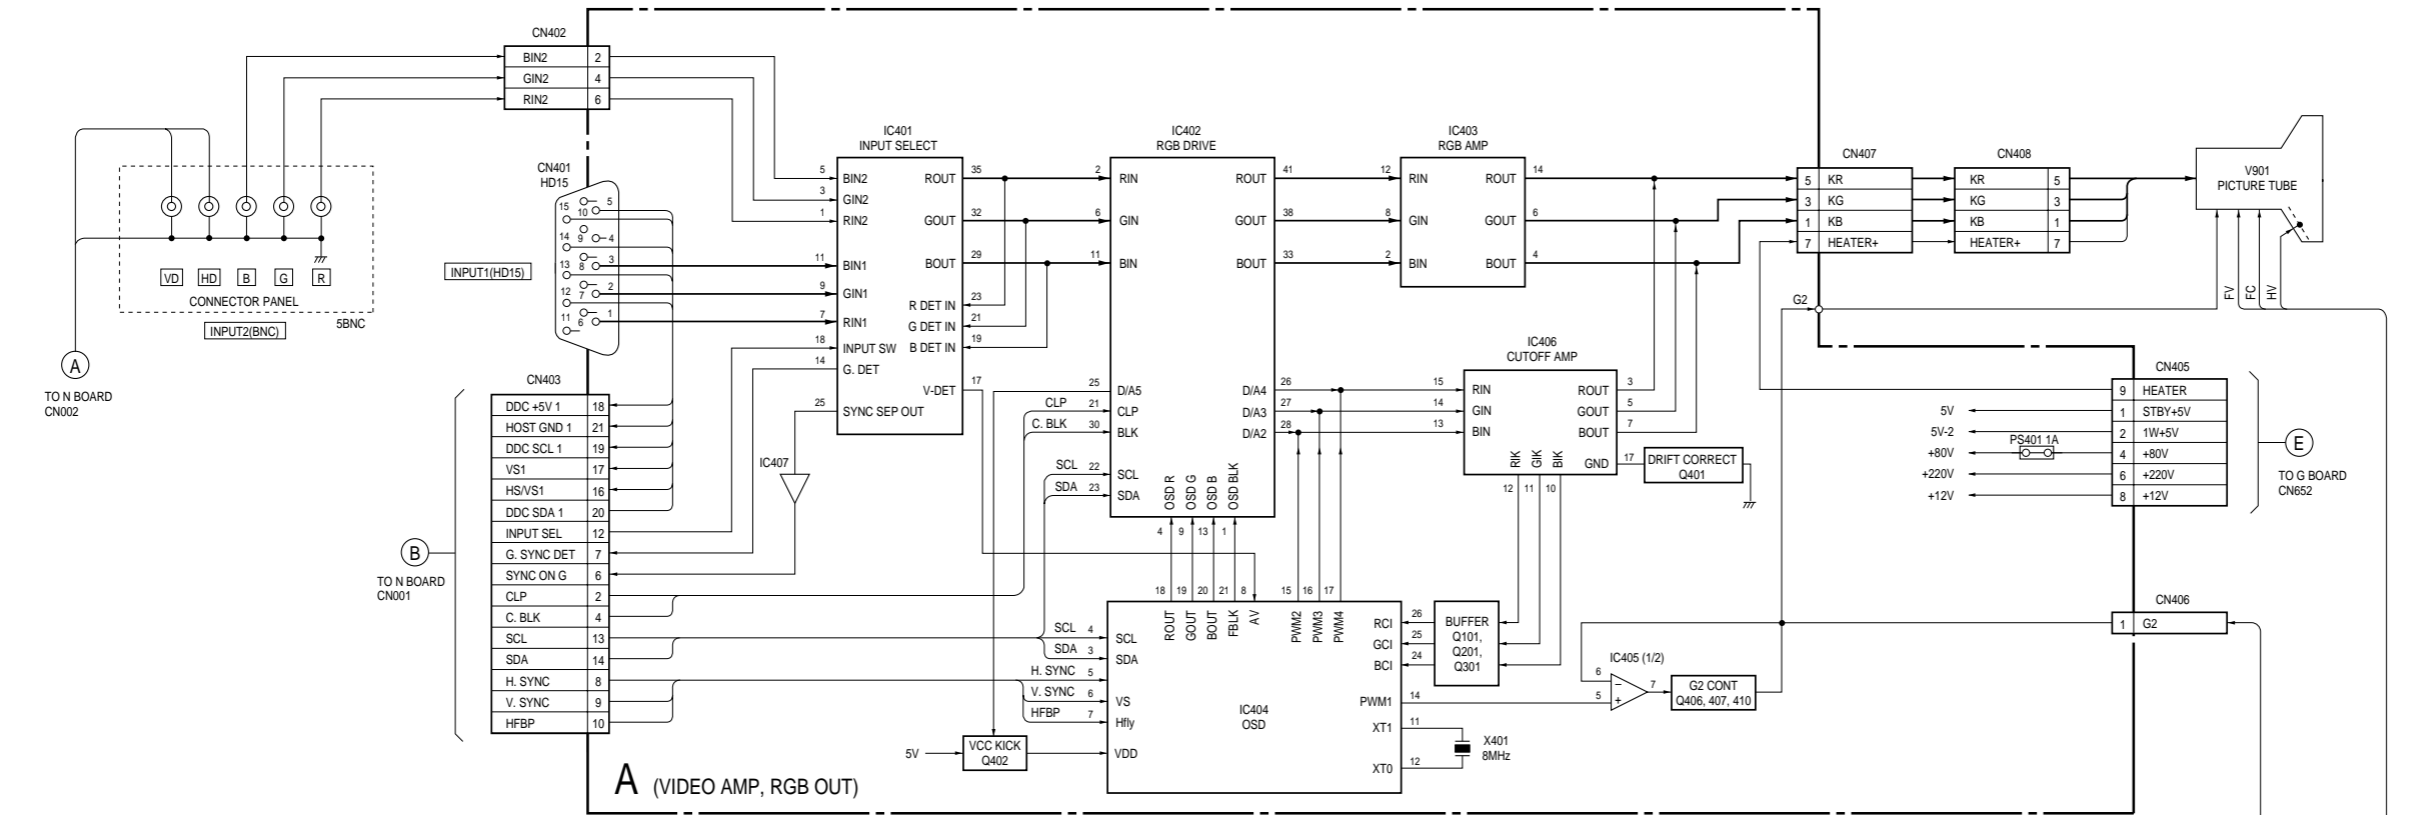


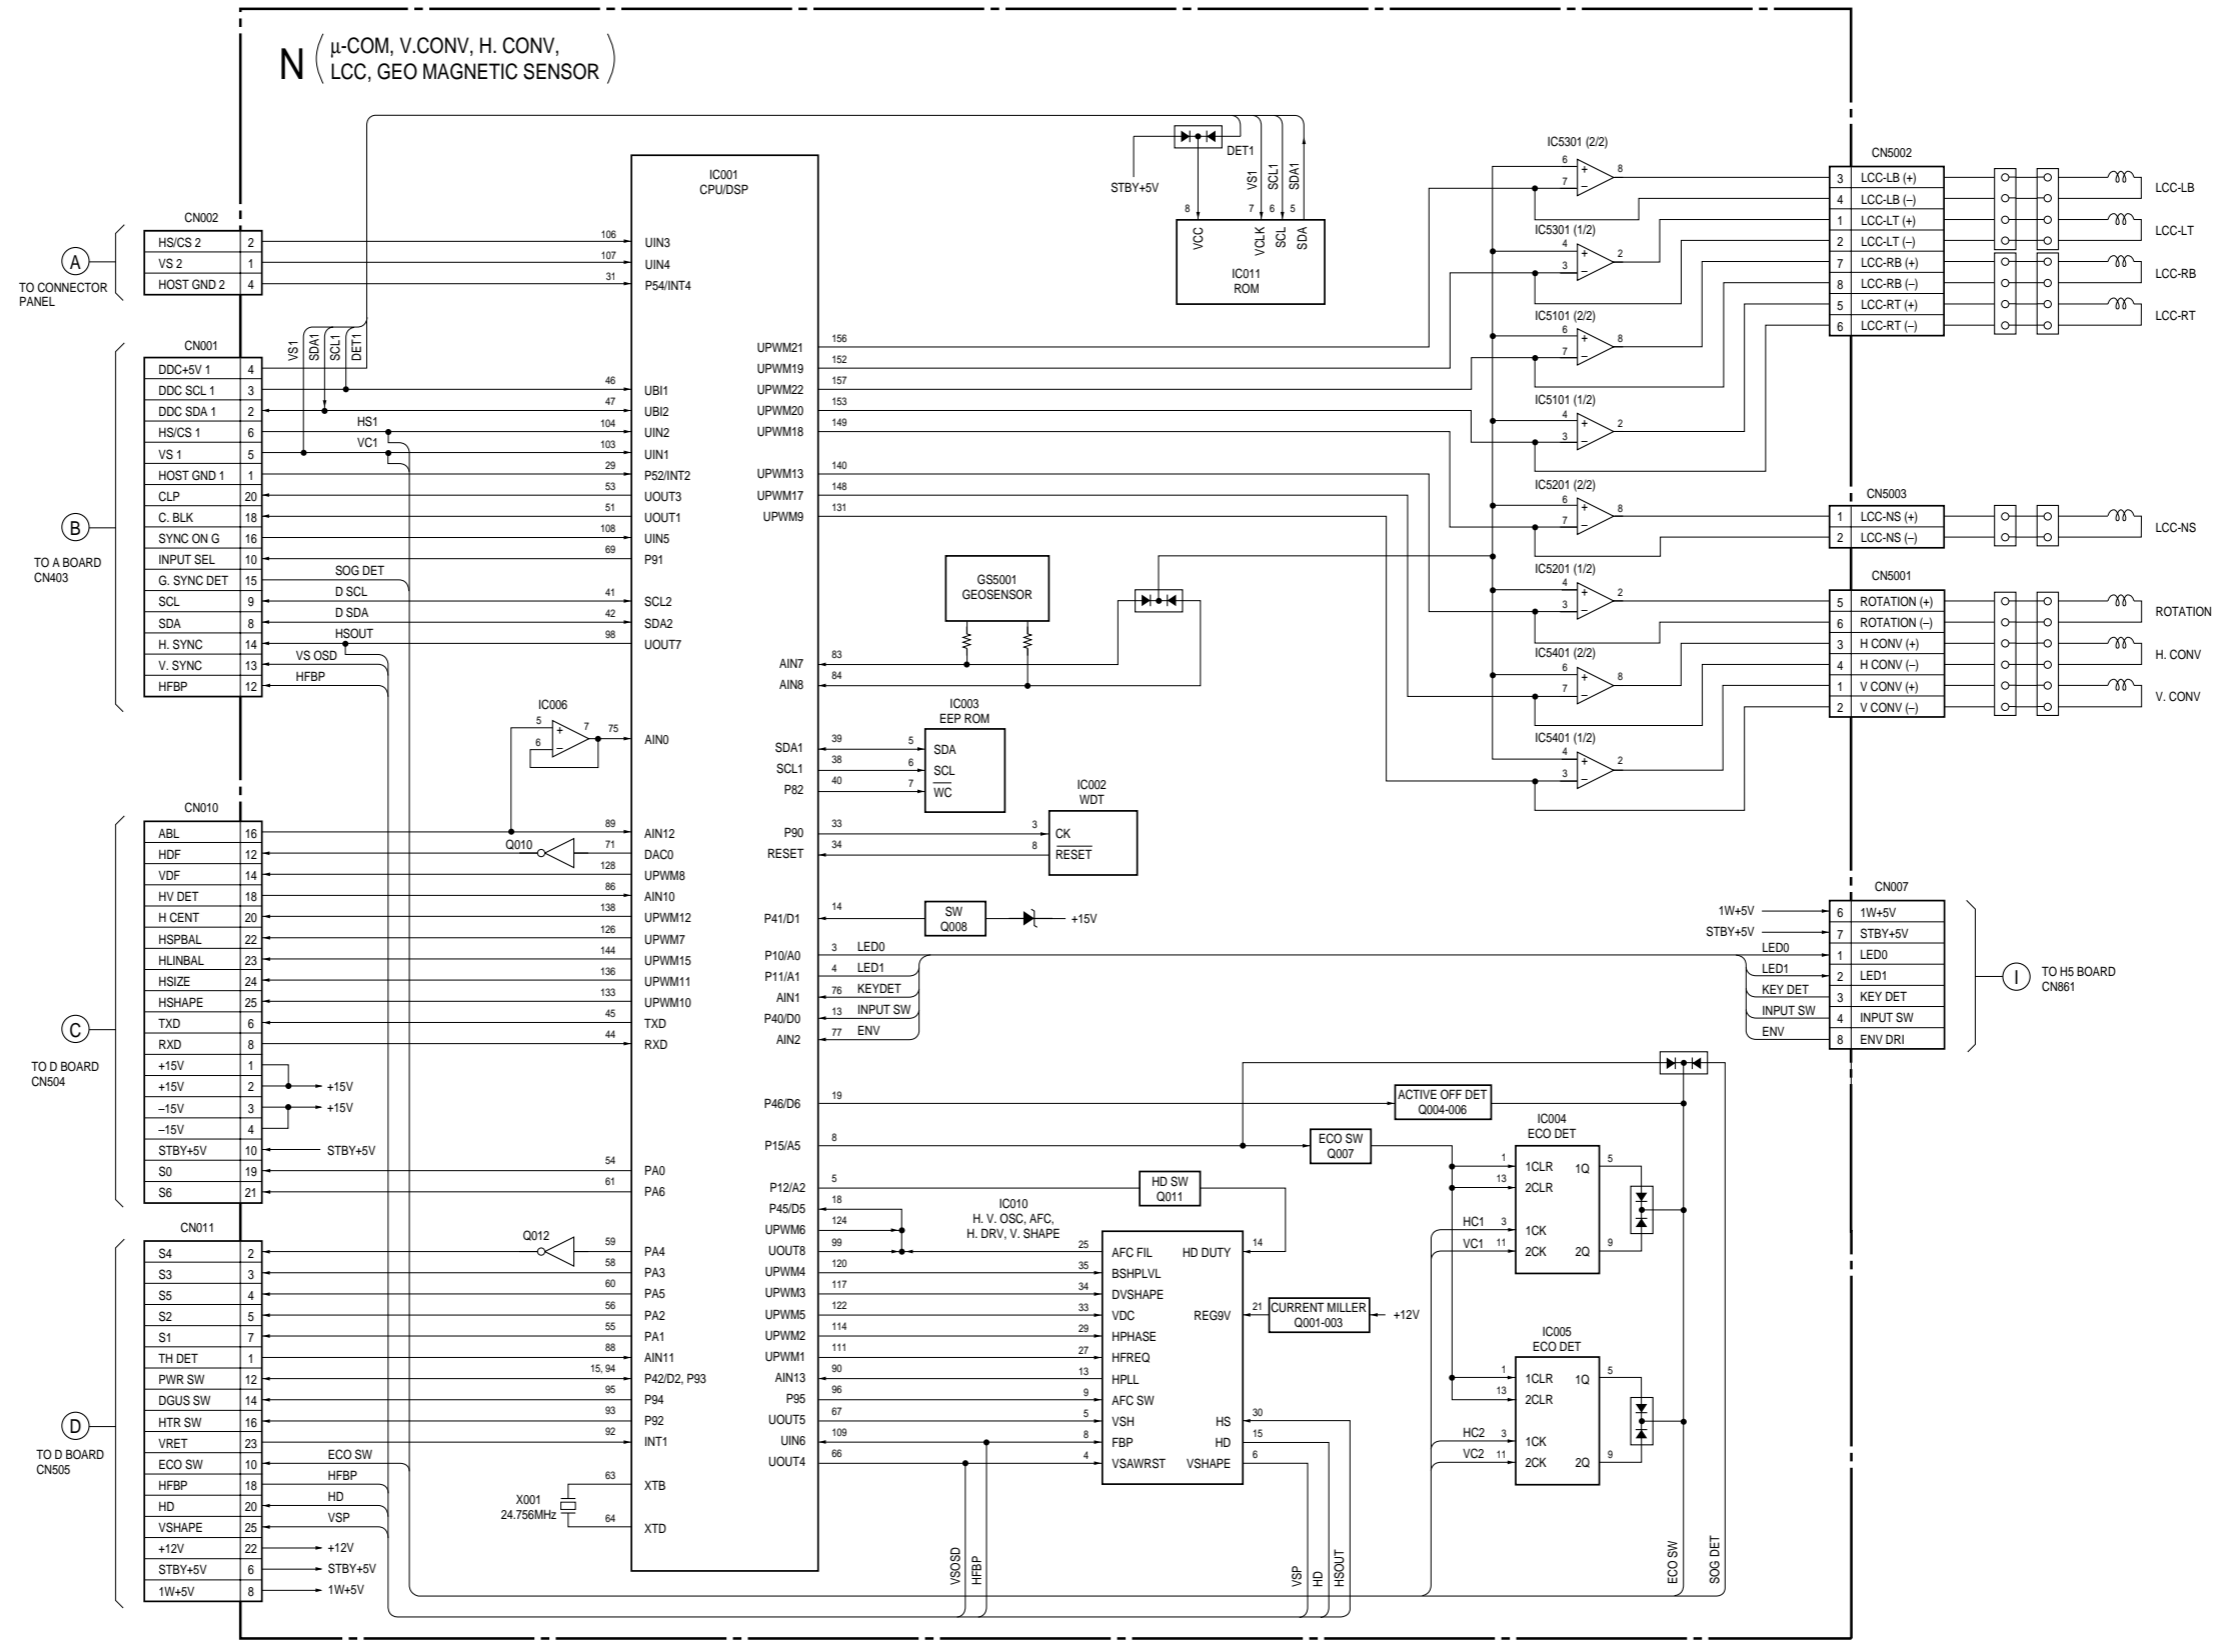


B-SS3531-UIC>BD2-EPS05

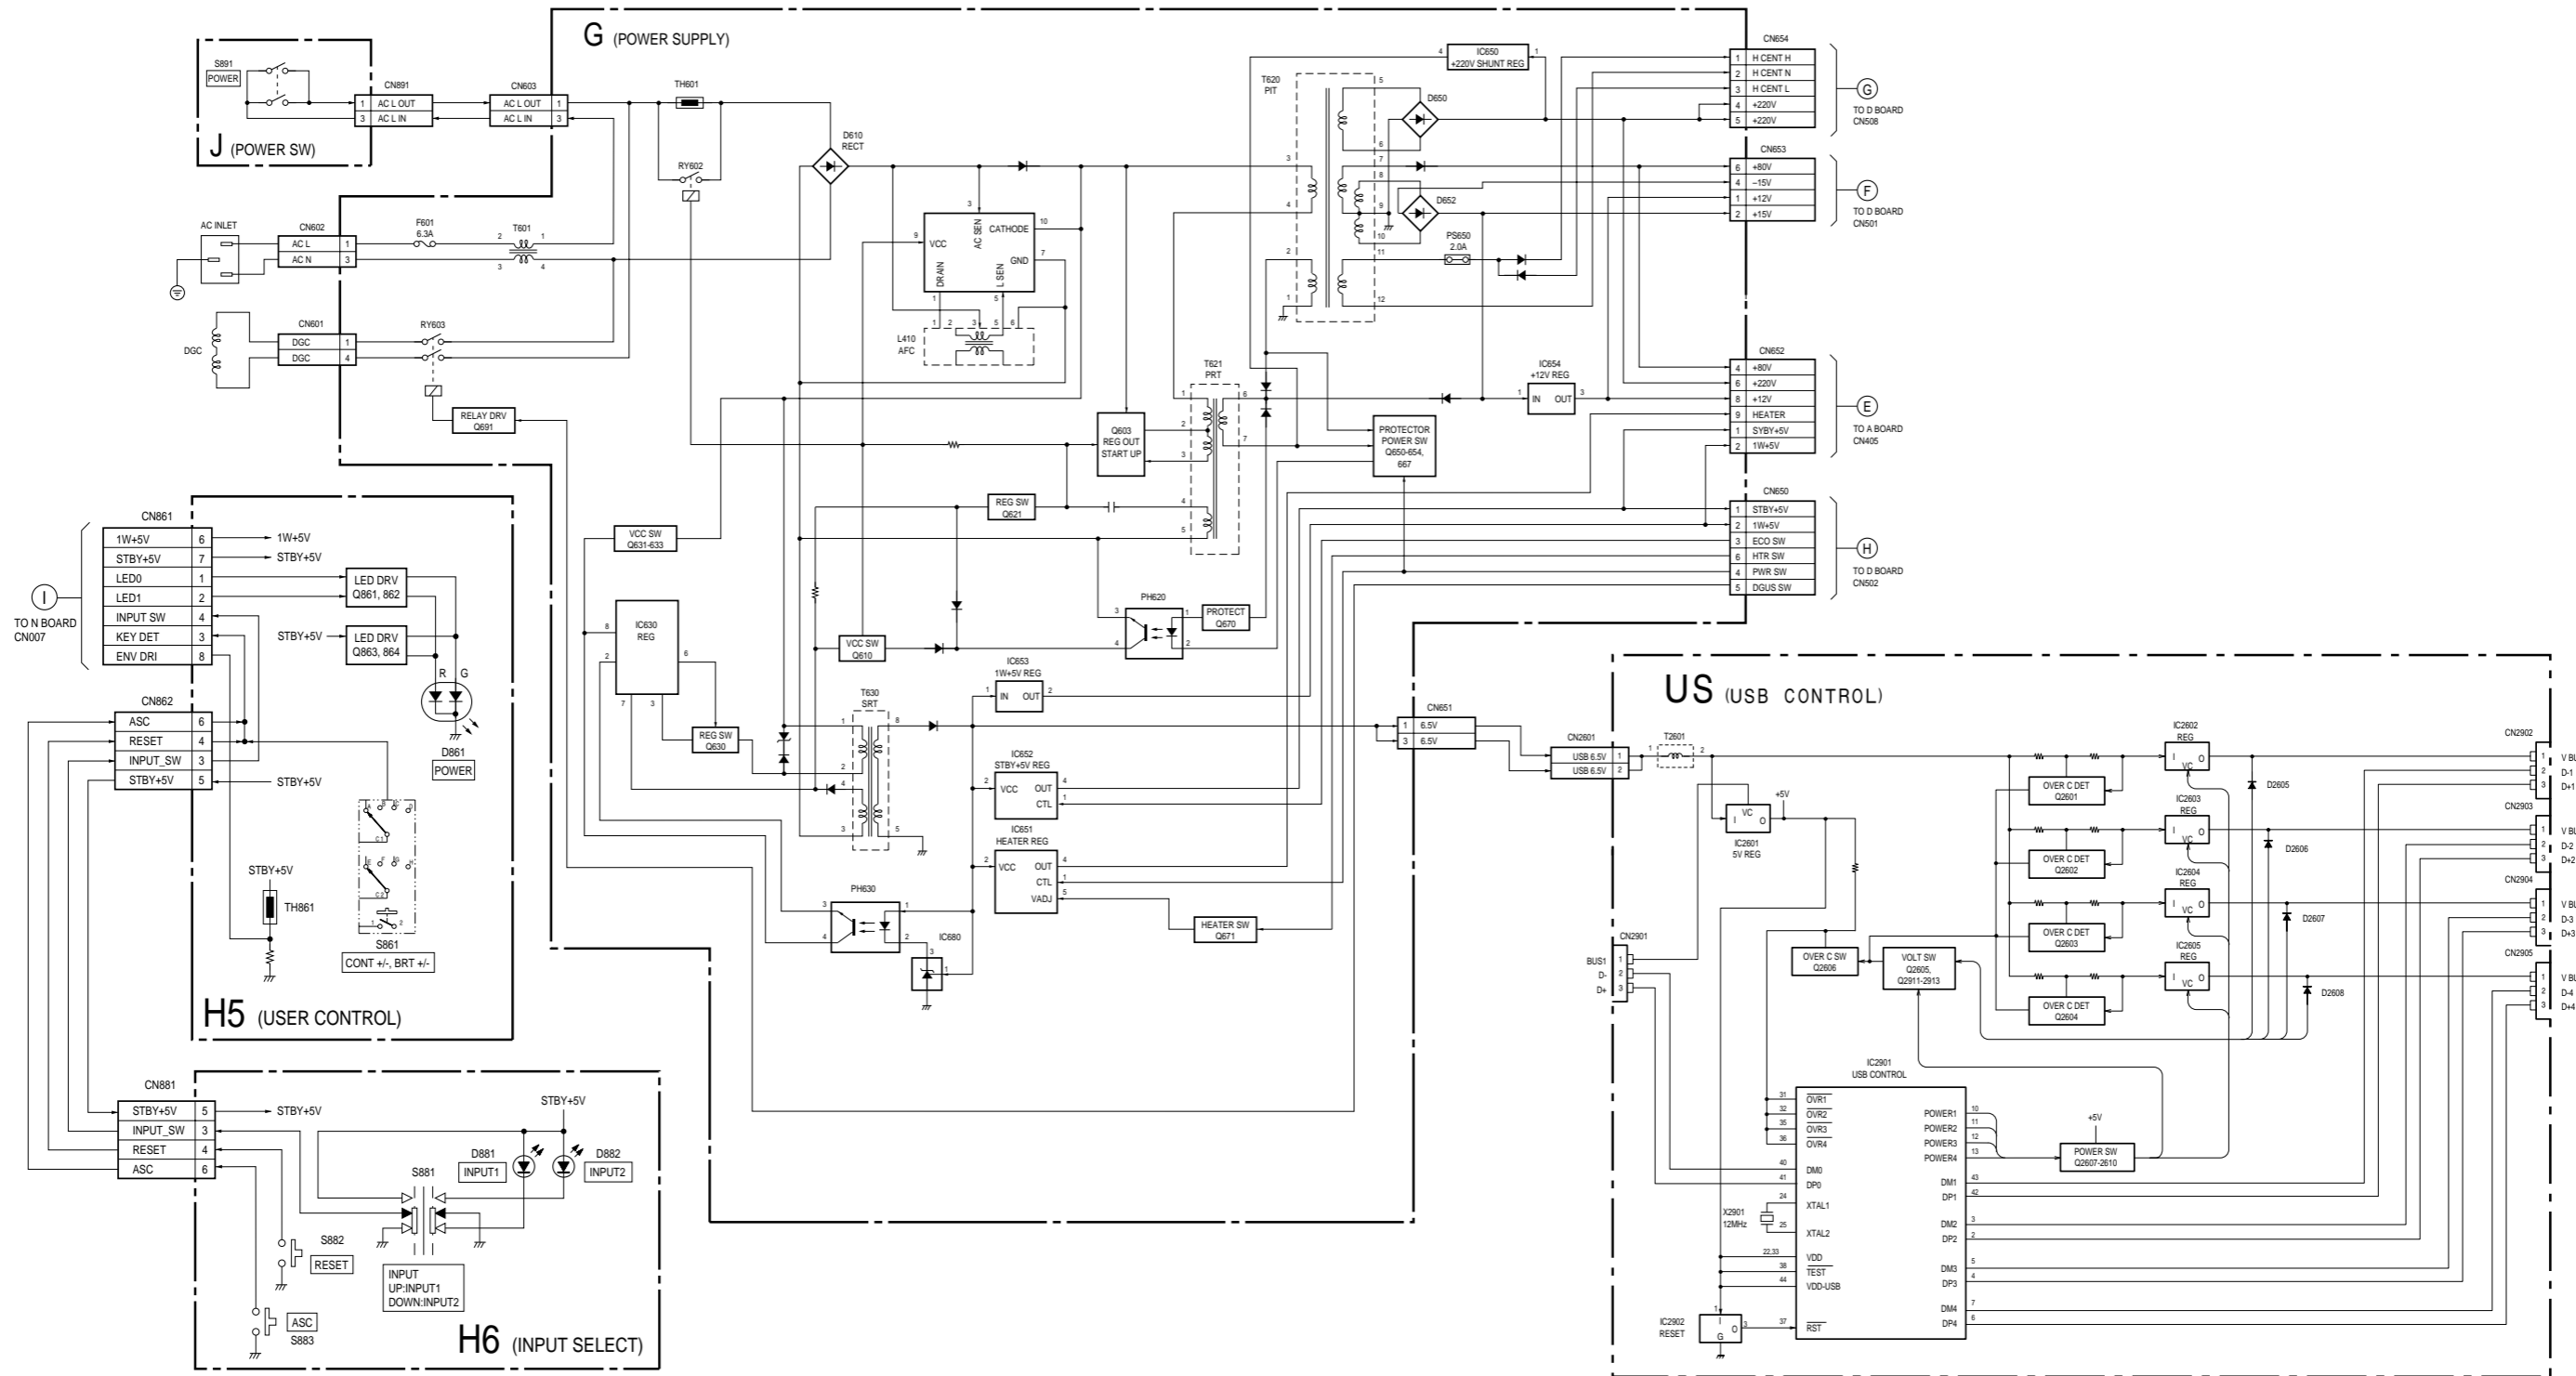

5-2. FRAME SCHEMATIC DIAGRAM

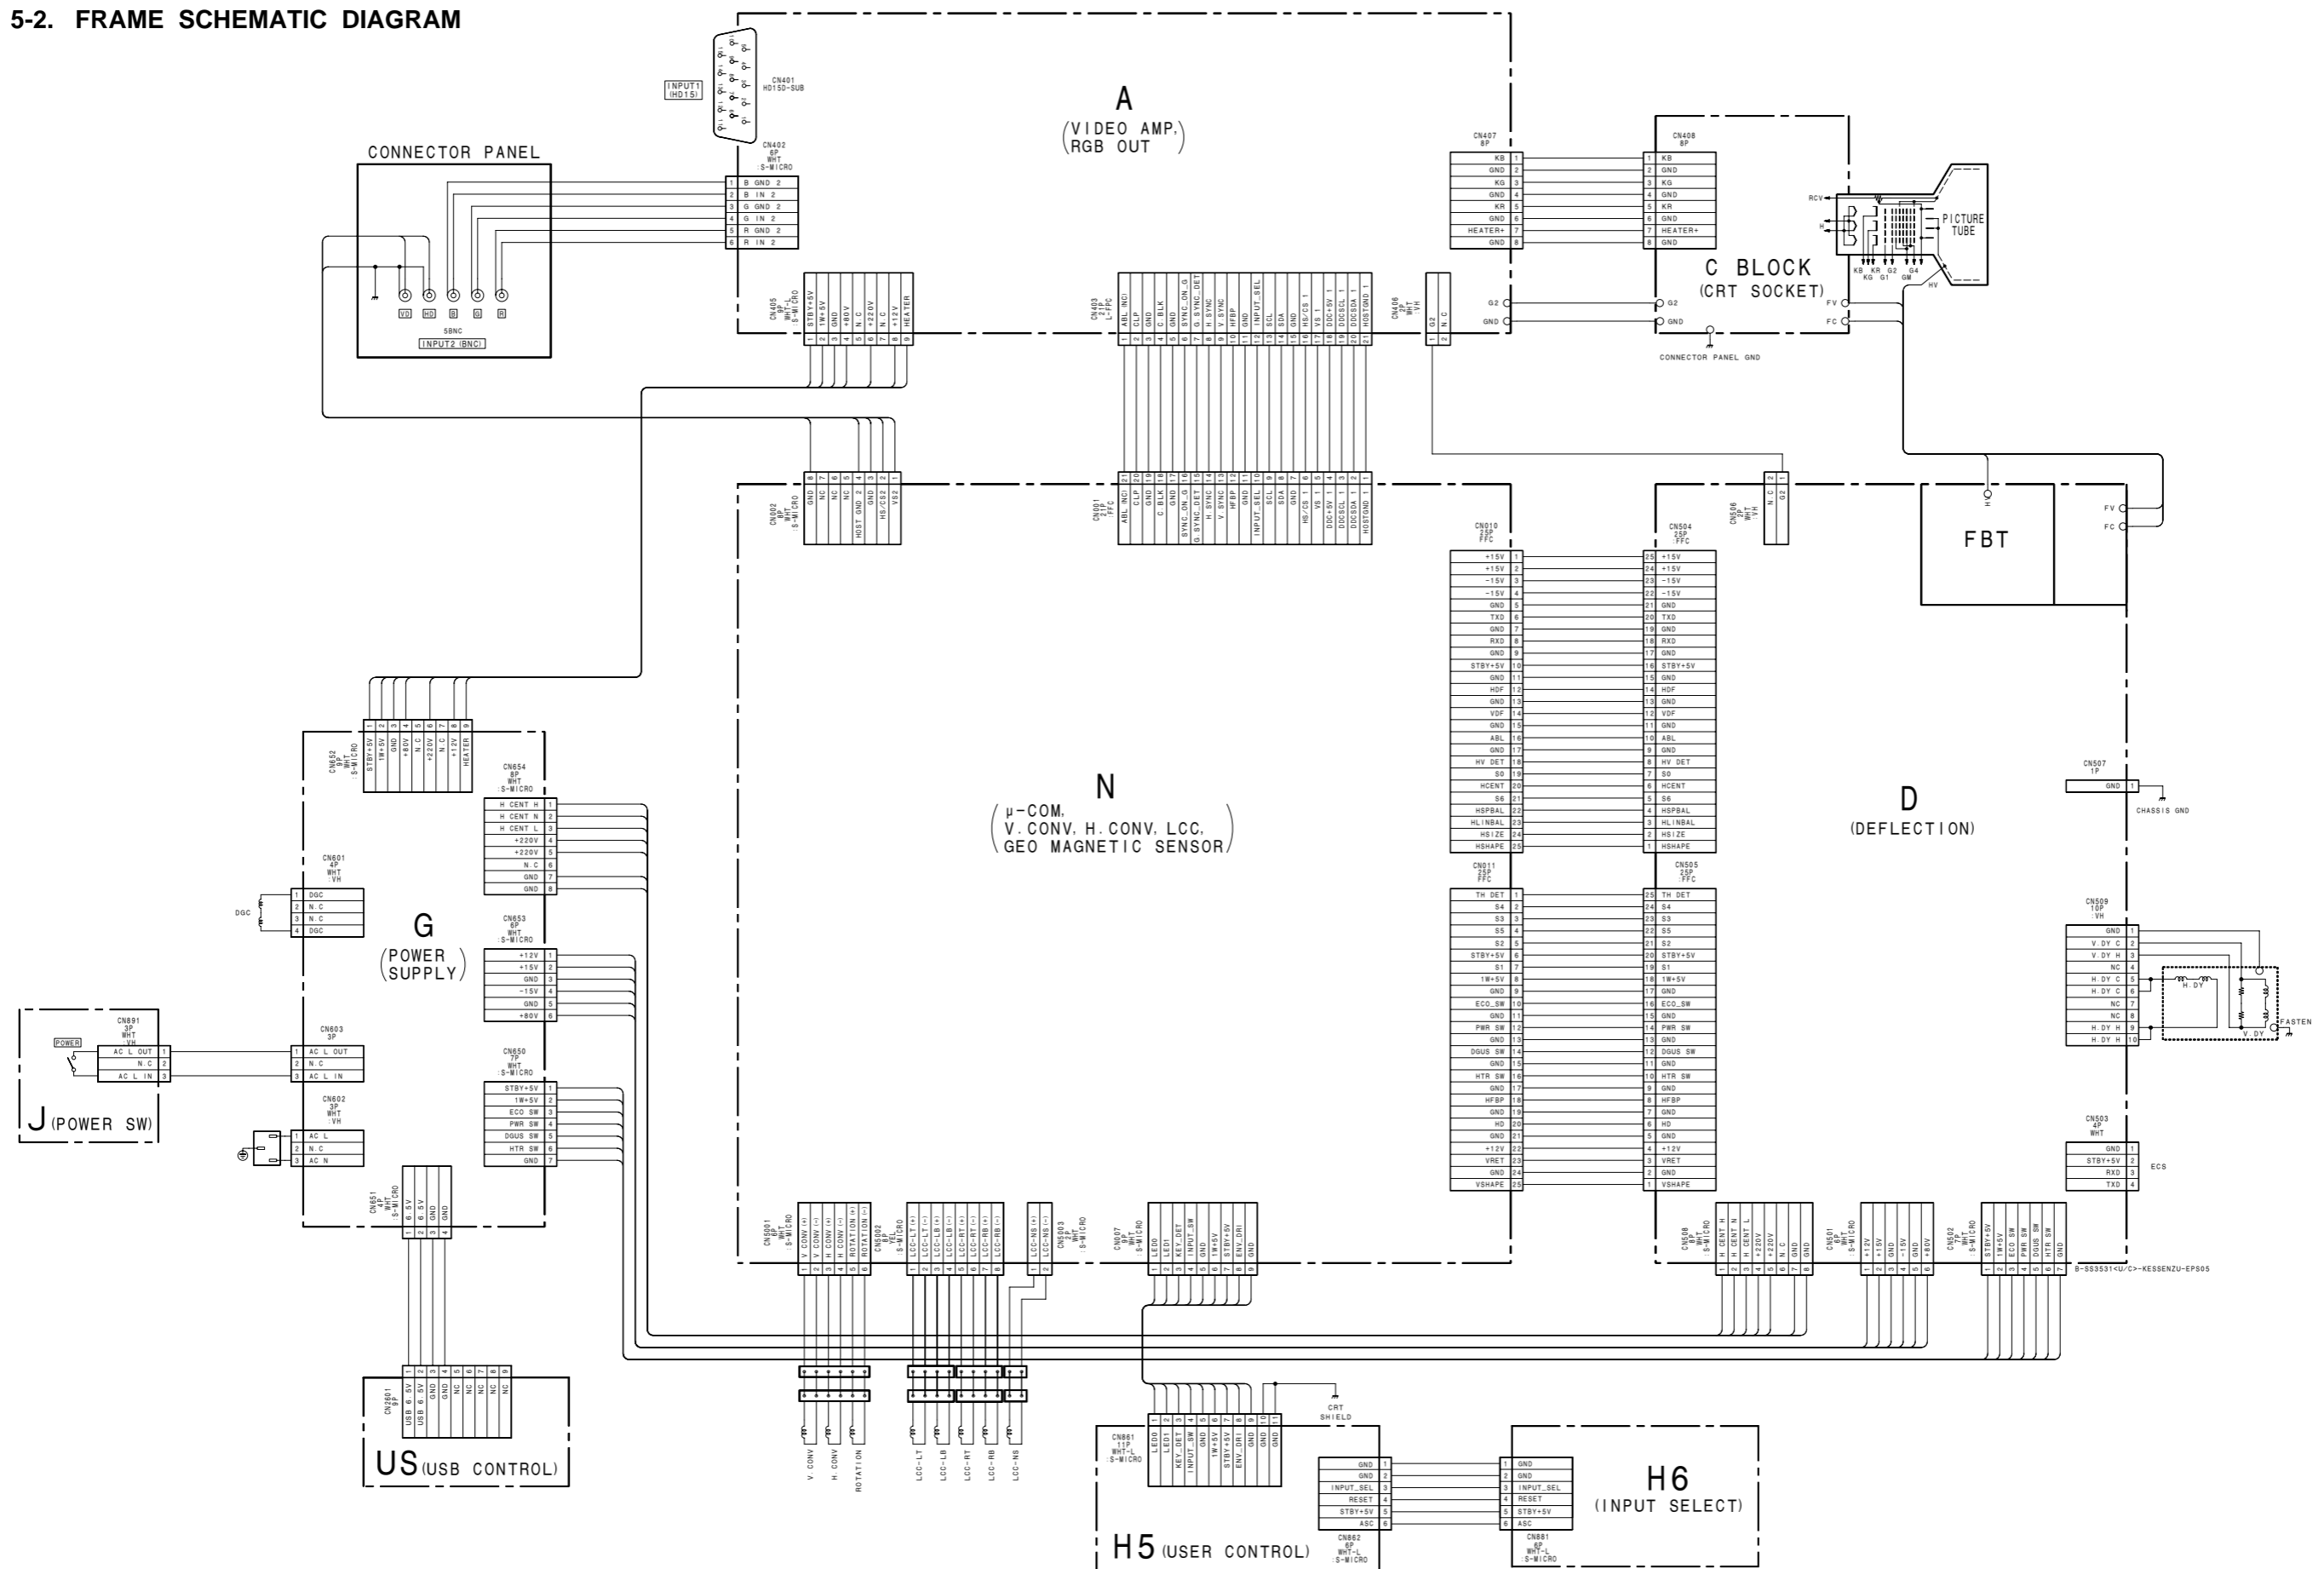

### 5-3. CIRCUIT BOARDS LOCATION

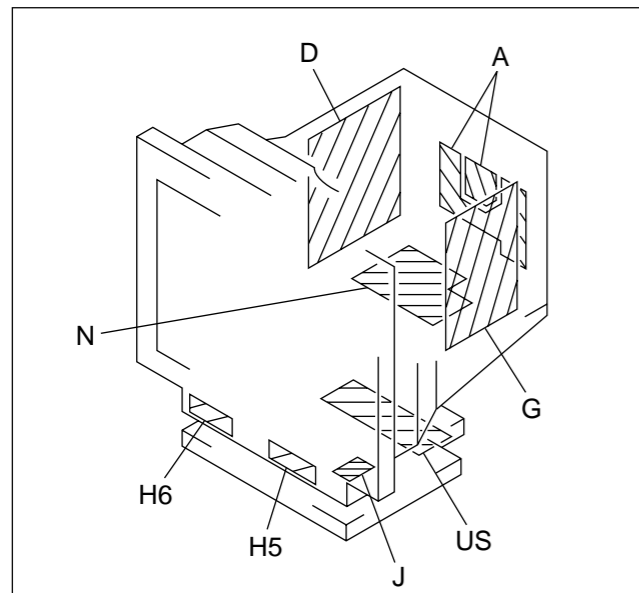

### 5-4. SCHEMATIC DIAGRAMS AND PRINTED WIRING BOARDS

**Note:**

- All capacitors are in  $\mu\text{F}$  unless otherwise noted. (pF:  $\mu\text{F}$ ) Capacitors without voltage indication are all 50 V.
- Indication of resistance, which does not have one for rating electrical power, is as follows.

Pitch: 5 mm  
Rating electrical power 1/4 W (CHIP : 1/10 W)


- All resistors are in ohms.
- : nonflammable resistor.
- : fusible resistor.
- $\Delta$  : internal component.
- : panel designation, and adjustment for repair.
- All variable and adjustable resistors have characteristic curve B, unless otherwise noted.
- $\perp$  : earth-ground.
- $\text{⏏}$  : earth-chassis.
- The components identified by in this basic schematic diagram have been carefully factory-selected for each set in order to satisfy regulations regarding X-ray radiation. Should replacement be required, replace only with the value originally used.
- When replacing components identified by , make the necessary adjustments indicated. (See page 3-1)
- When replacing the part in below table, be sure to perform the related adjustment.

**Note: The components identified by shading and mark  $\Delta$  are critical for safety. Replace only with part number specified.**

**Note: Les composants identifiés par un tramé et une marque  $\Delta$  sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.**

- All voltages are in V.
- Readings are taken with a 10 M $\Omega$  digital multimeter.
- Readings are taken with a color-bar signal input.
- Voltage variations may be noted due to normal production tolerances.
- \* : Can not be measured.
- Circled numbers are waveform references.
- : B + bus.
- : B - bus.

- Divided circuit diagram  
One sheet of N board circuit diagram is divided into three sheets, each having the code N- $\text{\textcircled{a}}$  to N- $\text{\textcircled{c}}$ . For example, the destination  $\text{\textcircled{ab1}}$  on the code N- $\text{\textcircled{a}}$  sheet is connected to  $\text{\textcircled{ab1}}$  on the N- $\text{\textcircled{b}}$  sheet.

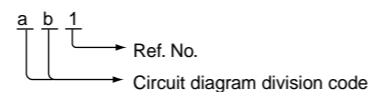

	Part Replaced ()
HV ADJ	RV901

	Part Replaced ()
HV Regulator Circuit Check	D Board C920, IC901, R923, R924, R929, R945, RV901, T902(FBT) • Mounted D Board
HV Protector Circuit Check	D Board C922, C925, C926, D912, D914, D915, D921, Q907, Q908, R921, R922, R932, R937, R939, T902(FBT) • Mounted D Board
Beam Current Protector Circuit Check	D Board C910, C921, C933, D901, D902, D913, IC503, IC901, R901, R920, R928, R930, R931, R940, R941, T902(FBT) • Mounted D Board G Board IC652 • Mounted G Board N Board IC001, R031, R032 • Mounted N Board


### Terminal name of semiconductors in silk screen printed circuit (\*)

	Device	Printed symbol	Terminal name	Circuit
①	Transistor		Collector Base Emitter	
②	Transistor		Collector Base Emitter	
③	Diode		Cathode Anode	
④	Diode		Cathode Anode (NC)	
⑤	Diode		Cathode Anode (NC)	
⑥	Diode		Common Anode Cathode	
⑦	Diode		Common Anode Cathode	
⑧	Diode		Common Anode Anode	
⑨	Diode		Common Anode Anode	
⑩	Diode		Common Cathode Cathode	
⑪	Diode		Common Cathode Cathode	
⑫	Diode		Anode Cathode Anode Cathode	
⑬	Transistor (FET)		Drain Source Gate	
⑭	Transistor (FET)		Drain Source Gate	
⑮	Transistor (FET)		Source Drain Gate	
⑯	Transistor		Emitter Collector Base	
—	Discrete semiconductor			

(Chip semiconductors that are not actually used are included.)



Ver.1.6

(1) Schematic Diagram of A Board

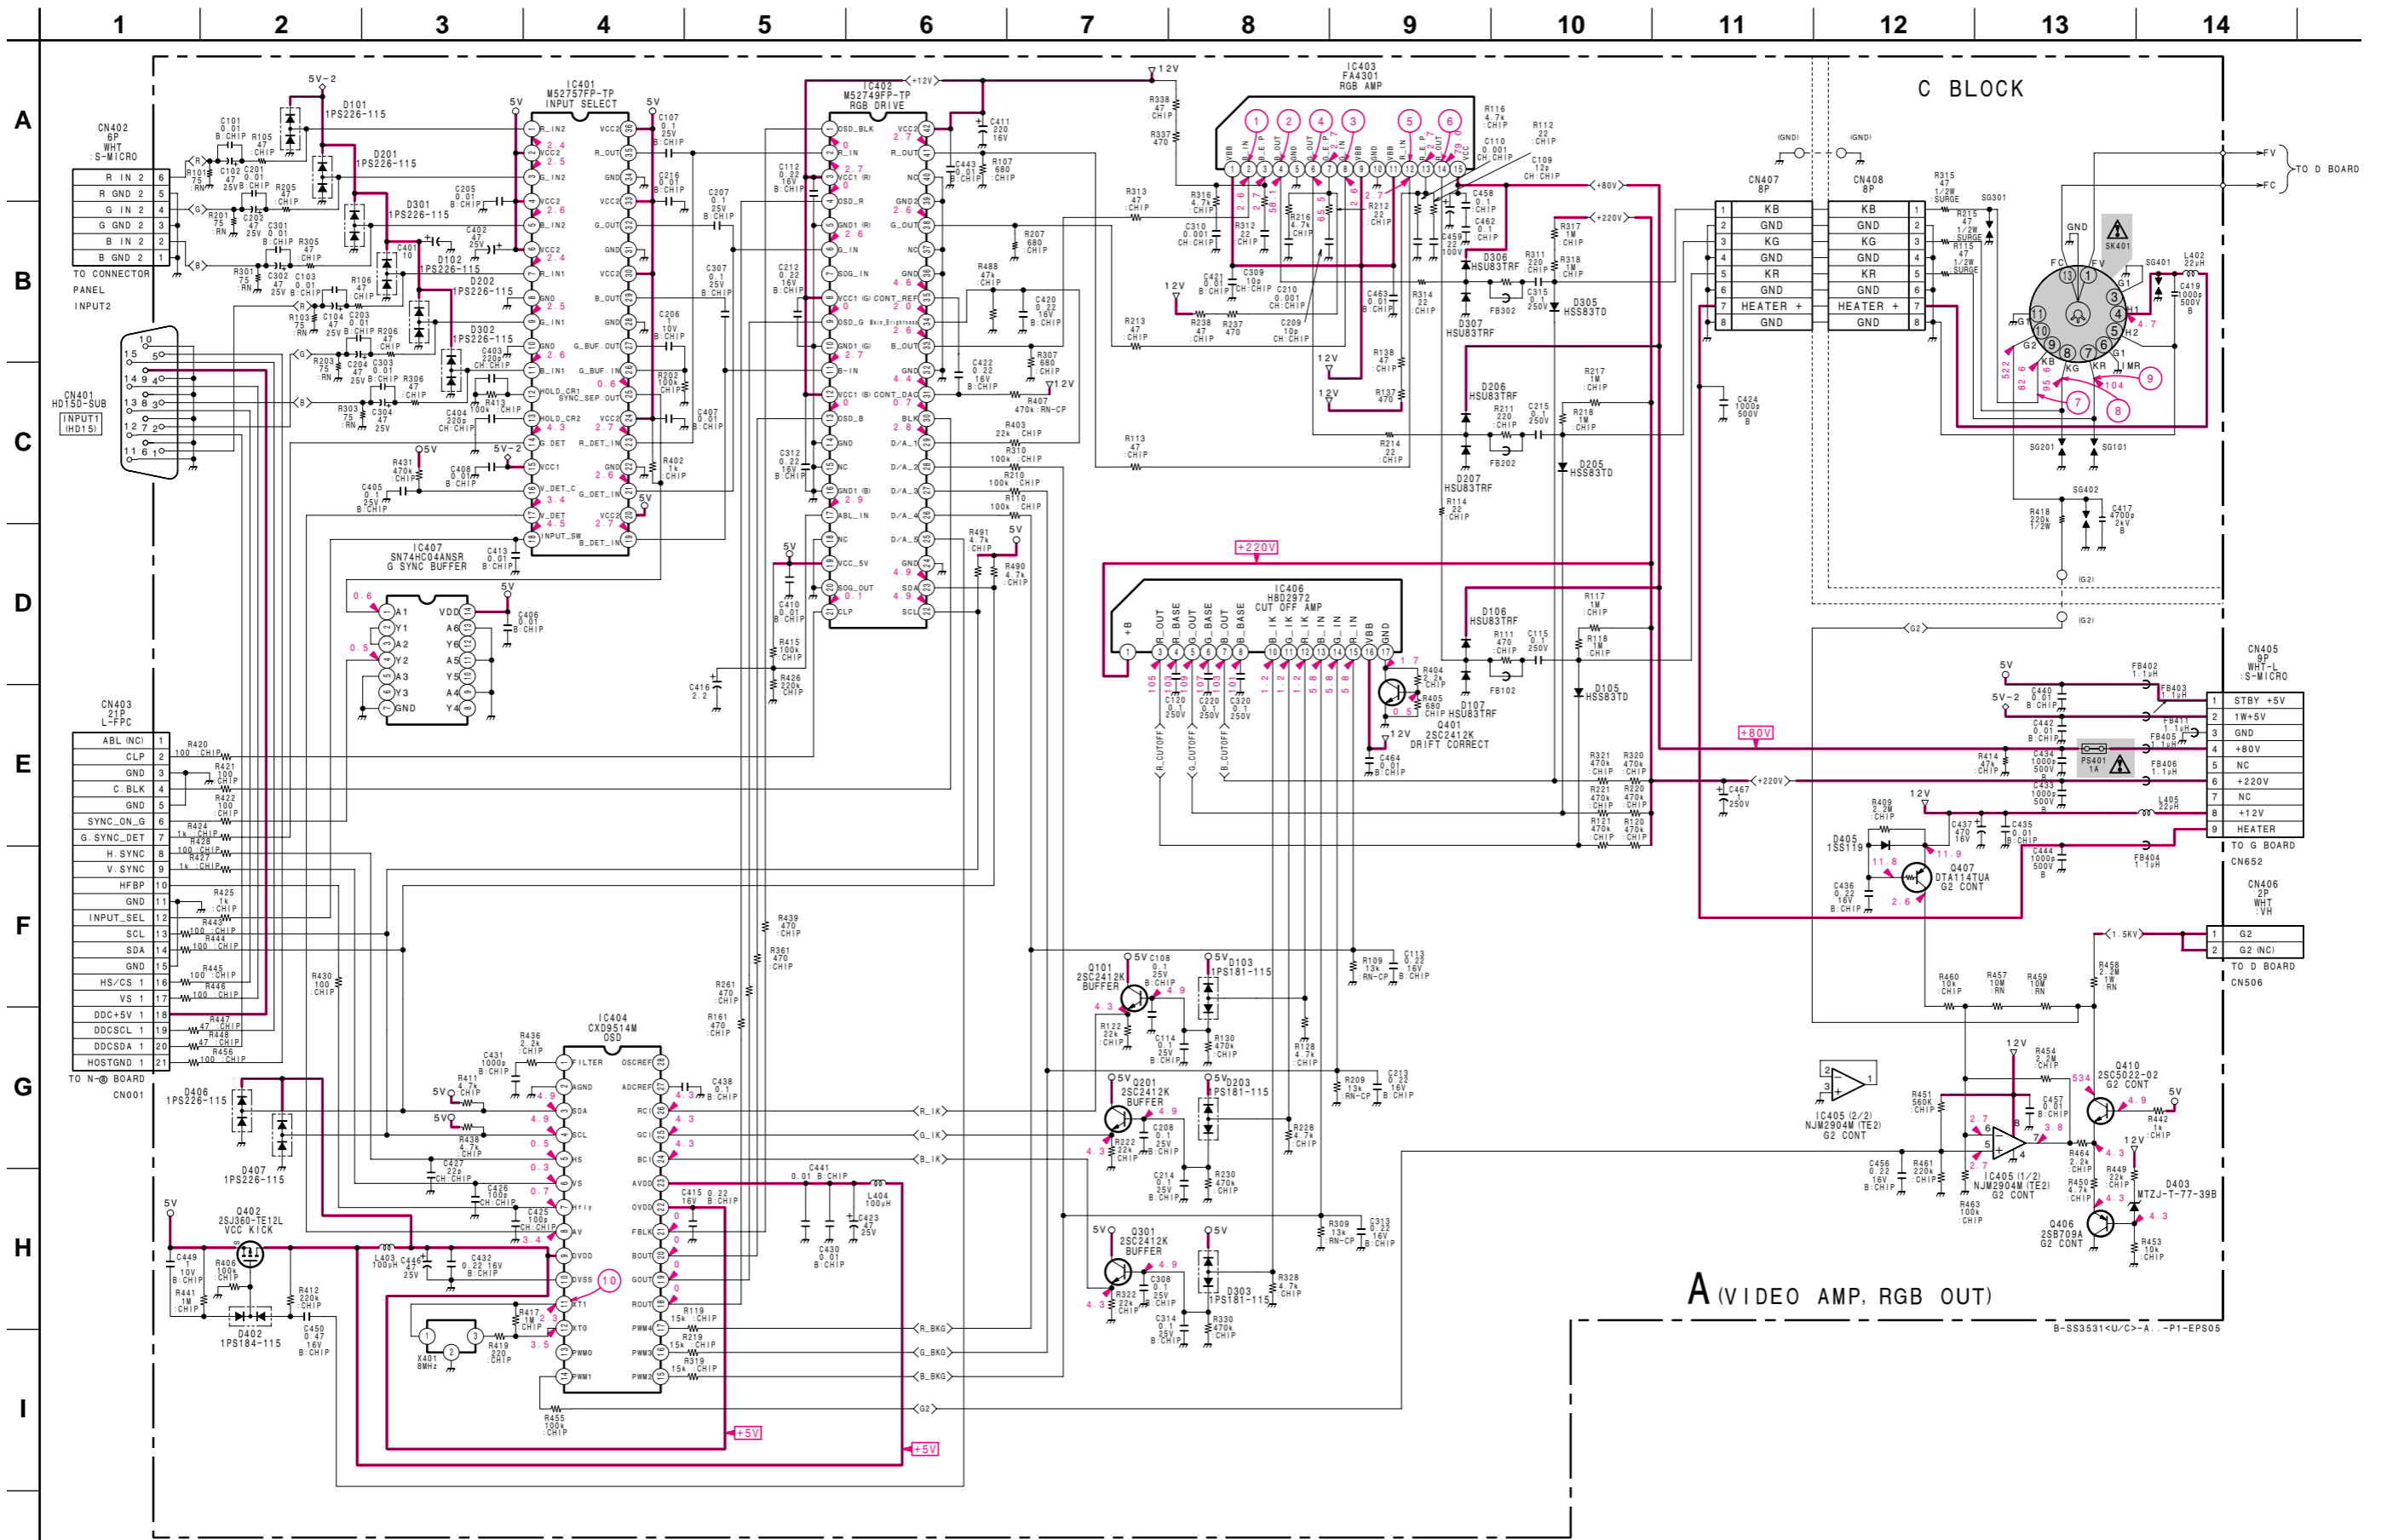


Schematic diagram

A board →

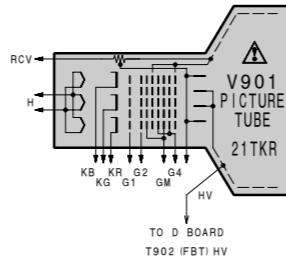
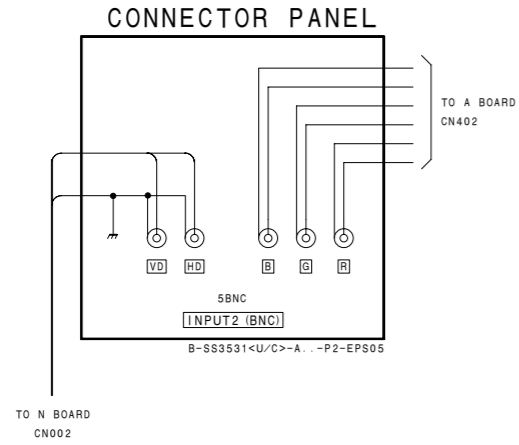


• A BOARD IC401 M52757FP

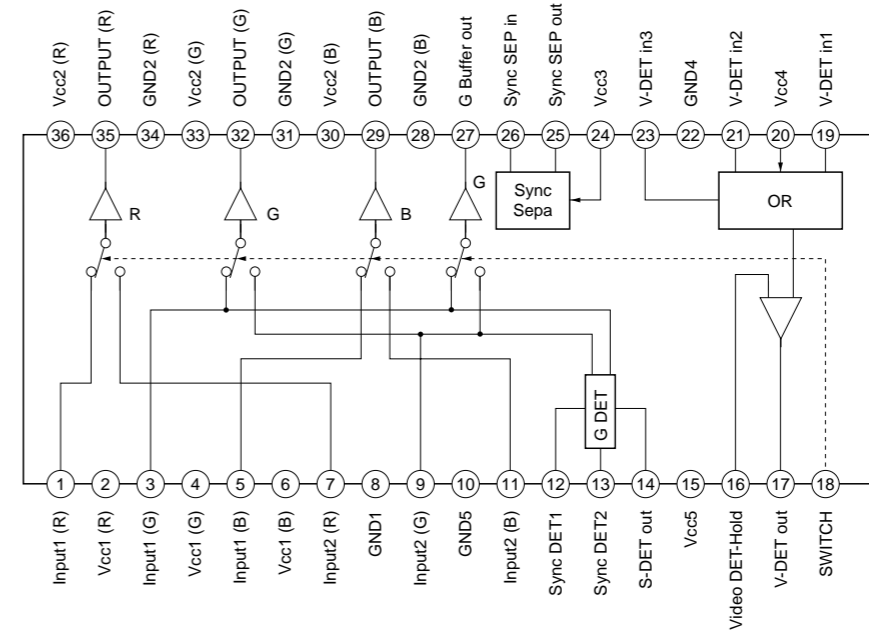


• A BOARD IC402 M52749FP

• A BOARD WAVEFORMS

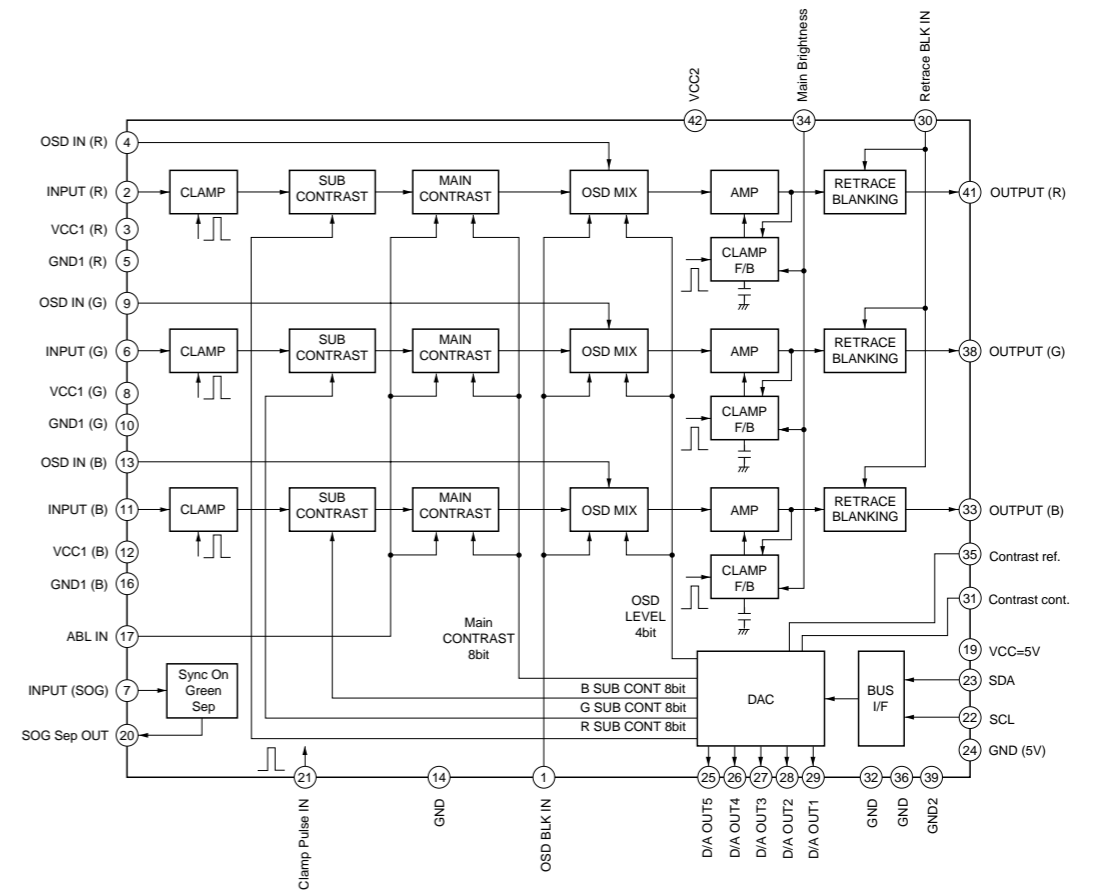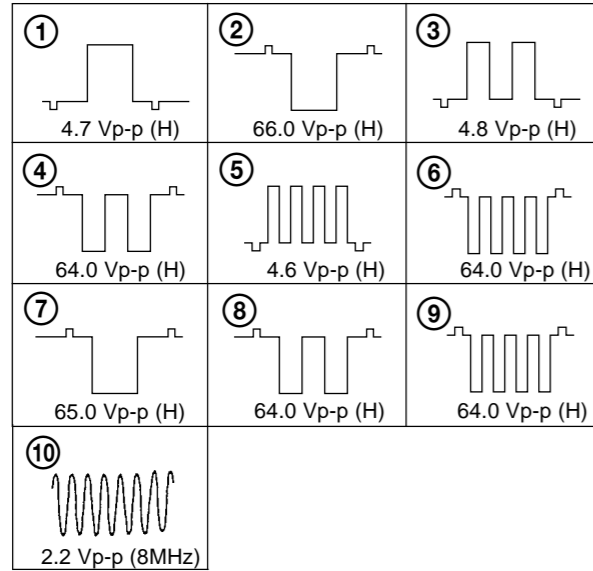



— A BOARD (Conductor Side) —

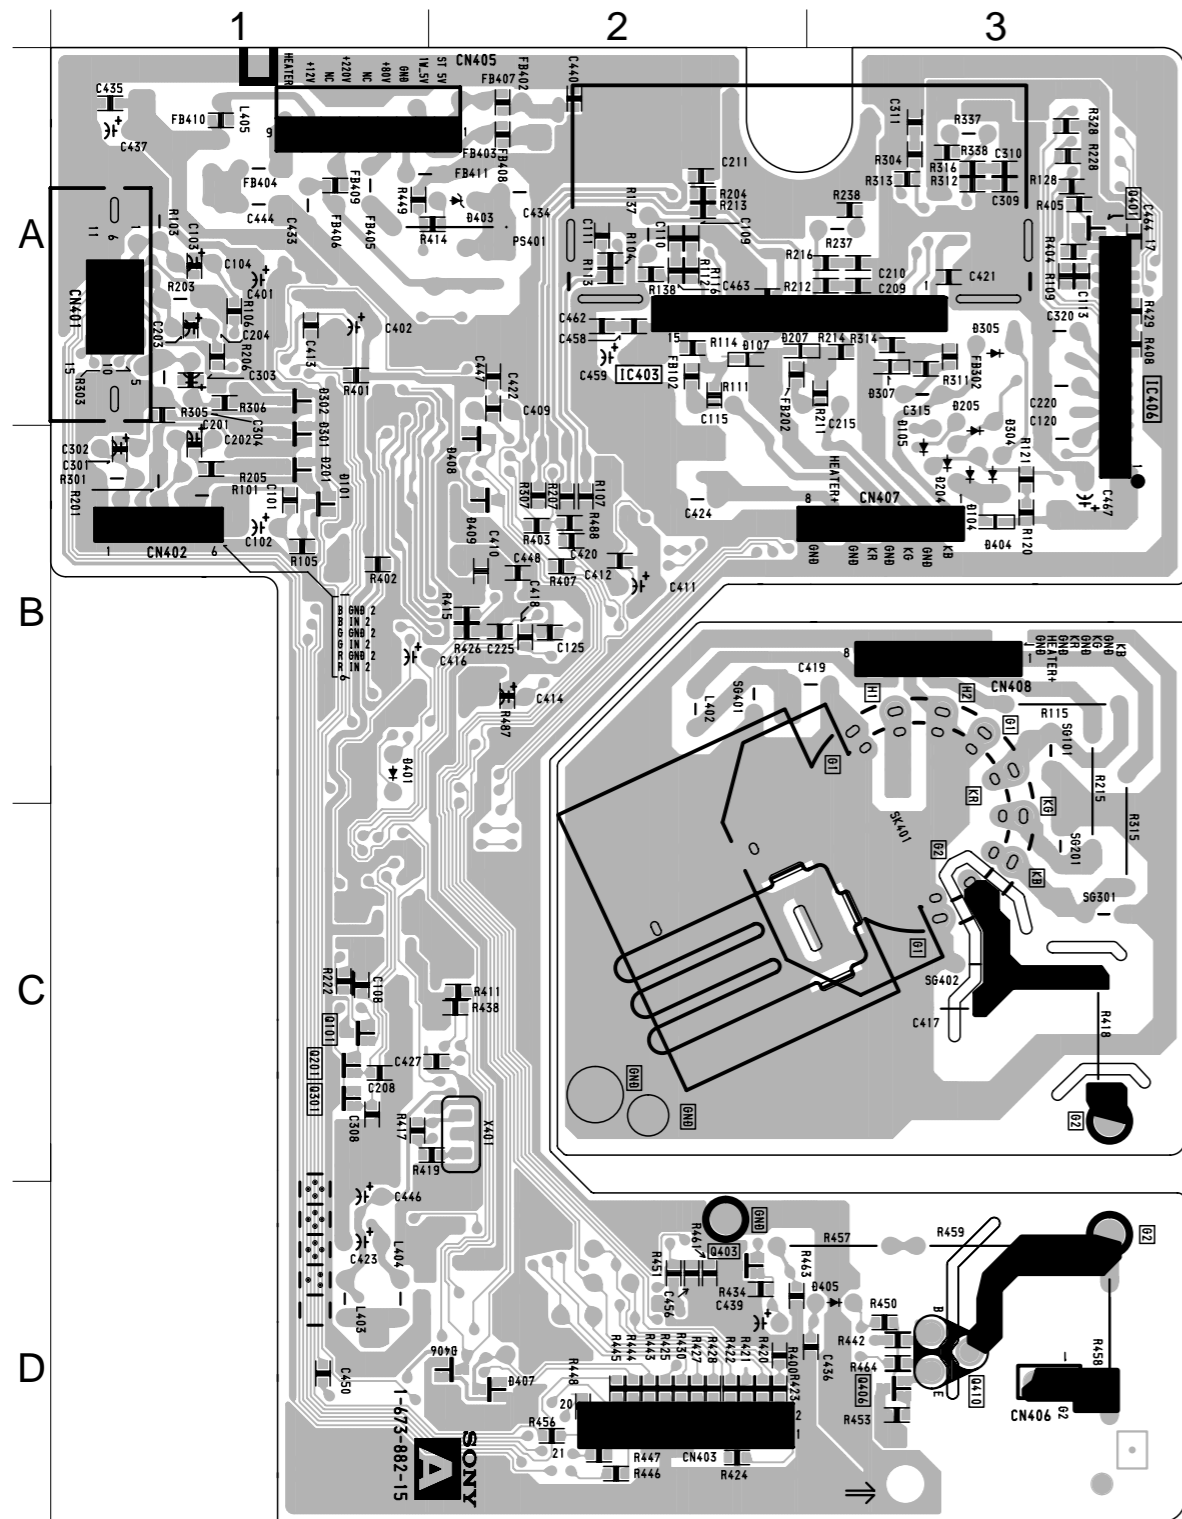

• A BOARD  
SEMICONDUCTOR  
LOCATION

IC		(Conductor Side)	(Component Side)
IC401			B-3
IC402			B-2
IC403		A-2	A-2
IC404			C-3
IC405			D-2
IC406		A-3	A-1
IC407			D-2

TRANSISTOR		(Conductor Side)	(Component Side)	*
Q101		C-1		⊙
Q201		C-1		⊙
Q301		C-1		⊙
Q401		A-3		⊙
Q402			D-3	⊙
Q406		D-3		⊙
Q407			D-2	⊙
Q410		D-3		⊙


DIODE		(Conductor Side)	(Component Side)	*
D101		B-1		⊙
D102			A-3	⊙
D103			A-1	⊙
D105		B-3	B-1	⊙
D106			A-2	⊙
D107		A-2		⊙
D201		B-1		⊙
D202			A-3	⊙
D203			A-1	⊙
D205		B-3	A-1	⊙
D206			A-1	⊙
D207		A-2		⊙
D301		B-1		⊙
D302		A-1		⊙
D303			A-1	⊙
D305		A-3	A-1	⊙
D306		A-1		⊙
D307		A-3		⊙
D402			D-3	⊙
D403		A-2	A-2	⊙
D405		D-3	D-1	⊙
D406		D-2		⊙
D407		D-2		⊙

CRYSTAL		(Conductor Side)	(Component Side)
X401		C-2	C-2

\*: Refer to Terminal name of semiconductors in silk screen printed circuit (see page 5-10)

— A BOARD (Component Side) —



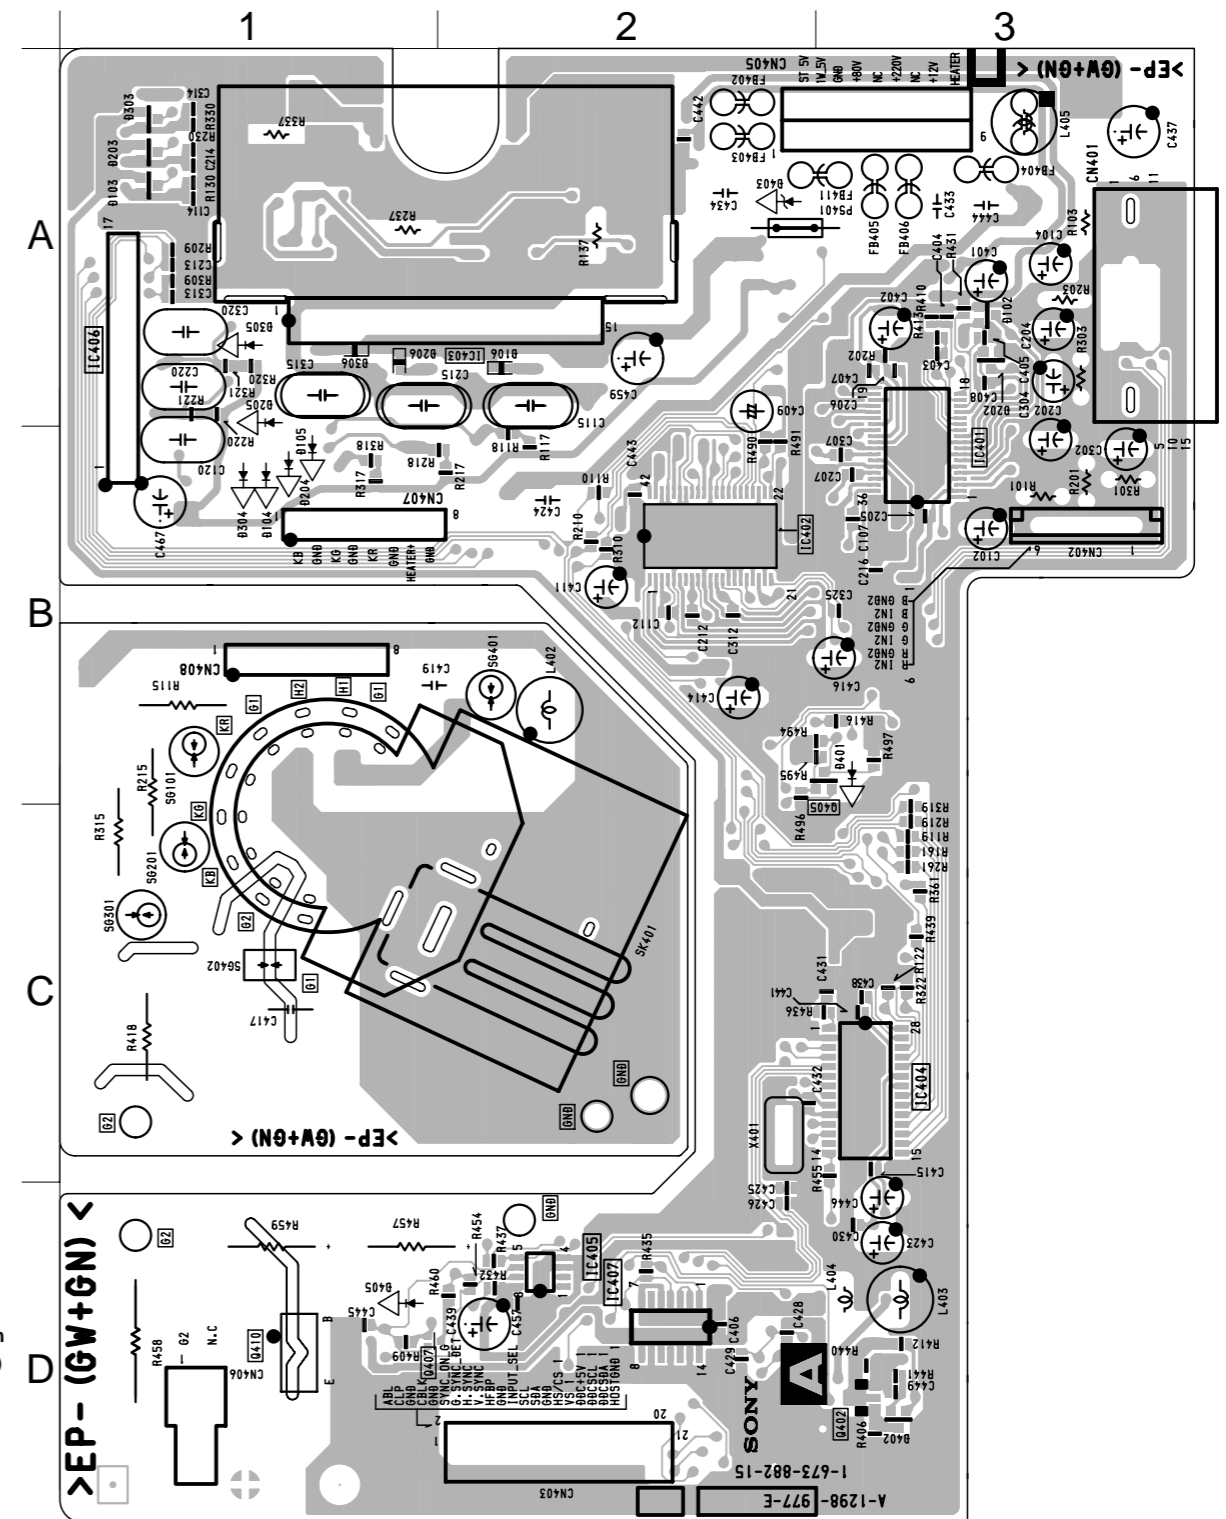


**NOTE:**  
The circuit indicated as left contains high voltage of over 600 Vp-p. Care must be paid to prevent an electric shock in inspection or repairing.


(2) Schematic Diagrams of H5, H6, J Boards

1 2 3 4 5 6 7 8 9 10 11 12 13 14


A  
B  
C  
D  
E  
F  
G  
H  
I  
J

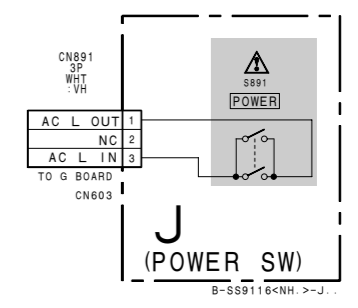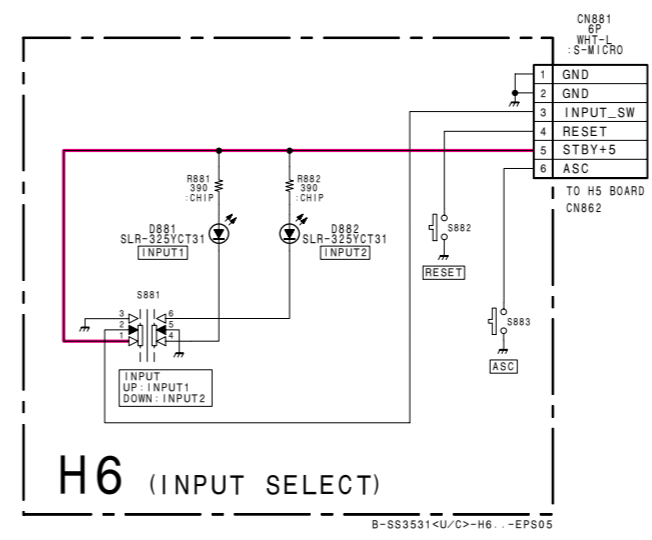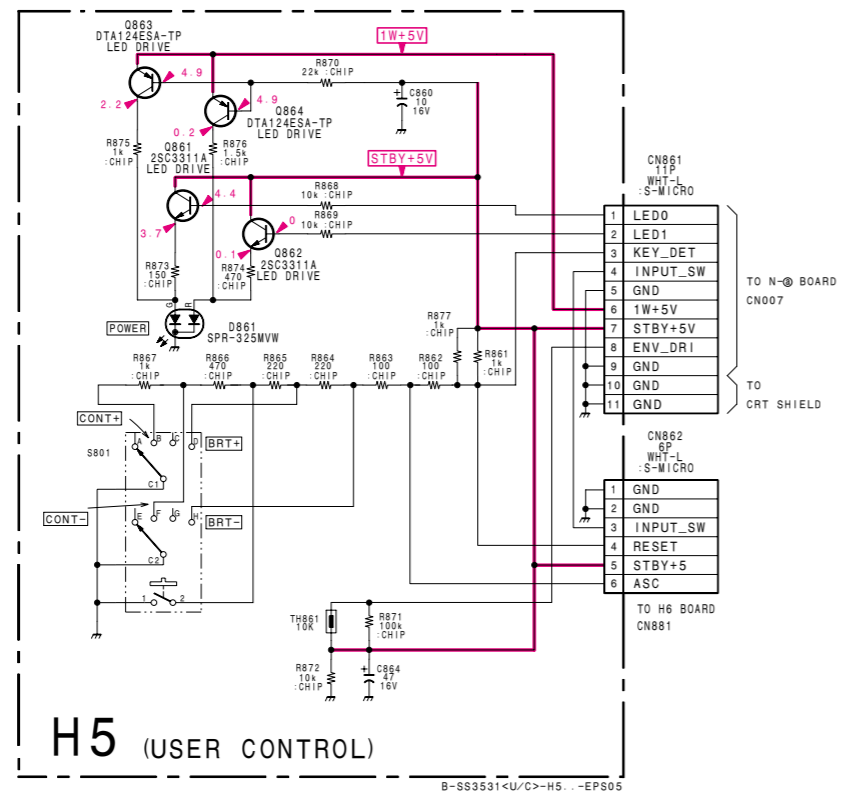


— J BOARD —

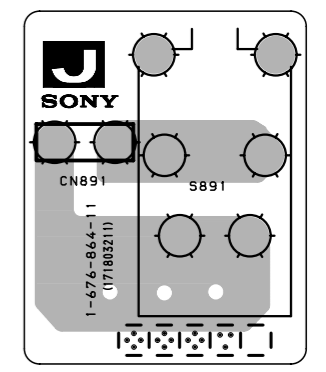


— H5 BOARD —

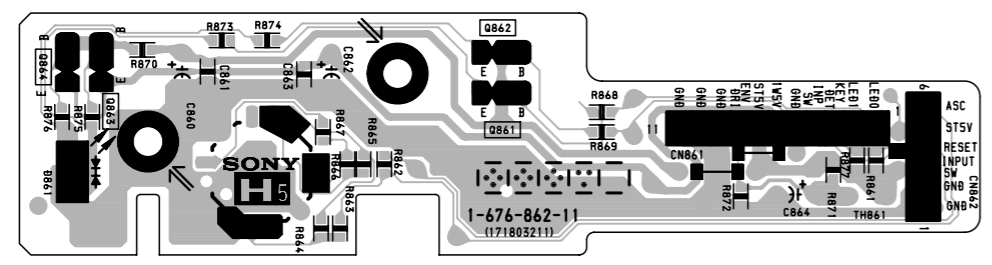

— H6 BOARD —

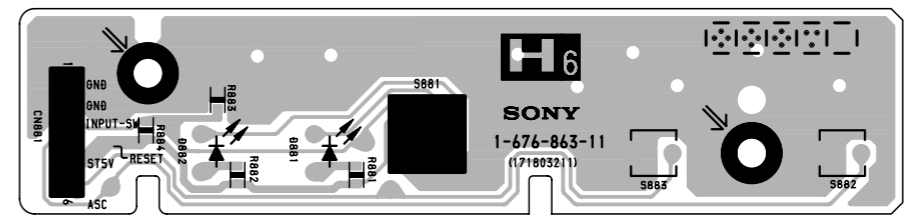

(3) Schematic Diagram of D Board

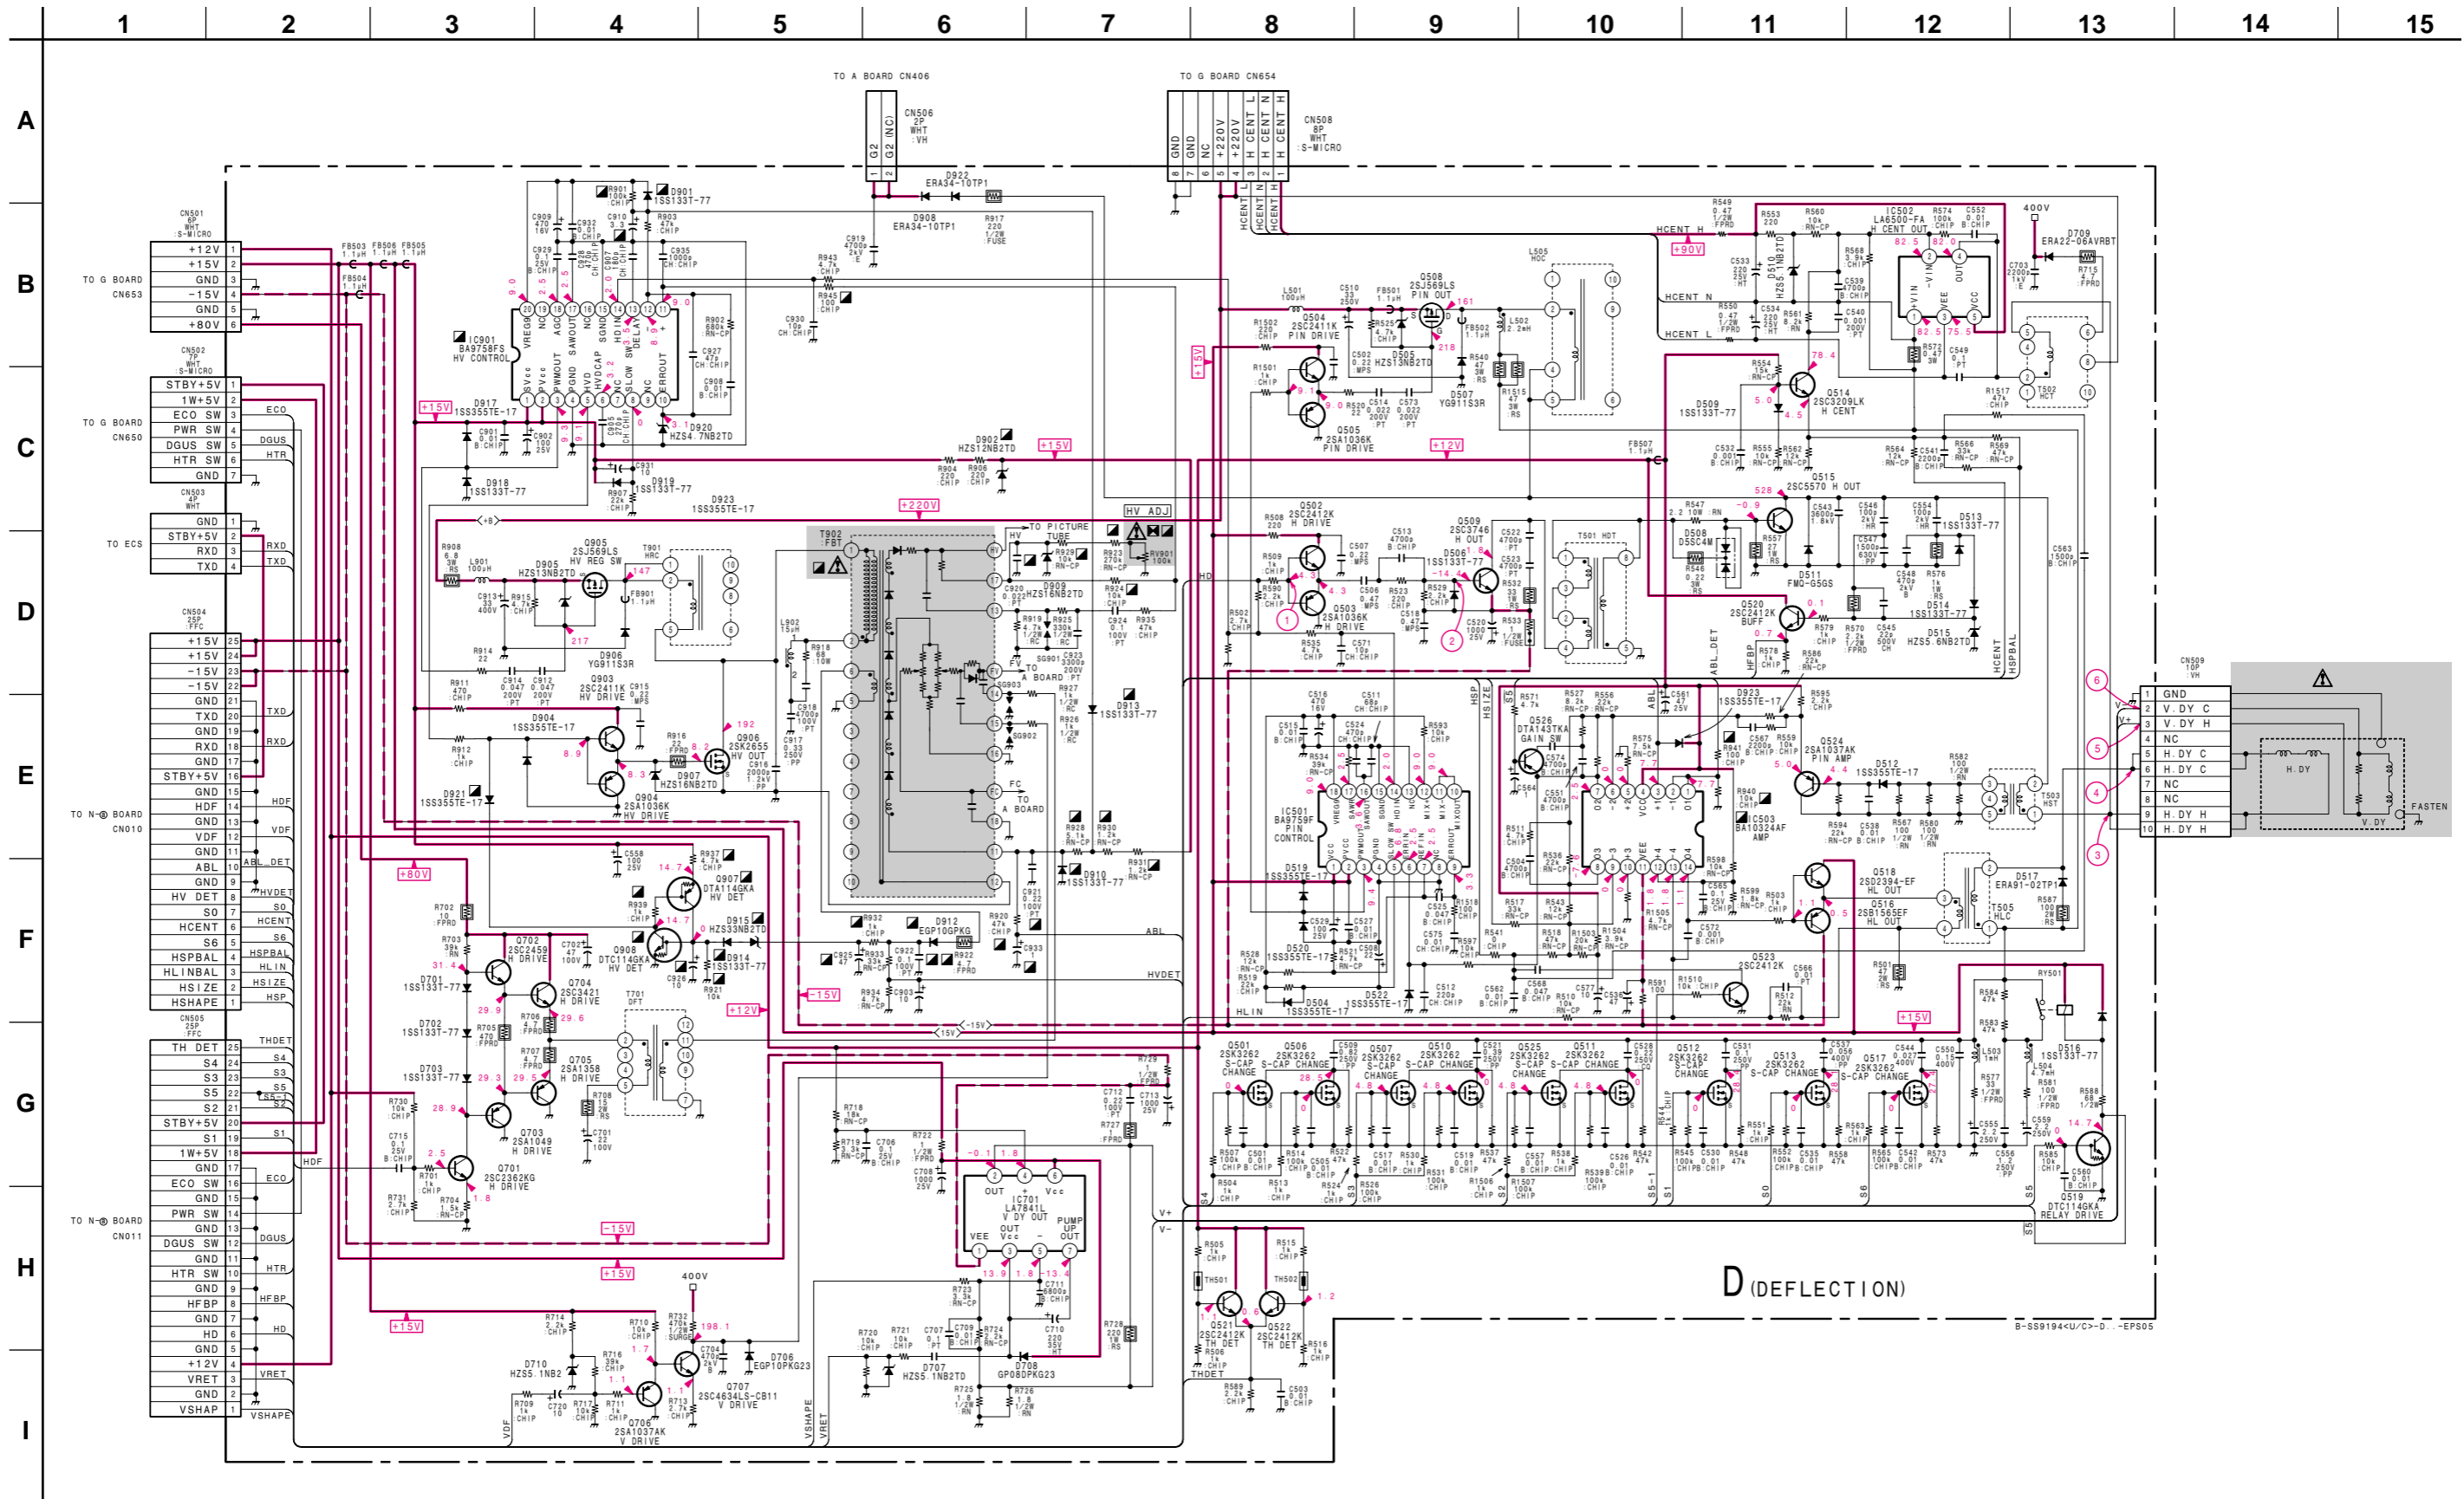


Schematic diagrams  
 ← H5 H6 J boards

Schematic diagram  
 D board →

# D [DEFLECTION]

## • D BOARD WAVEFORMS

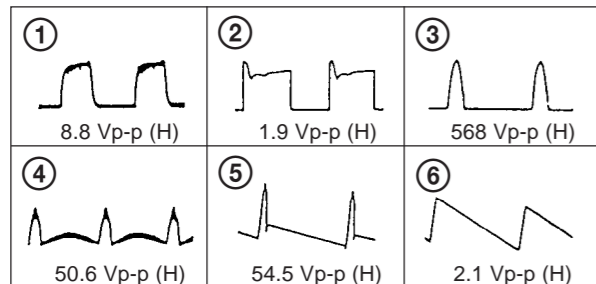


## • D BOARD SEMICONDUCTOR LOCATION

IC		DIODE		
IC501	C-4	D504	D-4	*
IC502	A-1	D505	A-1	③
IC503	C-4	D506	A-4	-
IC701	A-5	D507	A-2	-
IC901	C-1	D508	A-3	-
TRANSISTOR		D509	B-2	-
		D510	A-1	-
		D511	A-2	-
		D512	B-3	③
		D513	B-2	-
		D514	B-3	-
		D515	B-2	-
		D516	B-4	-
		D517	B-3	-
		D519	C-4	③
		D520	D-4	③
		D522	C-4	③
		D701	D-4	-
		D702	D-4	-
		D703	D-4	-
		D706	D-2	-
		D707	A-5	-
		D708	A-5	-
		D709	B-2	-
		D710	D-3	-
		D901	B-1	-
		D902	B-2	-
		D904	B-3	③
		D905	C-3	-
		D906	C-3	-
		D907	B-3	-
		D908	C-3	-
		D909	C-1	-
		D910	C-2	-
		D912	C-2	-
		D913	B-1	-
		D914	C-2	-
		D915	C-2	-
		D917	B-2	③
		D918	B-1	-
		D919	B-1	-
		D920	B-1	-
		D921	B-2	③
		D922	C-3	-
		D923	C-4	③
		VARIABLE RESISTOR		
		RV901	B-1	

\*: Refer to Terminal name of semiconductors in silk screen printed circuit (see page 5-10)



## - D BOARD -

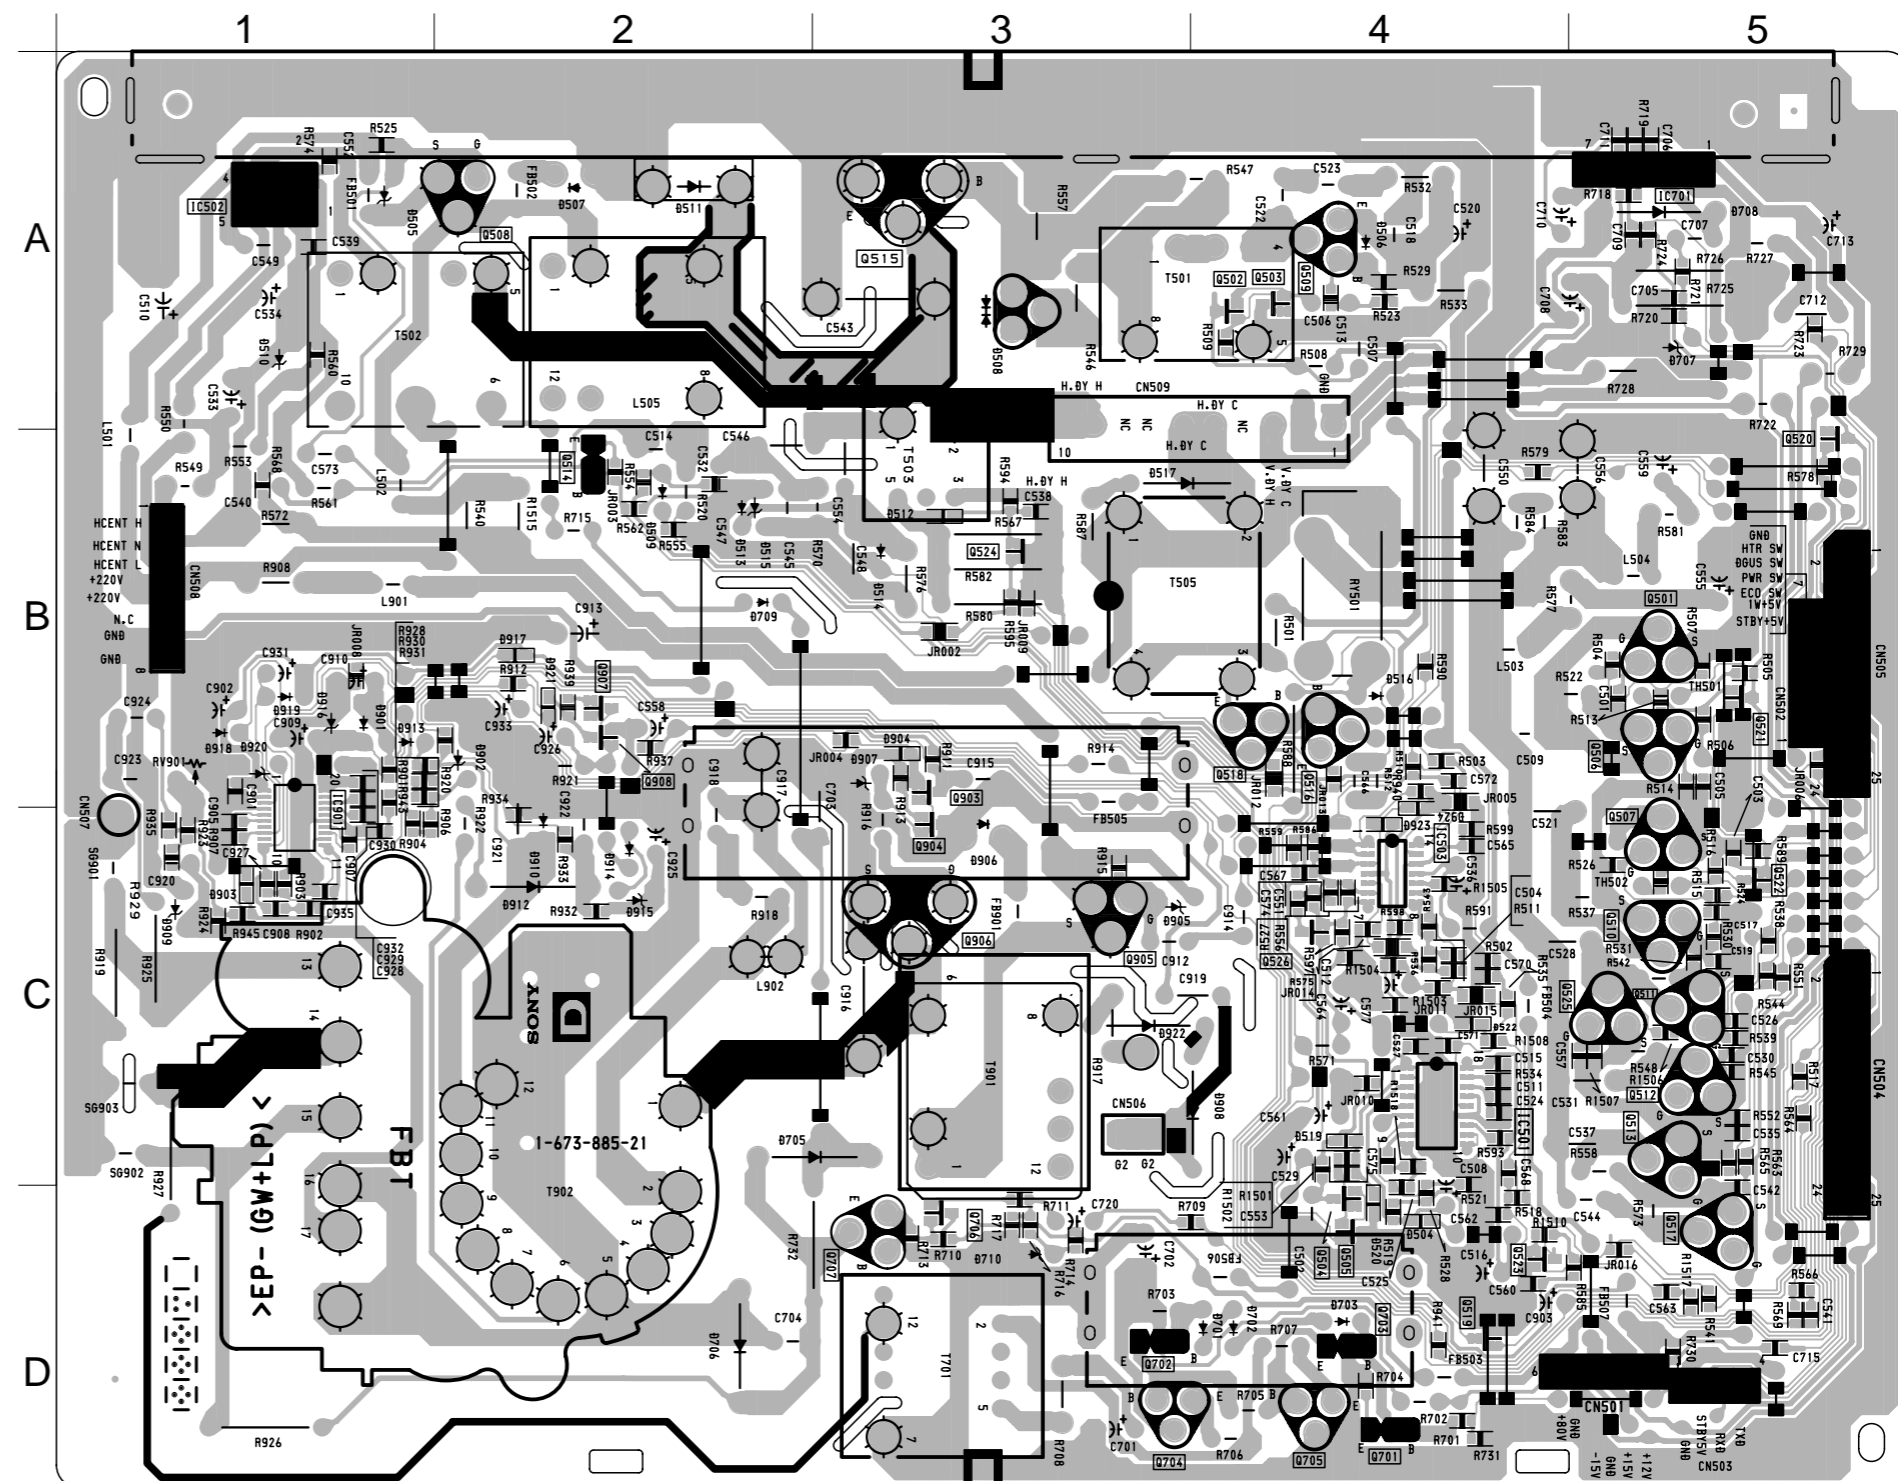

**NOTE:**  
The circuit indicated as left contains high voltage of over 600 Vp-p. Care must be paid to prevent an electric shock in inspection or repairing.


(4) Schematic Diagrams of N (a), (b), (c) Board


• Divided circuit diagram  
 One sheet of N board circuit diagram is divided into three sheets, each having the code N-(a) to N-(c). For example, the destination (ab1) on the code N-(a) sheet is connected to (ab1) on the N-(b) sheet.

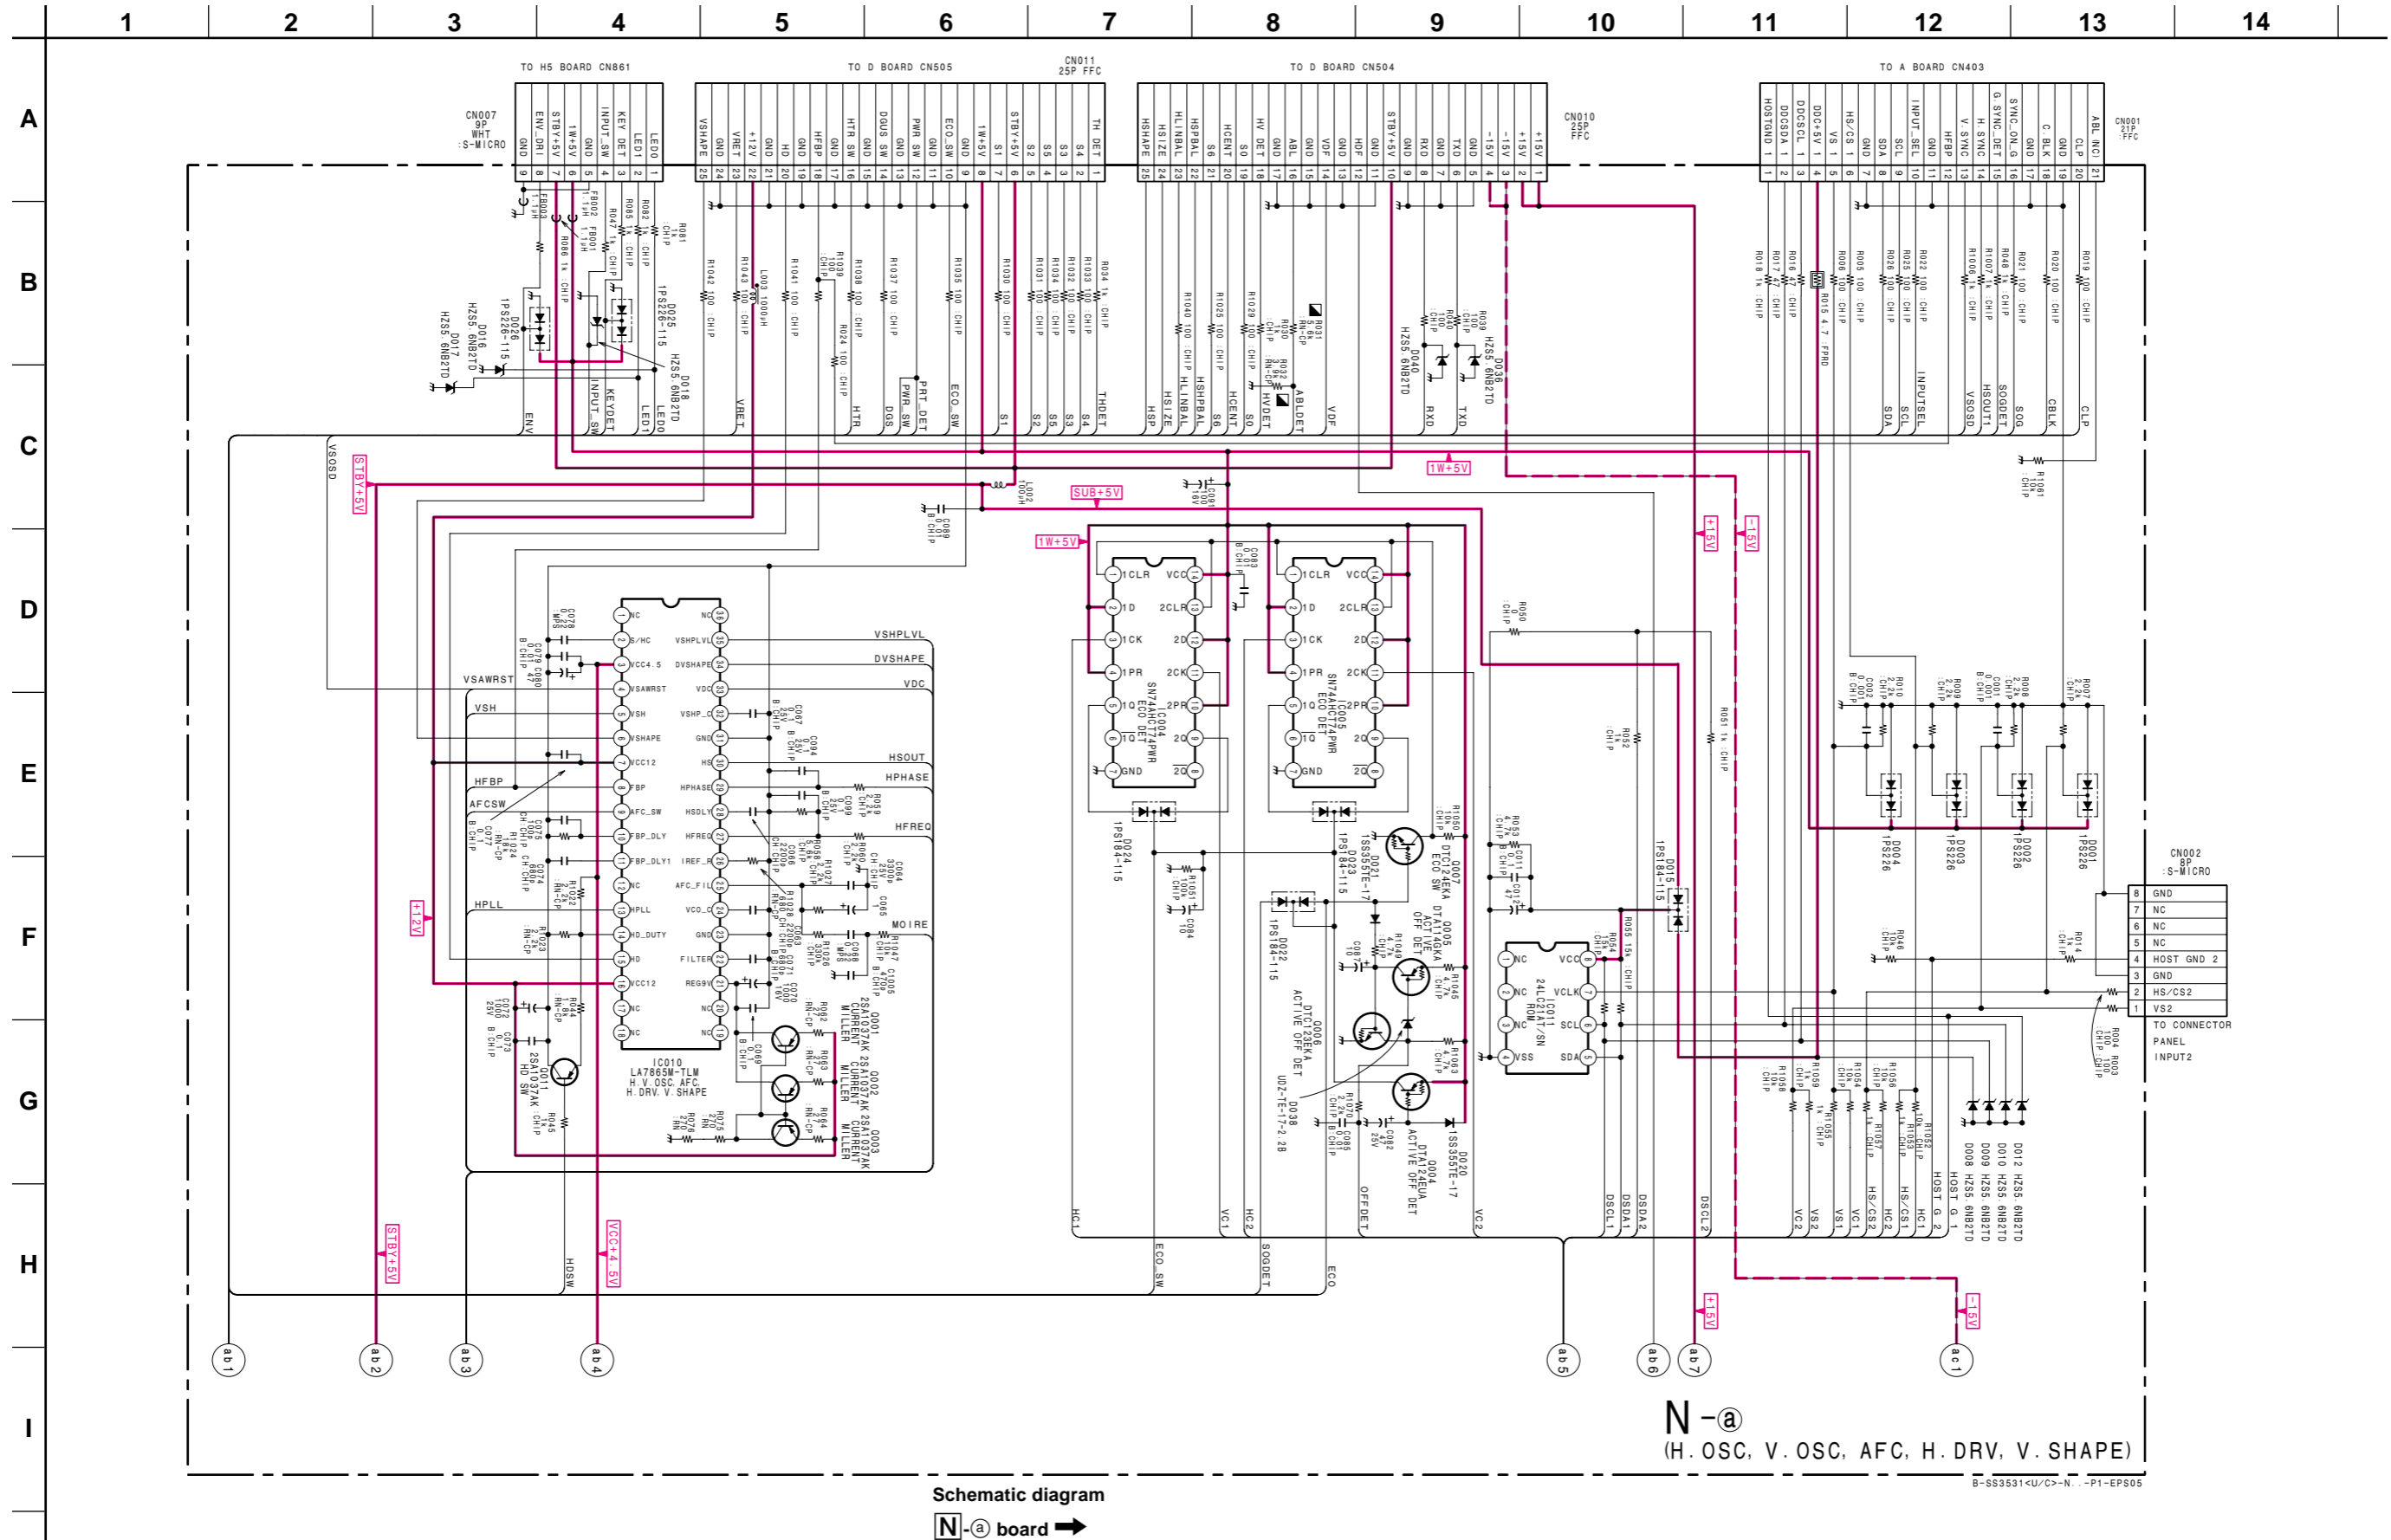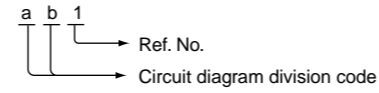

N-(a)  
 (H. OSC, V. OSC, AFC, H. DRV, V. SHAPE)

Schematic diagram  
 N-(a) board

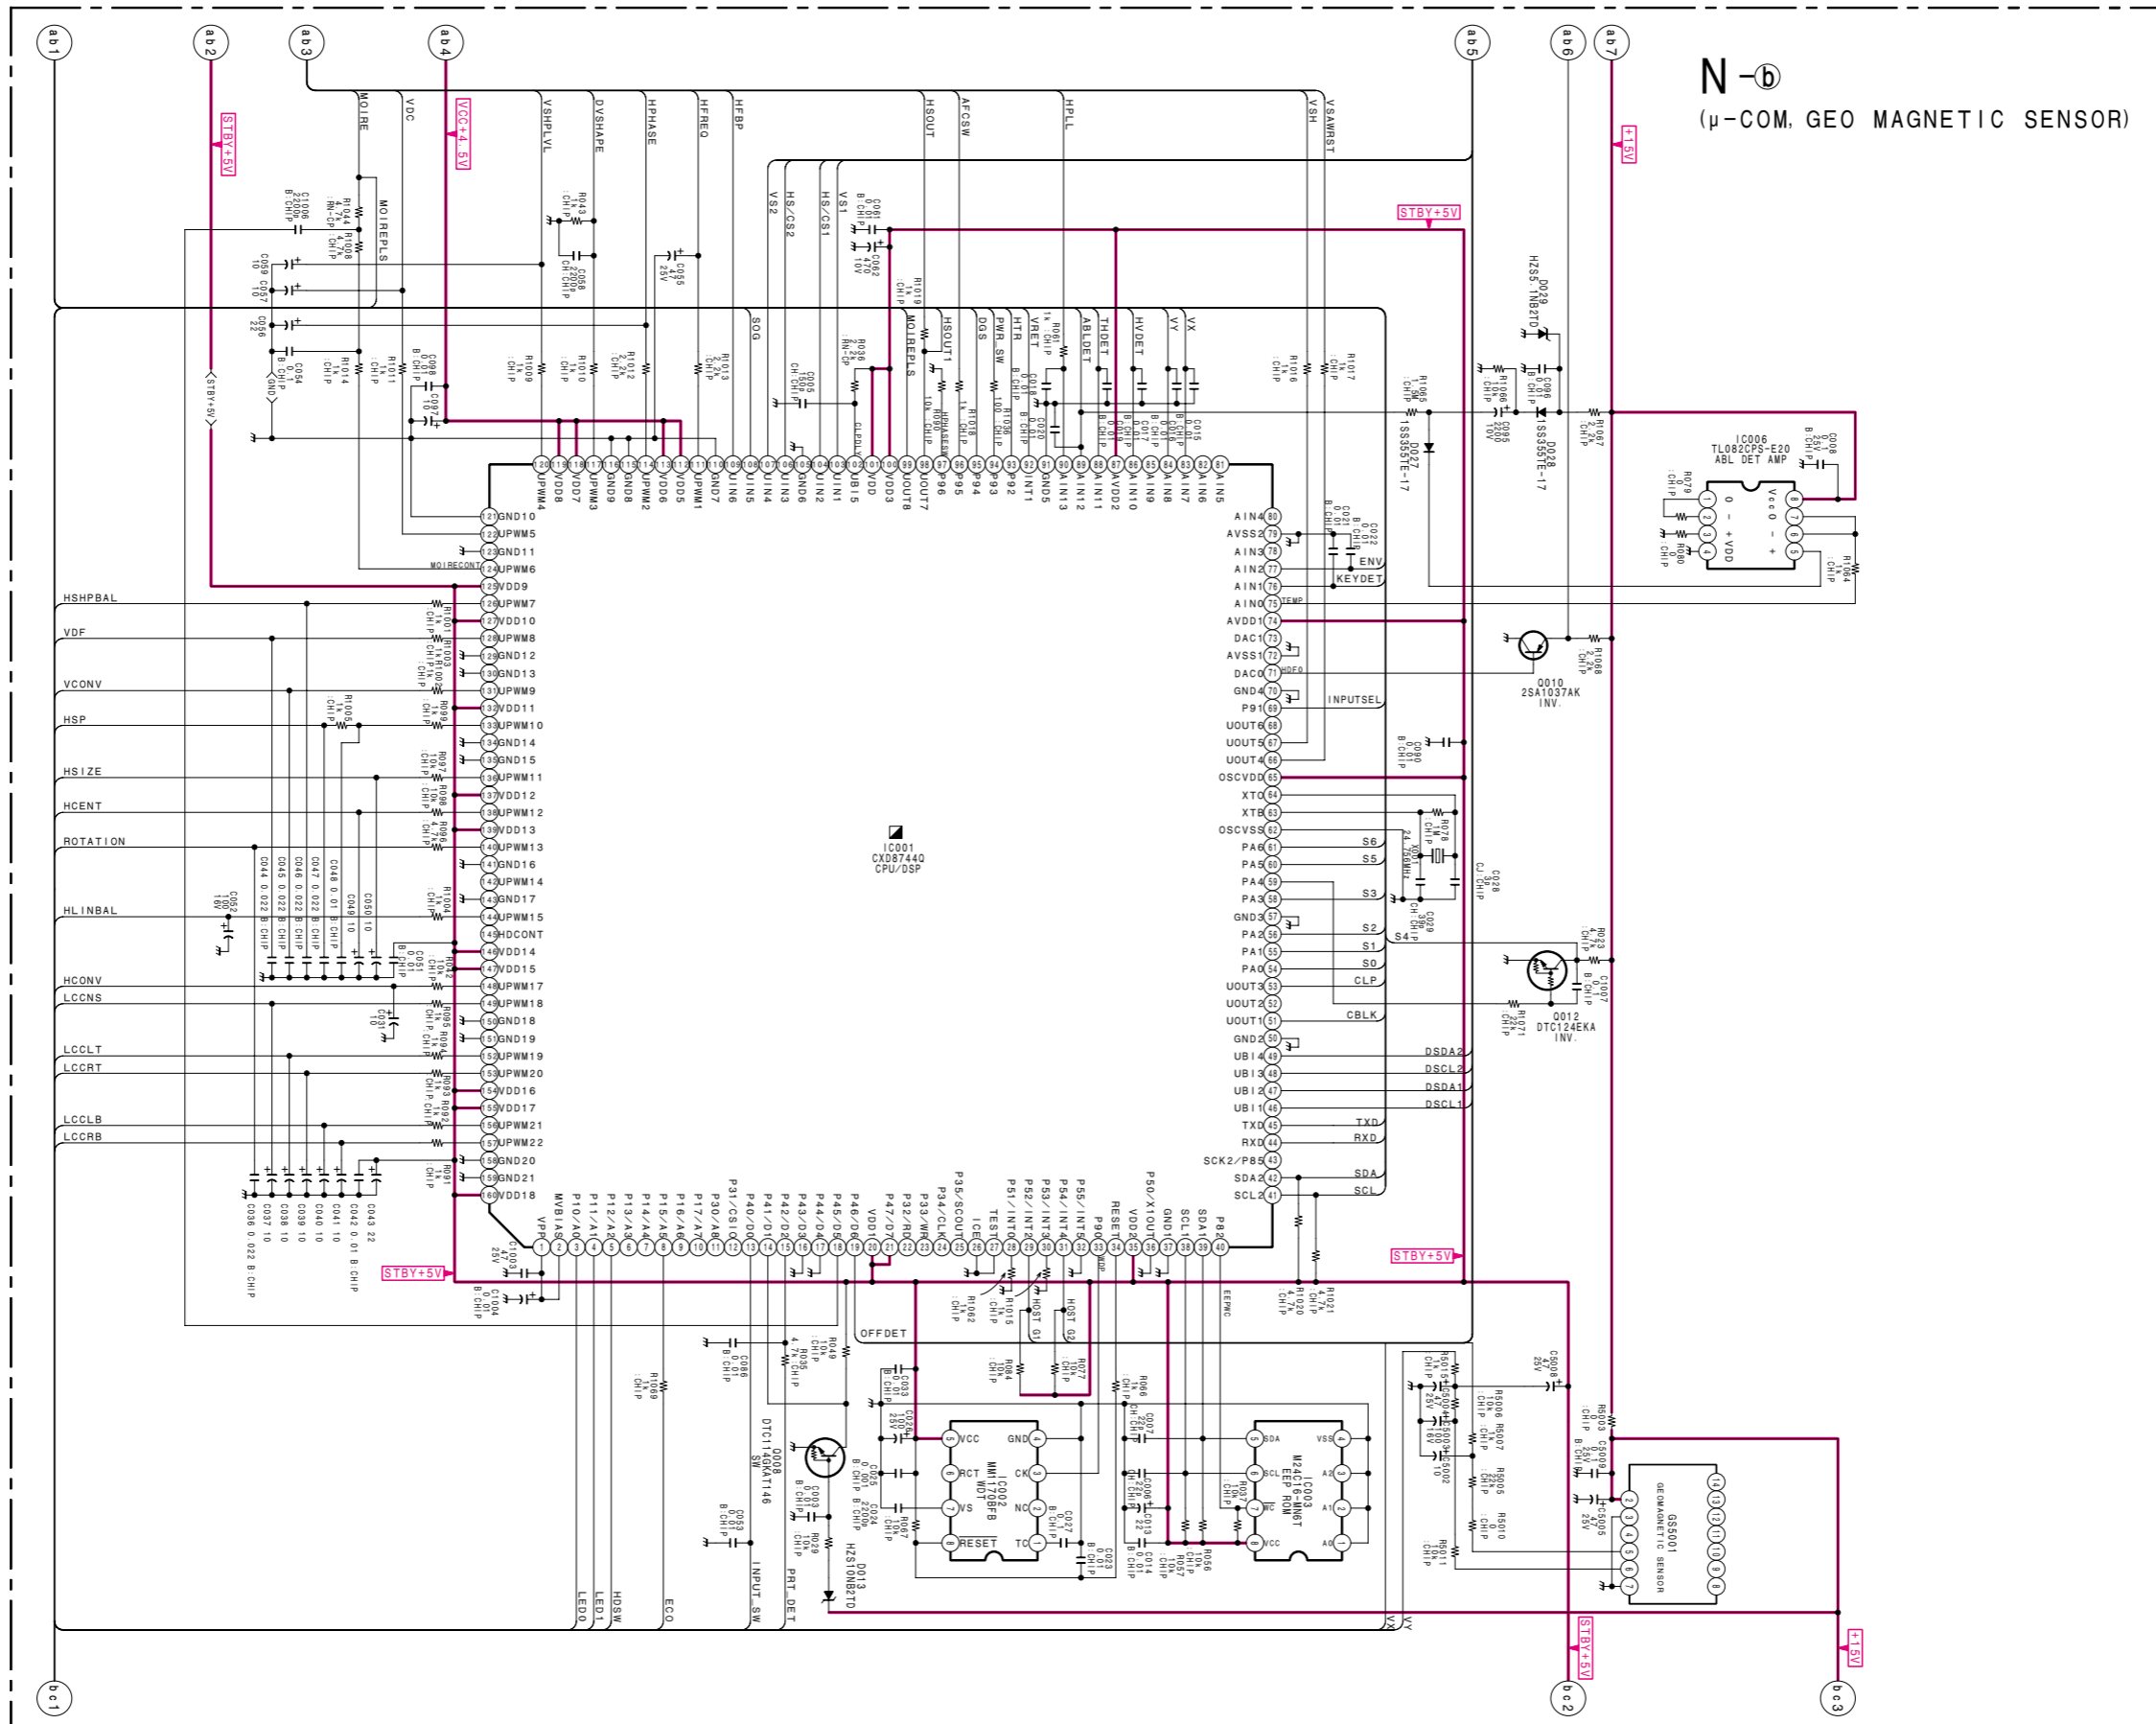

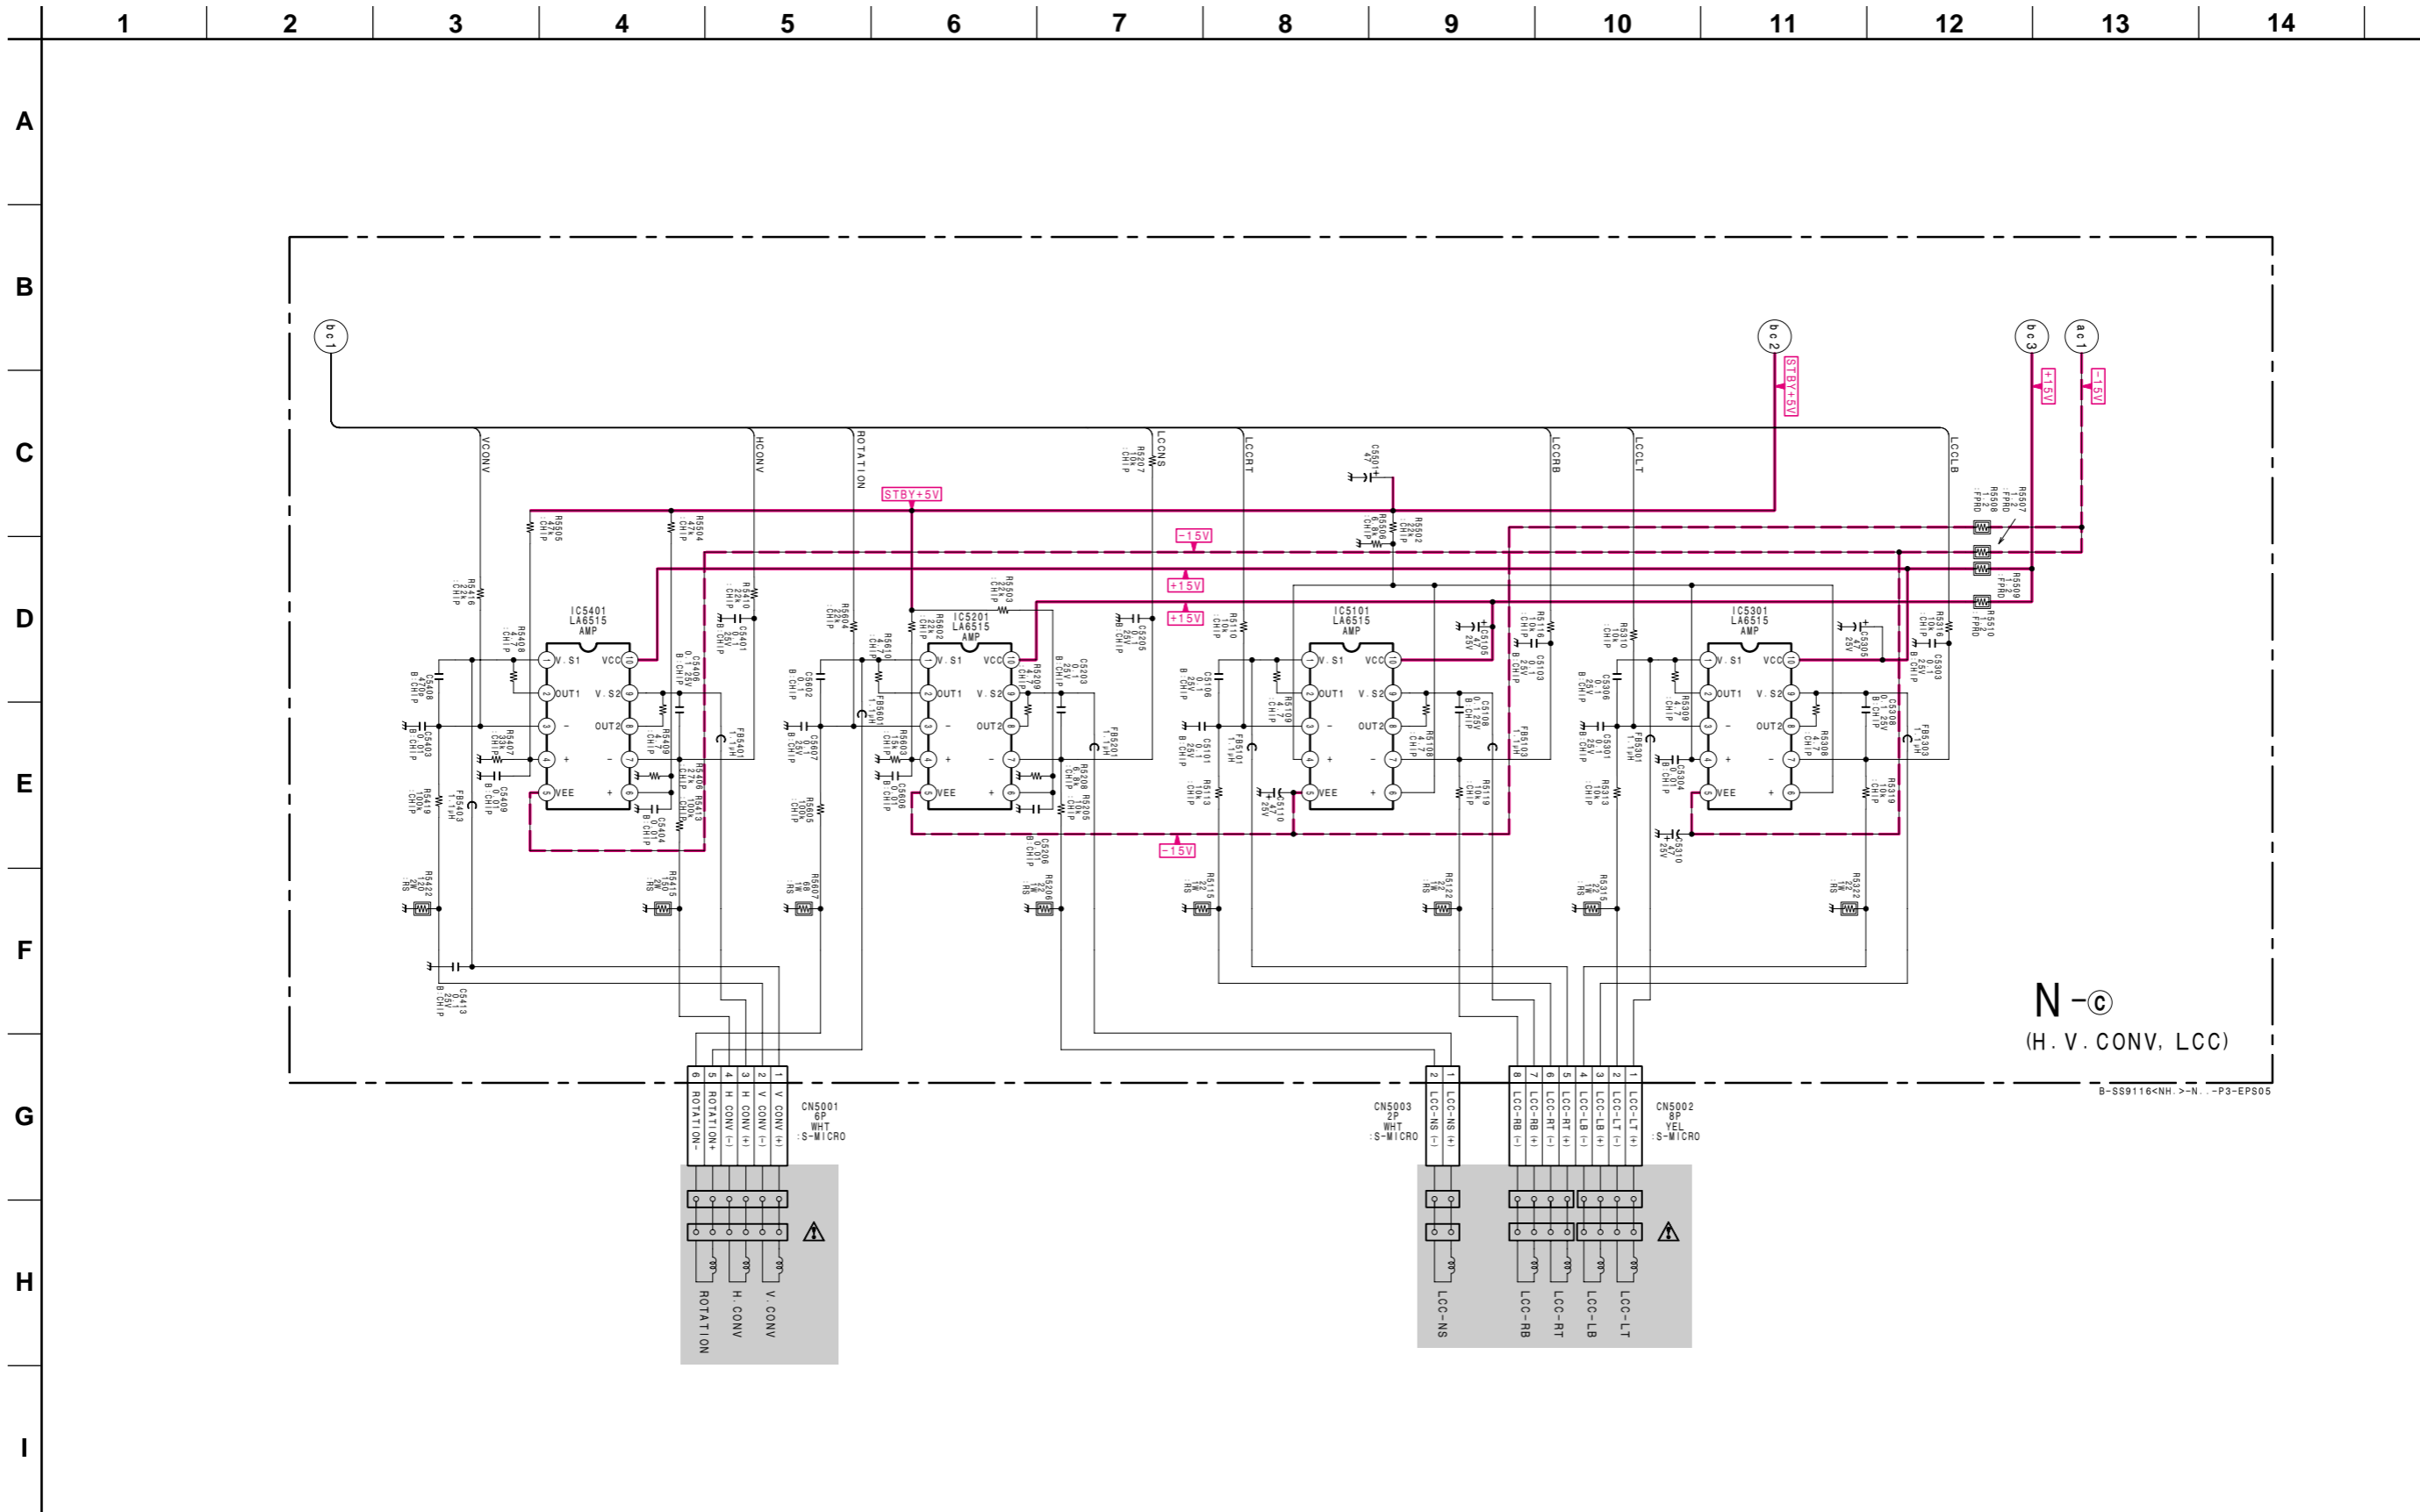


N-Ⓢ  
(H.V. CONV, LCC)

B-SS9116<NH>->N...-P3-EPS05

Schematic diagram  
 ← N-Ⓢ board

Schematic diagram  
 N-Ⓢ board →

— N BOARD (Conductor Side) —

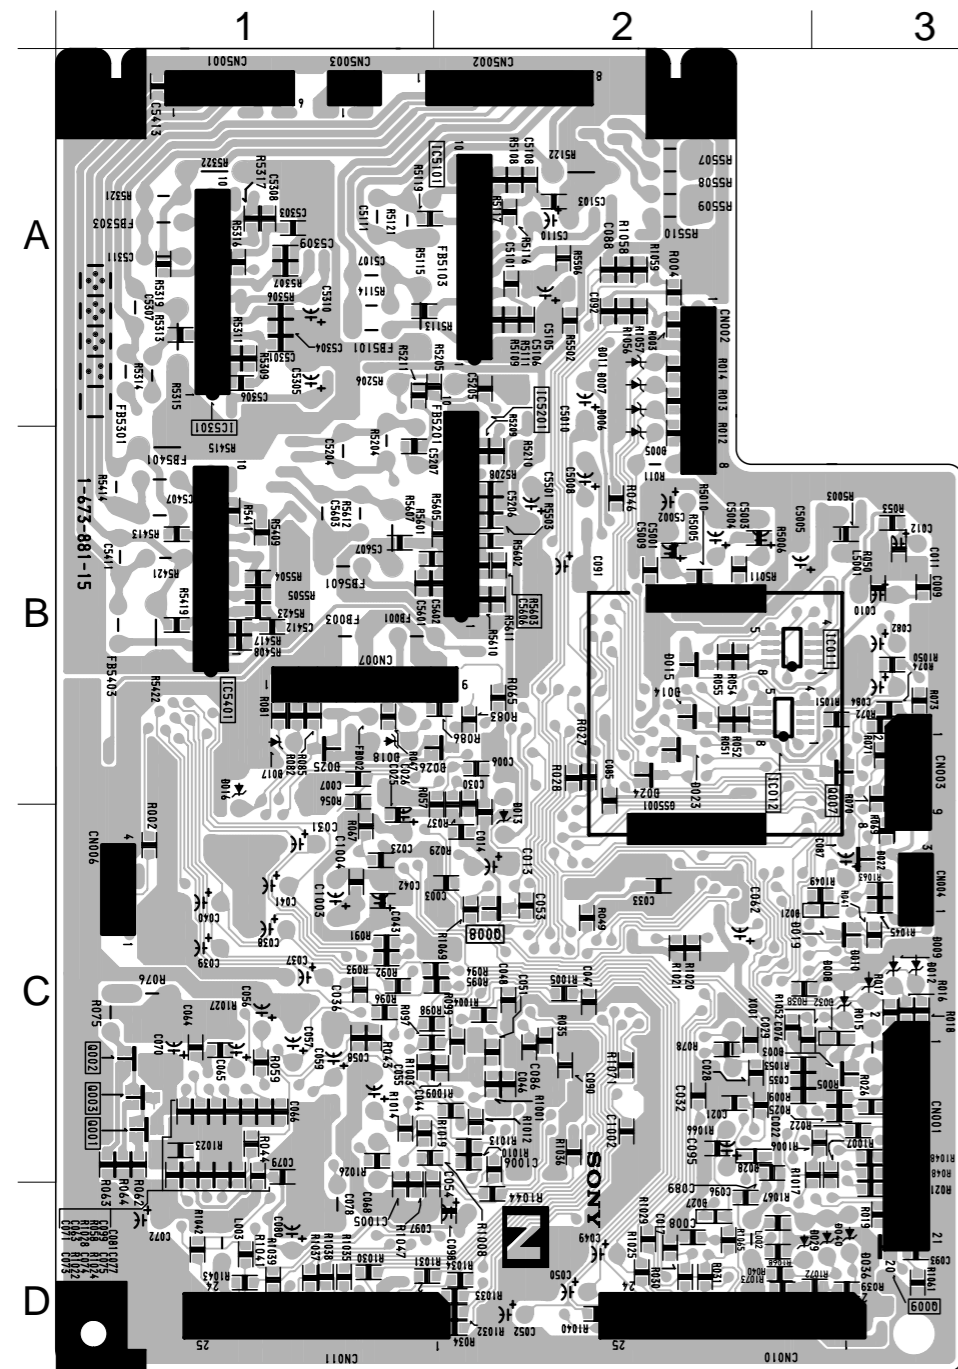

• N BOARD SEMICONDUCTOR LOCATION

IC		
(Conductor Side)	(Component Side)	
IC001	C-2	
IC002	C-2	
IC003	C-2	
IC004	B-2	
IC005	B-2	
IC006	D-1	
IC010	C-2	
IC011	B-2	
IC012	B-2	
IC5101	A-2	A-2
IC5201	B-2	B-2
IC5301	A-1	A-2
IC5401	B-1	B-2

TRANSISTOR		
(Conductor Side)	(Component Side)	*
Q001	C-1	①
Q002	C-1	①
Q003	C-1	①
Q004	B-1	②
Q005	C-1	②
Q006	C-1	②
Q007	B-3	①
Q008	C-2	①
Q010	C-1	①
Q011	C-2	②
Q012	D-2	②


DIODE		
(Conductor Side)	(Component Side)	*
D001	A-1	⑦
D002	A-1	⑦
D003	C-3	⑥
D004	C-1	⑦
D008	C-3	-
D009	C-3	-
D010	C-3	-
D012	C-3	-
D013	C-2	-
D015	B-2	⑧
D016	B-1	-
D017	B-1	-
D018	B-1	-
D020	B-1	③
D021	C-3	⑧
D022	C-3	⑧
D023	B-2	⑧
D024	B-2	⑧
D025	B-1	⑧
D026	B-2	⑧
D027	D-2	③
D028	D-2	③
D029	D-3	-
D036	D-1	-
D038	C-1	⑤
D040	D-1	-

CRYSTAL		
(Conductor Side)	(Component Side)	
X001	C-2	C-1


\*: Refer to Terminal name of semiconductor in silk screen printed circuit (see page 5-10)

— N BOARD (Component Side) —



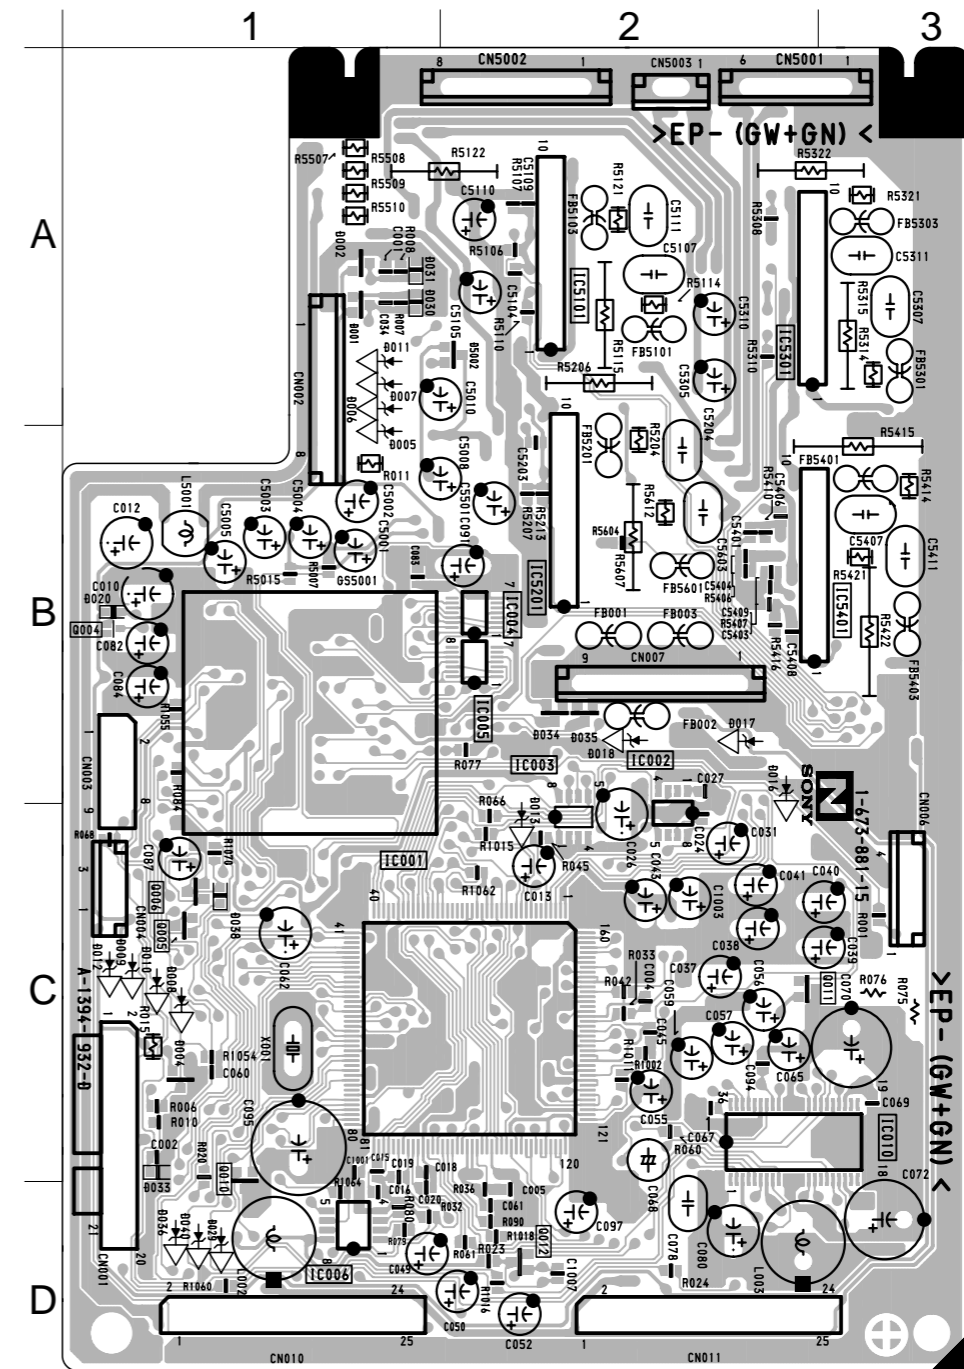


(5) Schematic Diagram of G Board

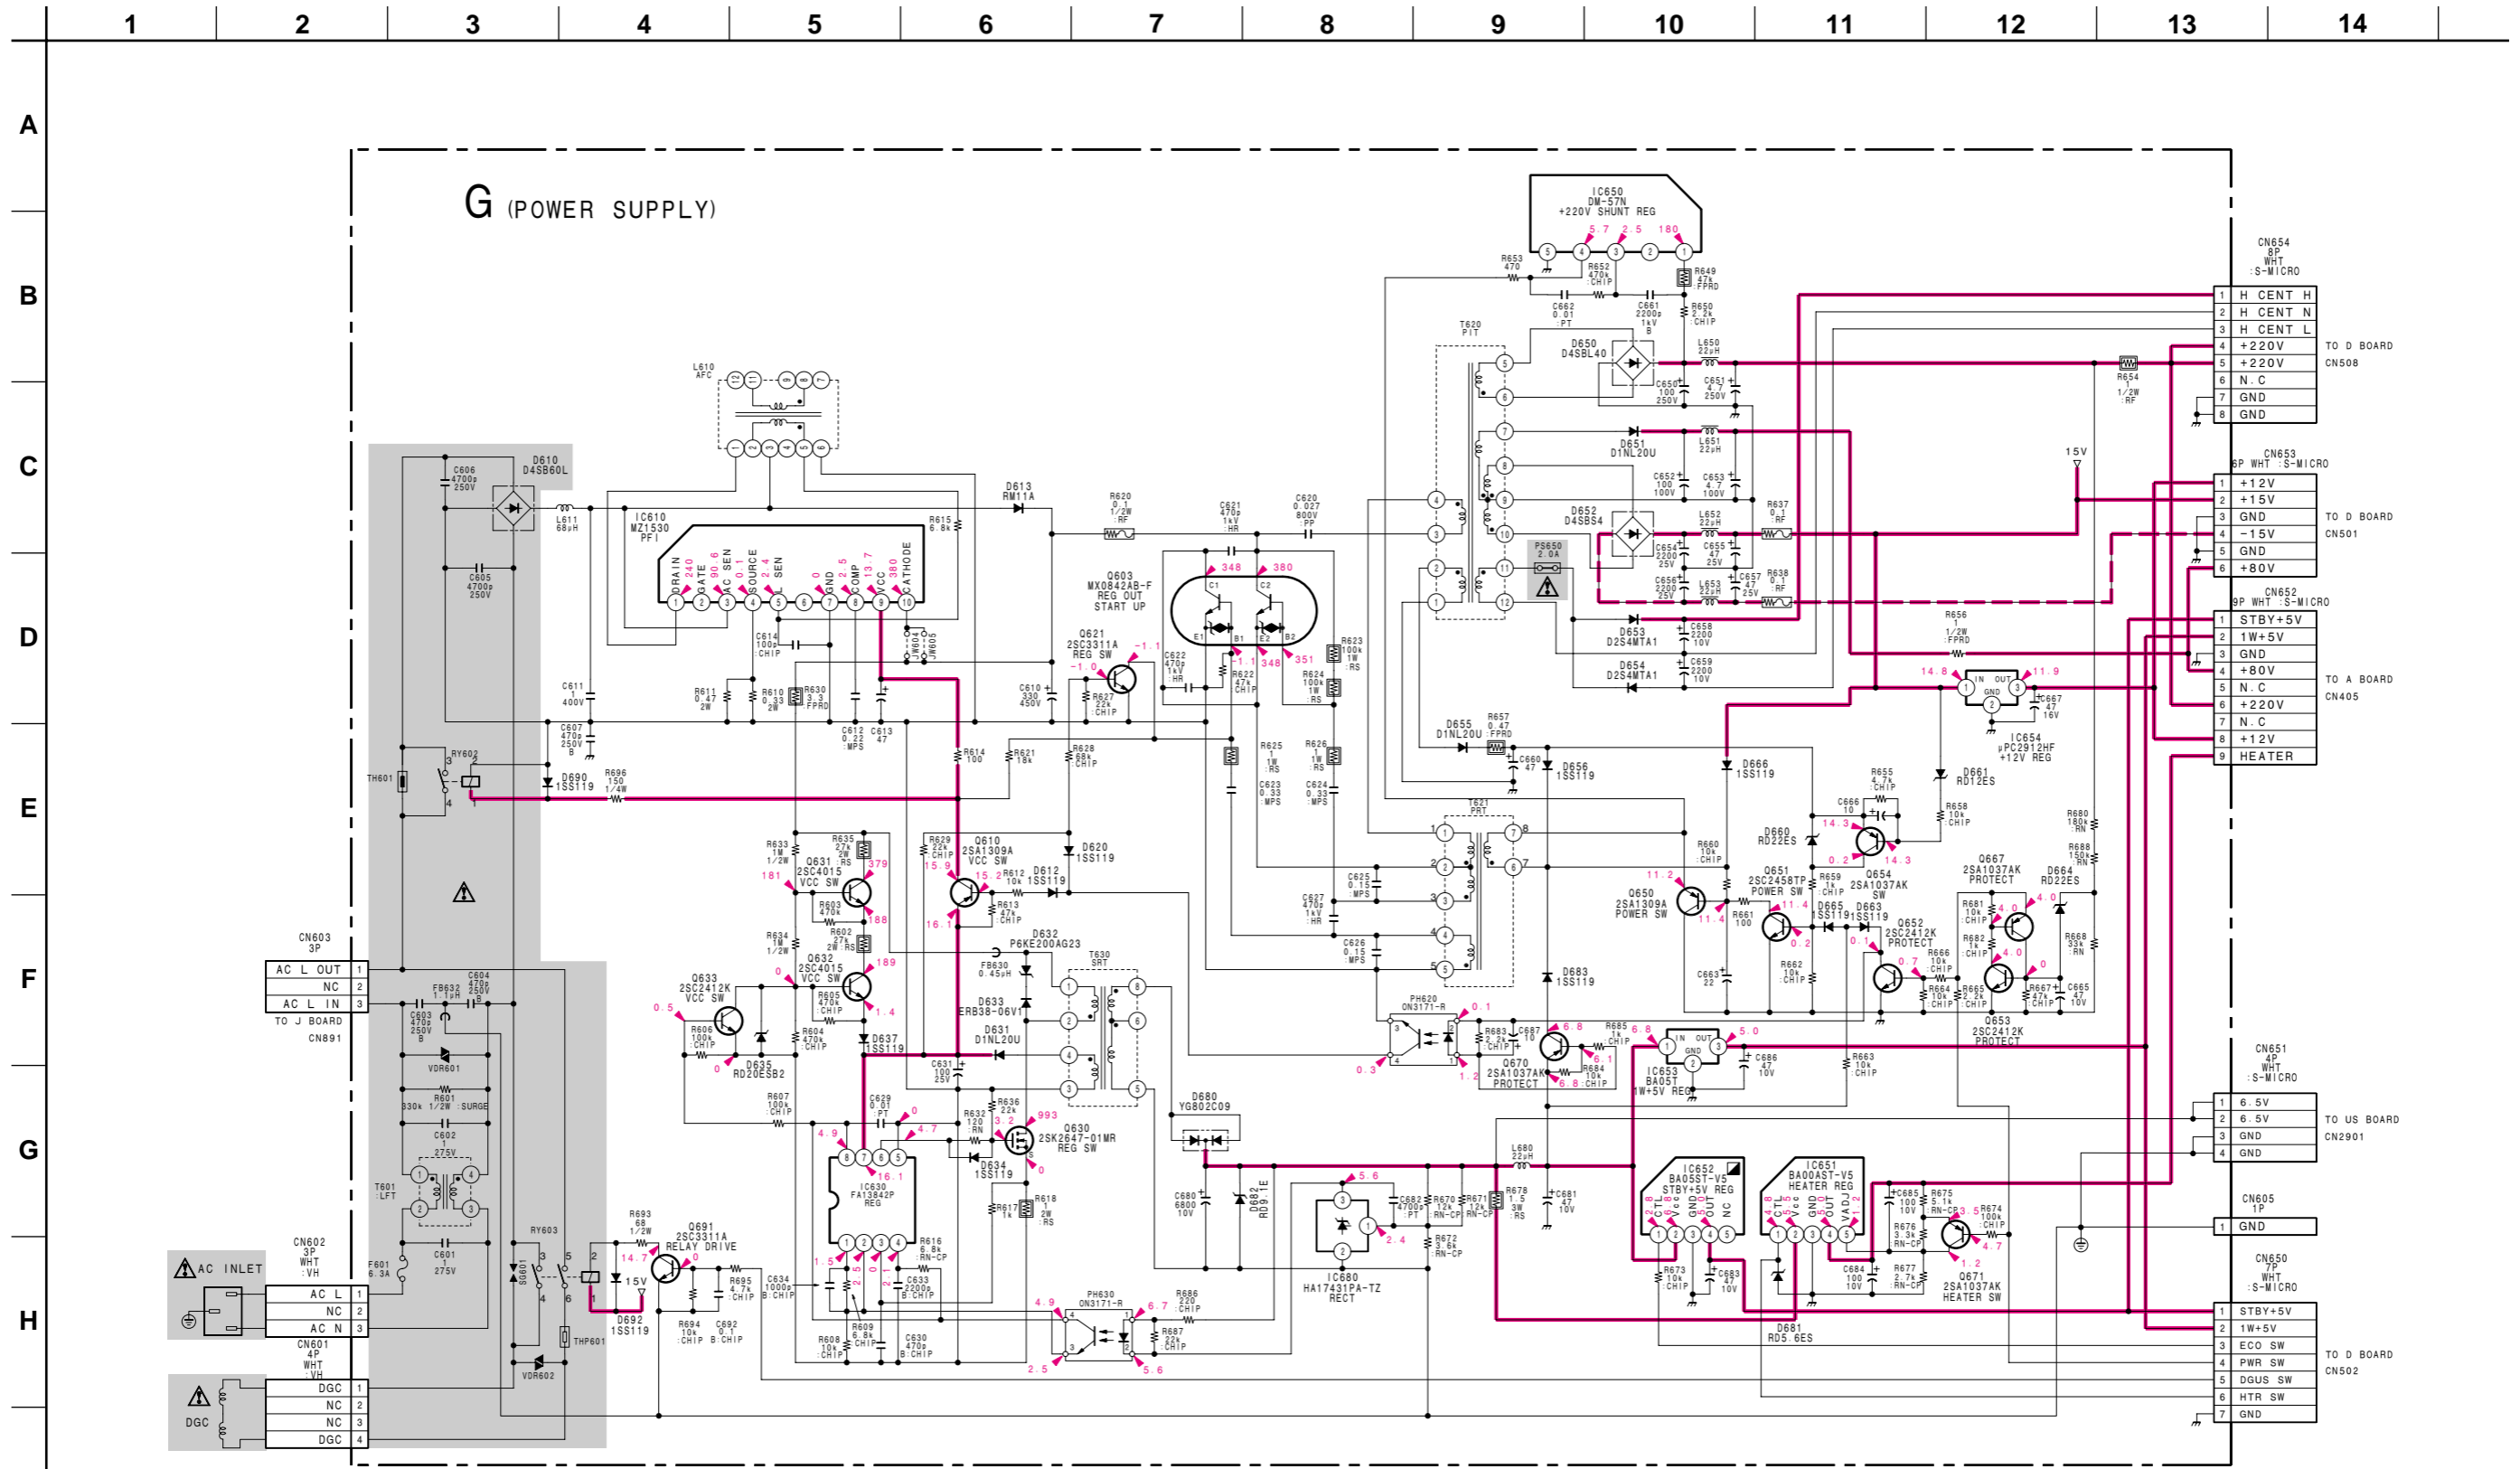


Schematic diagram  
G board →

— G BOARD —

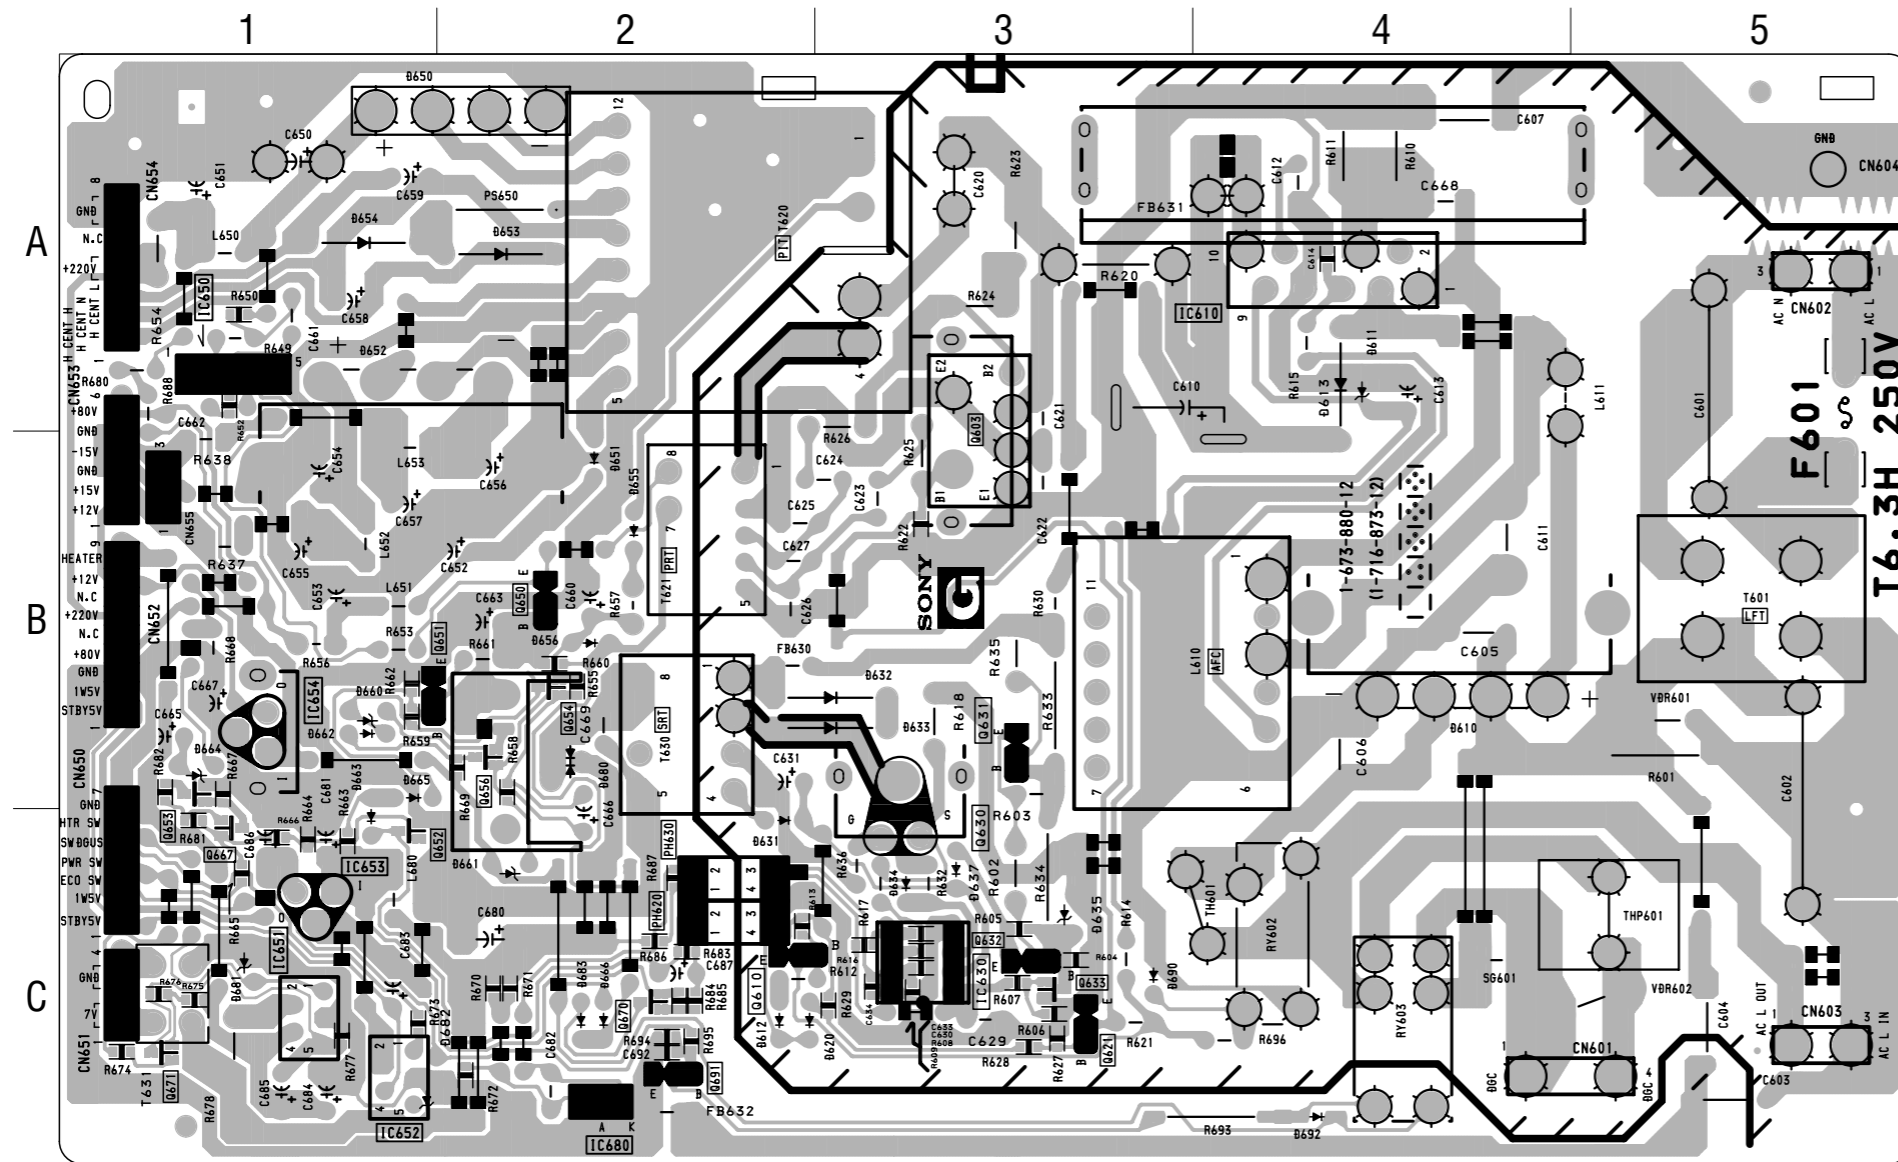

(6) Schematic Diagram of US Board

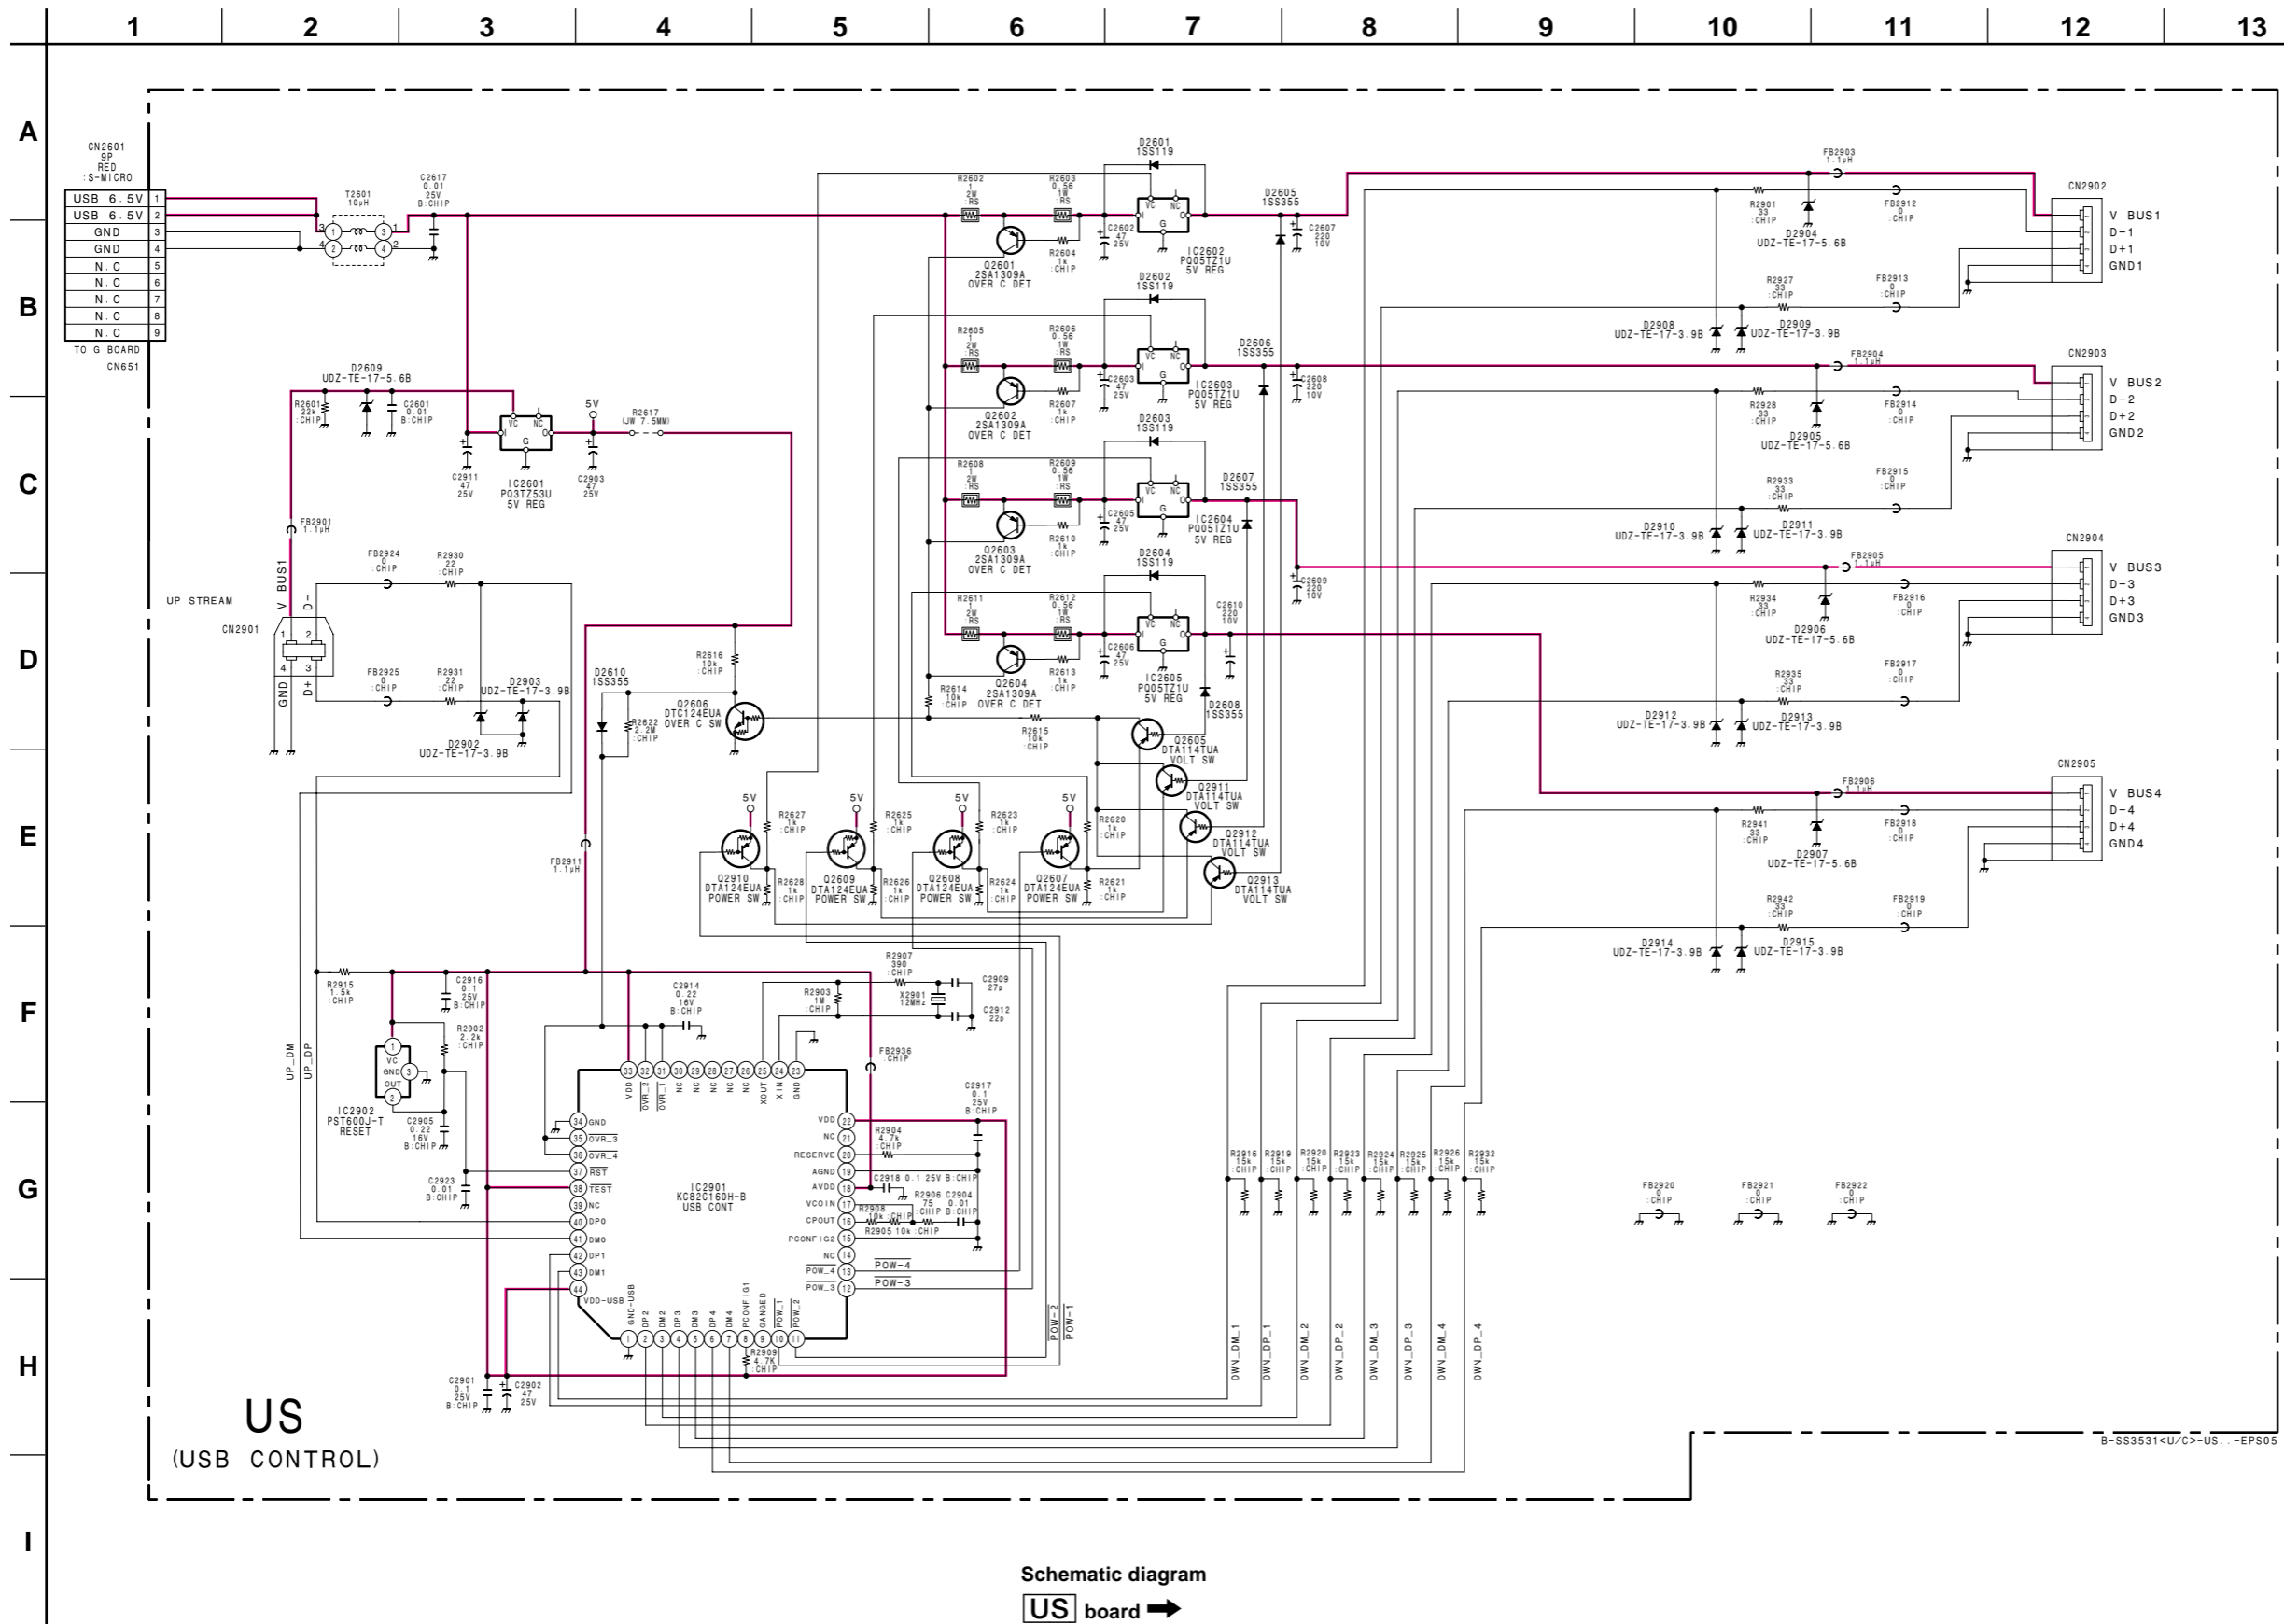

• US BOARD SEMICONDUCTOR LOCATION

IC		
(Conductor Side)	(Component Side)	
IC2601	C-1	
IC2602	D-1	
IC2603	D-1	
IC2604	C-1	A-1
IC2605	A-2	
IC2901	B-2	
IC2902	A-1	A-1

TRANSISTOR		
(Conductor Side)	(Component Side)	
Q2601	D-1	D-1
Q2602	D-1	D-2
Q2603	A-1	A-1
Q2604	A-1	A-2
Q2605	C-2	Ⓞ
Q2606	B-1	Ⓞ
Q2607	C-2	Ⓞ
Q2608	B-1	Ⓞ
Q2609	B-1	Ⓞ
Q2910	B-1	Ⓞ
Q2911	B-1	Ⓞ
Q2912	B-1	Ⓞ
Q2913	C-1	Ⓞ

DIODE		
(Conductor Side)	(Component Side)	
D2601	D-1	D-1
D2602	E-1	E-2
D2603	A-1	A-1
D2604	A-1	A-2
D2605	D-1	Ⓞ
D2606	D-1	Ⓞ
D2607	A-1	Ⓞ
D2608	A-1	Ⓞ
D2609	C-1	Ⓞ
D2610	B-1	Ⓞ
D2902	B-1	Ⓞ
D2903	B-1	Ⓞ
D2904	E-1	Ⓞ
D2905	E-1	Ⓞ
D2906	A-1	Ⓞ
D2907	A-2	Ⓞ
D2908	D-1	Ⓞ
D2909	D-1	Ⓞ
D2910	D-1	Ⓞ
D2911	D-1	Ⓞ
D2912	A-1	Ⓞ
D2913	A-1	Ⓞ
D2914	A-1	Ⓞ
D2915	A-1	Ⓞ


  

CRYSTAL		
(Conductor Side)	(Component Side)	
X2901	B-1	B-1


\*: Refer to Terminal name of semiconductors in silk screen printed circuit (see page 5-10)

Schematic diagram  
US board →

— US BOARD (Conductor Side) —

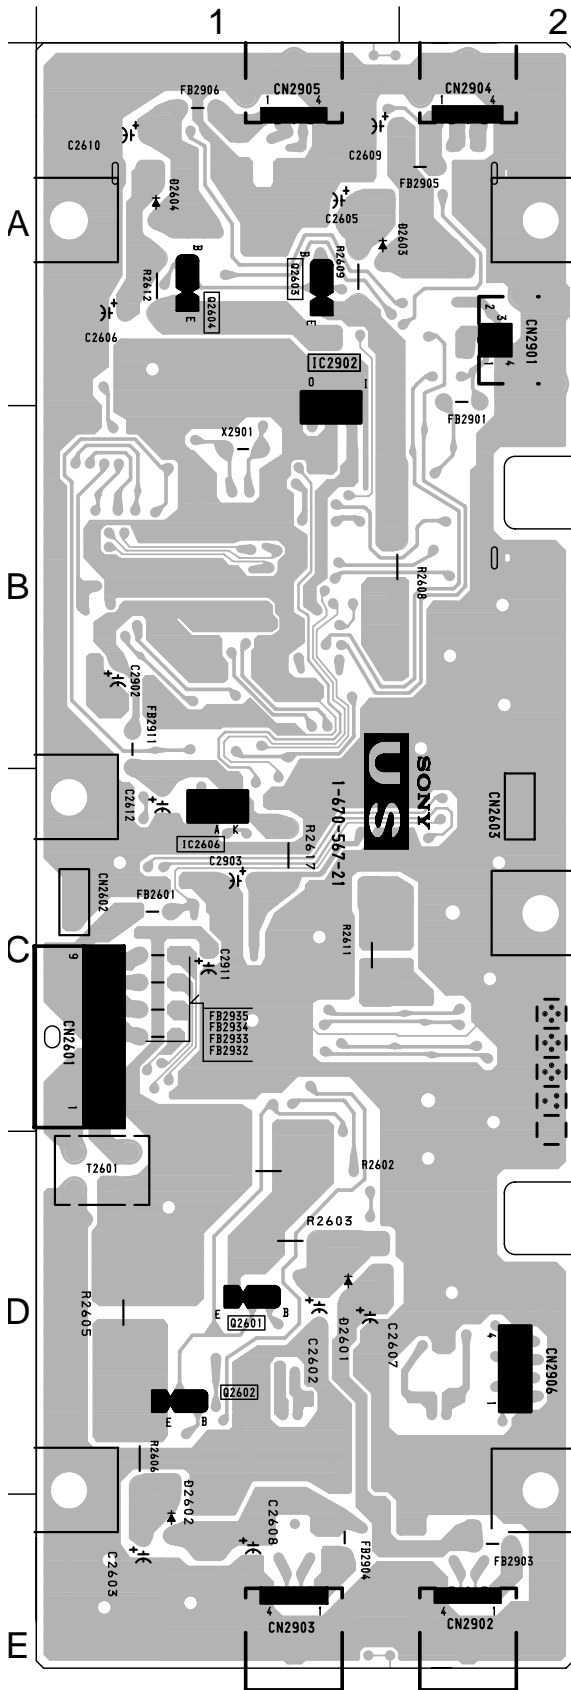


— US BOARD (Component Side) —

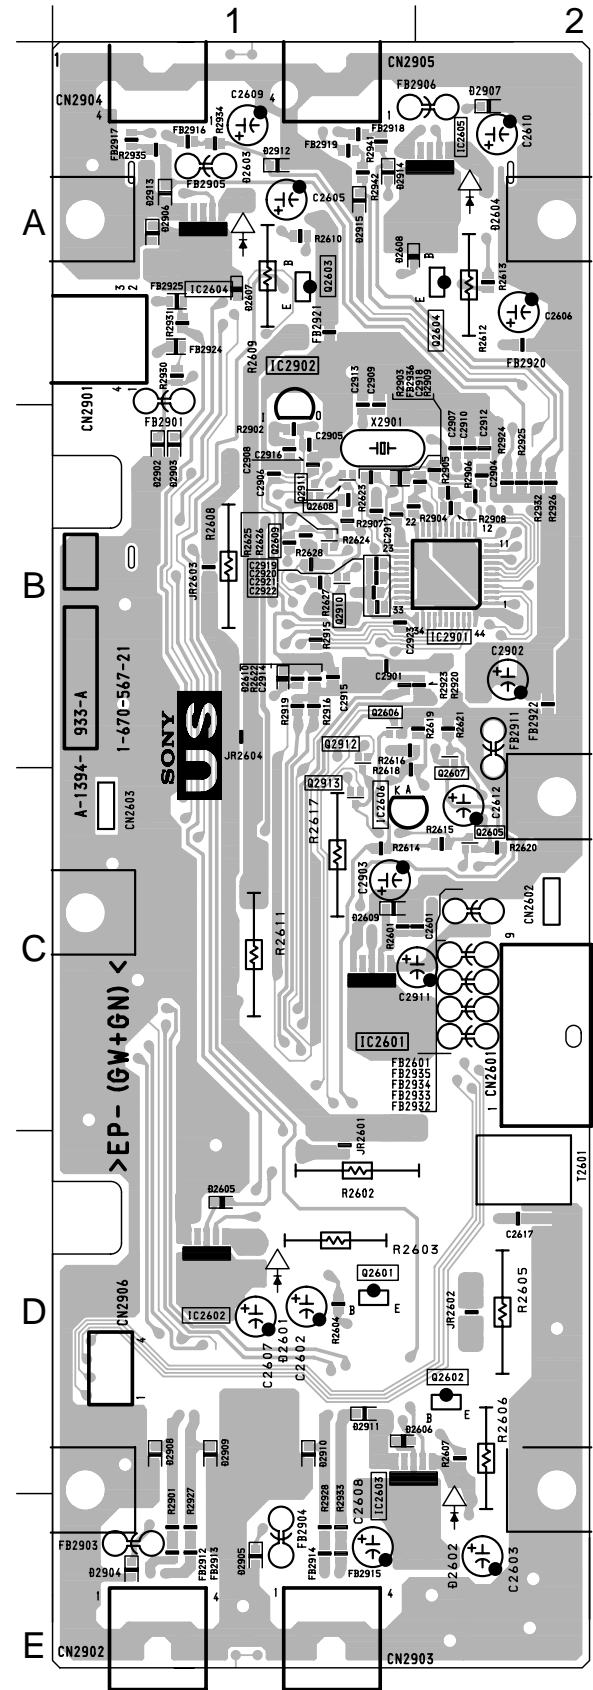


## 5-5. SEMICONDUCTORS


**BA00AST-V5  
BA05ST-V5  
LA6500-FA**




**BA05T**




**BA10324AF-E2  
SN74AHCT74PWR  
SN74HC04ANS  
SN74HC04ANSR  
XRA10324AF**

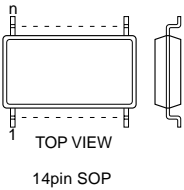


**NJM2904M  
NJM2904M(Te2)  
TL082CPS-E20  
NJM082M  
24LC21AT/SN**

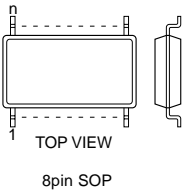


**BA9758FS-E2**

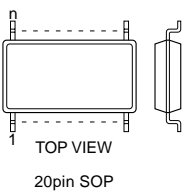


**BA9759F-E2**

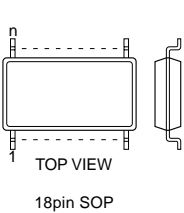


**CXD8744Q-0007**

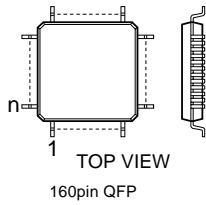


**CXD9514M**

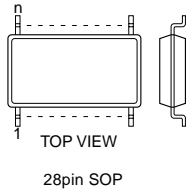


**DM-57N**

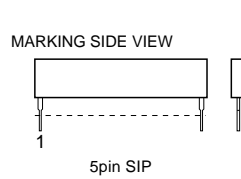


**FA13842P  
M24C16-MN6T  
MM1170BFB**

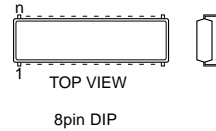


**FA4301**

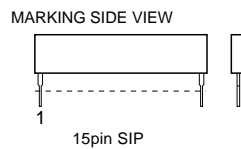


**HA17431PA  
HA17431PA-TZ**




**H8D2972**

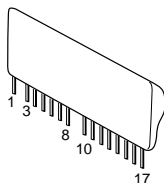


**KC82C160H-B**

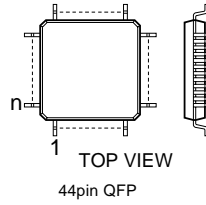


**LA6515**

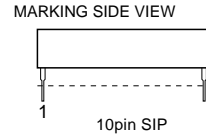


**LA7841L**

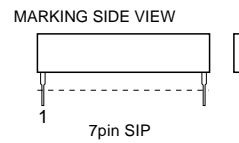


**LA7865M-TLM**

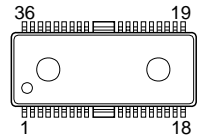


**MZ1530**




**M52749FP-TP**

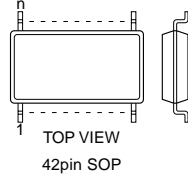

**M52757FP-TP**

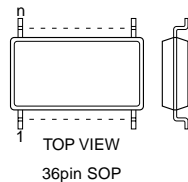


**PQ05TZ1U**




**PQ3TZ53U**




**PST600J-T**




**μPC2912HF (12)**




**DTA114GKAT146  
DTA114TUA-T106  
DTA124EUA-T106  
DTC114GKA  
DTC114GKAT146  
DTC124EK  
DTC124EKA-T146  
2SA1036K-Q  
2SA1036K-T-146-Q  
2SA1037AK-T146-QR  
2SA1037AK-T146-R  
2SA1037K-T146-QR  
2SA1162-G  
2SB709A-QRS-TX  
2SC1623-L5L6  
2SC2411K-CQ  
2SC2411K-T-146-CQ  
2SC2412K-T-146-QR**




**DTA124ESA  
DTA124ESA-TP  
2SA1175-HFE  
2SA1309A-QRSTA  
2SC2459-GR-TPE4  
2SC2784  
2SC2785-HFE  
2SC3311A-QRSTA**



**DTC124EUA-T106**




**MX0842AB-F**




**2SA1049-GR  
2SA1049TP-GR  
2SC2458-YGR  
2SC2458TP-YGR**



**2SA1358-Y  
2SC3421-Y**




**2SB1565EF  
2SC3746  
2SC5022-02**




2SC2362K-G  
2SC2362KG-AA




2SC3209LK  
2SC3209LK-TP




2SC4015TV2




2SC5570(LBSONY)




2SD2394-EF




2SJ569LS-CB11  
2SK2655-01R-F165  
2SK3262-01MR-F119




2SK2103T100




2SK2647-01MR-F91




D1NL20U-TR  
D2S4MF  
D2S4MTA1

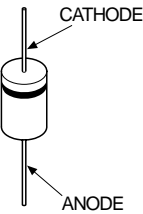


D4SB60L  
D4SBL40  
D4SBS4  
D4SBS4-F

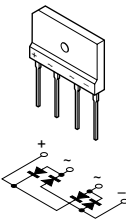


D5SC4M  
1PS184-115




EGP10D  
EGP10GPKG23  
ERA91-02  
ERA91-02TP1

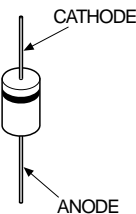


ERA22-06AVRBT  
ERA22-08  
ERA34-10TP1  
ERB38-06V1  
GP08D  
GP08DPKG23  
HSS83TD  
P6KE200AG23  
RD2.2M-T1B  
RGP02-20EL-6394

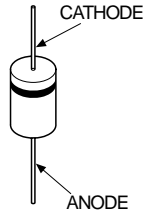


FMQ-G5GS




HSU83TRF

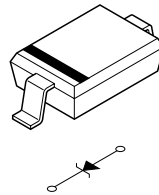


HZS10NB2TD  
HZS12NB2TD  
HZS13NB2TD  
HZS16NB2TD  
HZS33NB2  
HZS33NB2TD  
HZS4.7NB2  
HZS4.7NB2TD  
HZS5.1NB2TD  
HZS5.6NB2TD  
MTZJ-T-77-39B  
MTZJ-39B  
RD10ESB2  
RD12ES-B2  
RD12ES-T1B2  
RD13ES-B2  
RD20ES-B2  
RD20ES-T1B2  
RD22ES-B2  
RD22ES-T1B2  
RD5.1ESB2  
RD5.6ES-T1B2  
RD5.6ESB2  
1SS119-25  
1SS119-25TD  
1SS133T-77

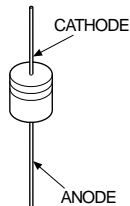


MA8039  
RD5.6S-B  
U-DZ-TE-17-3.9B  
U-DZ-TE-17-5.6B  
1SS355TE-17

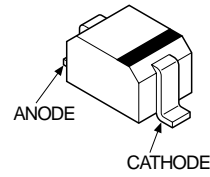


ON3171-R




RD9.1ES-L2  
RD9.1ES-T1B




RM11A  
RM11C

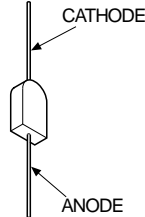


SLR-325YCT31

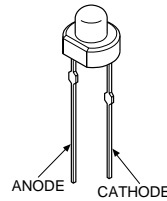


SPR-325MVW

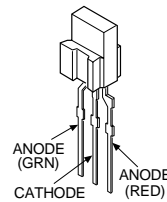


YG802C09




YG911S3R

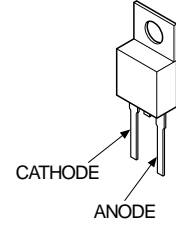


1PS181-115

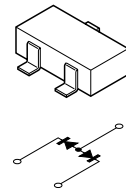

1PS226-115

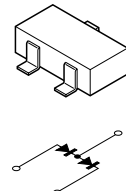

1SS376TE-17

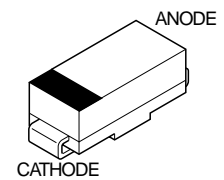

## SECTION 6 EXPLODED VIEWS


- Items with no part number and no description are not stocked because they are seldom required for routine service.
- The construction parts of an assembled part are indicated with a collation number in the remark column.
- Items marked " \* " are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.

The components identified  $\triangle$  marked are critical for safety.  
Replace only with the part number specified.

Les composants identifiés par la marque  $\triangle$  sont critiques pour la sécurité.  
Ne les remplacer que par une pièce portant le numéro spécifié.

### 6-1. CHASSIS

- $\blacktriangle$ : 7-685-647-79 +BVTP 3x10
- $\bullet$ : 7-685-648-79 +BVTP 3x12
- $\triangle$ : 7-685-881-09 +BVTT 4x8
- $\blacklozenge$ : 7-685-646-79 +BVTP 3x8
- $\blacksquare$ : 7-685-663-71 +BVTP 4x16

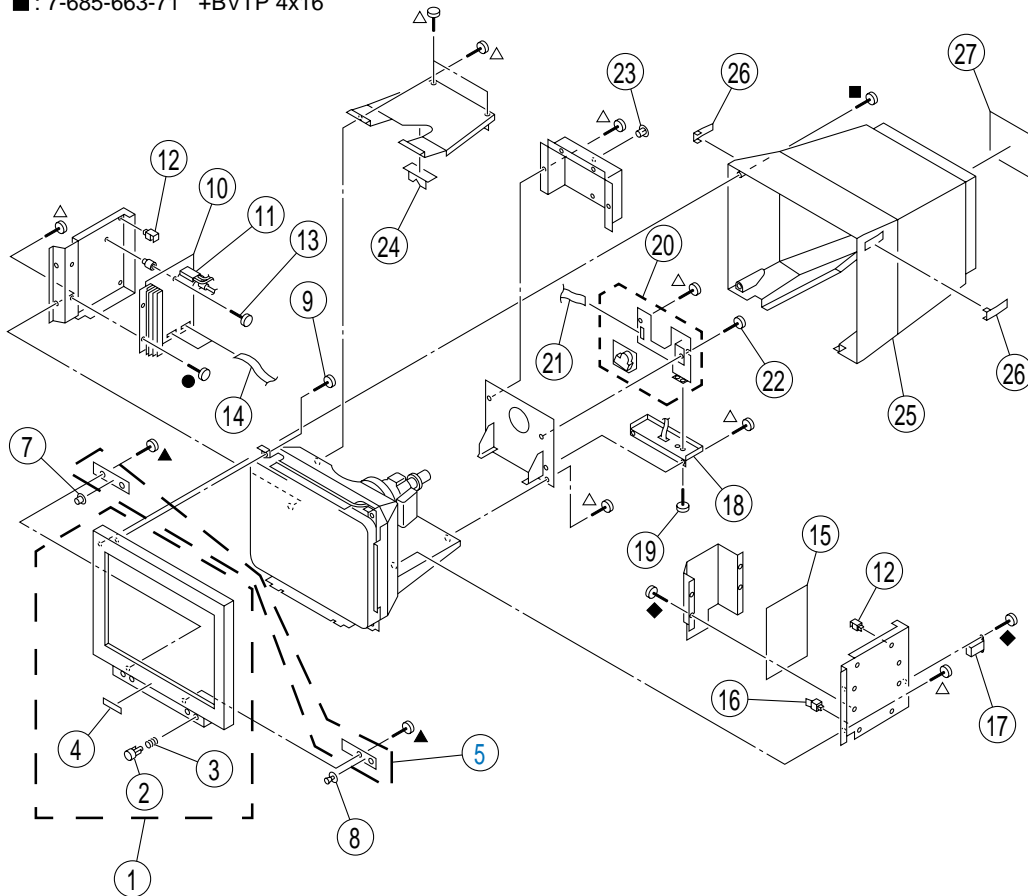


REF.NO.	PART NO.	DESCRIPTION	REMARK	REF.NO.	PART NO.	DESCRIPTION	REMARK
	1	X-4037-497-1 BEZEL ASSY	2-4	#2	15	*8-933-398-00 G BOARD, COMPLETE	
	2	4-065-308-01 BUTTON, POWER			16	4-070-730-01 HOLDER, PRINTED CIRCUIT BOARD	
	3	3-653-339-01 SPRING, COMPRESSION			17	$\triangle$ 1-251-382-31 INLET, AC 3P (WITH NOISE FILTER)	
	4	4-044-932-11 EMBLEM (NO. 8), SONY			18	1-694-569-12 TERMINAL BOARD ASSY, I/O	
#1	5	*8-933-427-00 H5/H6 BOARD, COMPLETE			19	4-070-122-01 SCREW (HD15)	
#1	<del>6</del>	<del>*A-1372-774-AH6 BOARD, COMPLETE</del>		#2	20	*8-933-393-00 A BOARD, COMPLETE	
	7	4-074-557-01 BUTTON, INPUT			21	1-900-246-08 CONNECTOR ASSY (F)	
	8	4-065-309-01 KNOB (MENU)			22	4-389-025-11 SCREW (M4) (EXT TOOTH WASHER)	
	9	4-365-808-01 SCREW (5), TAPPING			23	*4-069-570-01 SPACER, PRINTED CIRCUIT BOARD	
#2	10	*8-933-389-00 D BOARD, COMPLETE	11		24	*4-063-711-01 SUPPORT, HV CABLE	
	11	$\triangle$ X-4560-175-1 TRANSFORMER ASSY, FLYBACK (NX4502/J1D4)			25	4-074-560-01 CABINET	
	12	*3-701-903-11 HOLDER, PRINTED CIRCUIT BOARD			26	4-065-304-01 COVER, SCREW	
	13	4-062-115-01 SCREW +P 3.5X20 TYPE2			27	*4-066-155-11 LABEL, INFORMATION [U/C]	
	14	1-900-250-06 CONNECTOR ASSY (F)			27	*4-066-156-21 LABEL, INFORMATION [AEP]	

6-2. PICTURE TUBE

- : 7-685-663-71 +BVTP 4x16
- △ : 7-685-881-09 +BVTP 4x8
- ▲ : 7-685-647-79 +BVTT 3x10

The components identified △ marked are critical for safety.  
Replace only with the part number specified.

Les composants identifiés par la marque △ sont critiques pour la sécurité.  
Ne les remplacer que par une pièce portant le numéro spécifié.

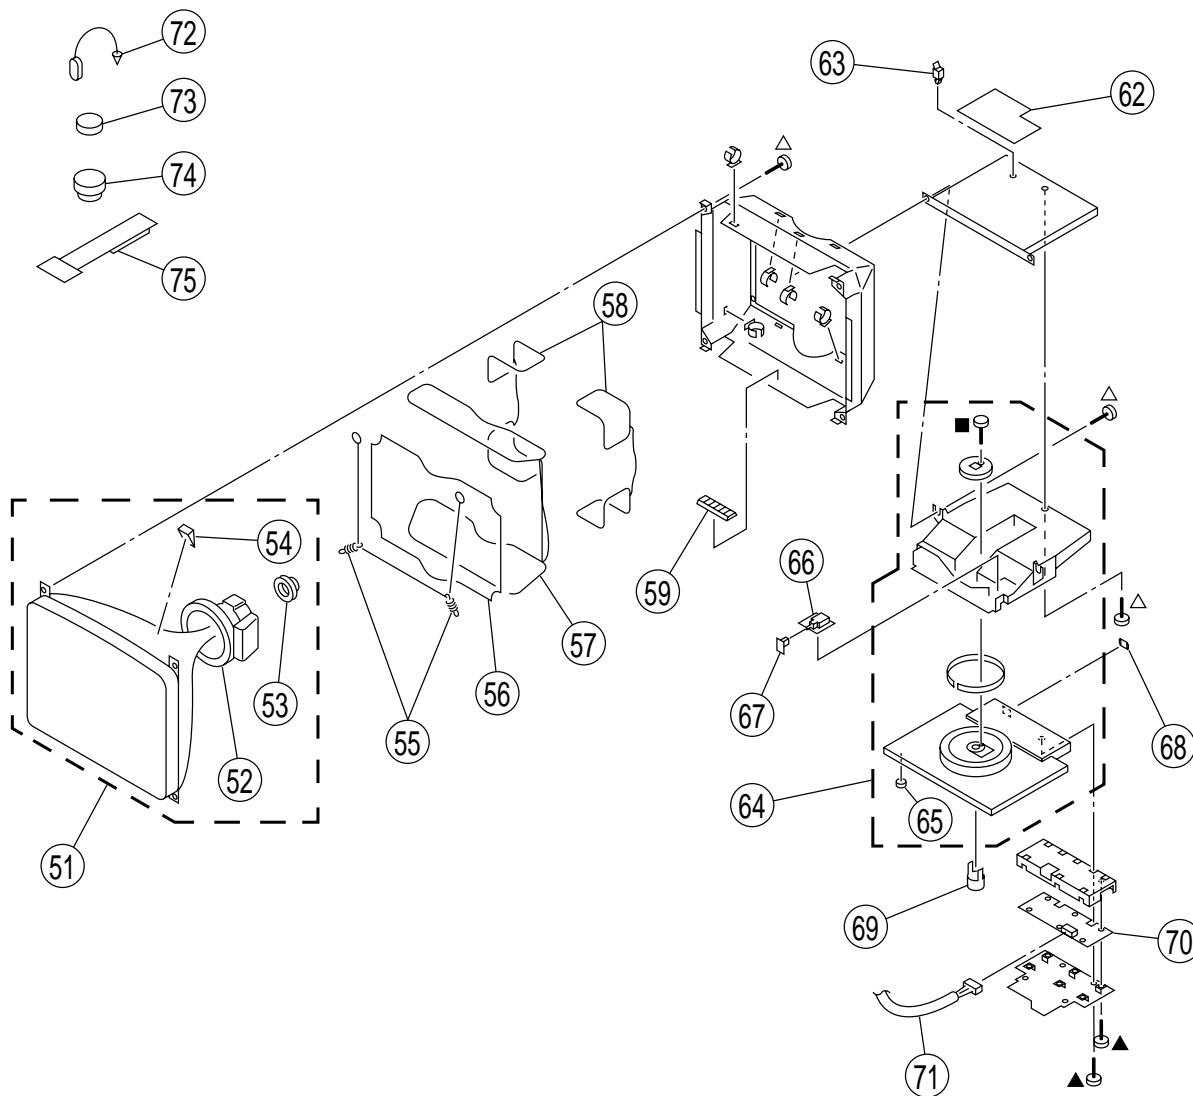


REF.NO.	PART NO.	DESCRIPTION	REMARK	REF.NO.	PART NO.	DESCRIPTION	REMARK
	51	△ 8-738-826-81 ITC ASSY(21TKR-R1)	52-54		65	4-047-474-01 FOOT, RUBBER	
	52	△ 8-451-509-11 DEFLECTION YOKE Y21TKM-M		#2	66	* 8-933-429-00 J BOARD, COMPLETE	
	53	△ 1-452-912-61 NECK ASSEMBLY (NA-2914)			67	4-065-310-01 CAP, POWER	
	54	2-162-100-21 SPACER, DEFLECTION YOKE			68	4-065-302-01 COVER, ECS	
	55	* 4-047-316-01 SPRING, EXTENSION			69	4-062-381-01 STOPPER (B)	
	56	△ 1-419-130-21 COIL, LANDING CORRECTION		#2	70	* 8-933-430-00 US BOARD, COMPLETE	
	57	△ 1-419-128-21 COIL, DEGAUSSING			71	1-900-251-16 CONNECTOR ASSY	
	58	△ 1-419-129-21 COIL, LANDING CORRECTION			72	4-308-870-00 CLIP, LEAD WIRE	
	59	4-062-670-01 SPACER, PICTURE TUBE			73	1-452-032-00 MAGNET, DISK; 10mmφ	
#2	62	* 8-933-394-00 N BOARD, COMPLETE			74	1-452-094-00 MAGNET, ROTATABLE DISK; 15mmφ	
	63	4-070-730-01 HOLDER, PRINTED CIRCUIT BOARD			75	4-051-736-21 PIECE A (90), CONV. CORRECT	
	64	X-4037-496-1 STAND ASSY	65				



6-3. PACKING MATERIALS

The components identified  $\Delta$  marked are critical for safety. Replace only with the part number specified.

Les composants identifiés par la marque  $\Delta$  sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.

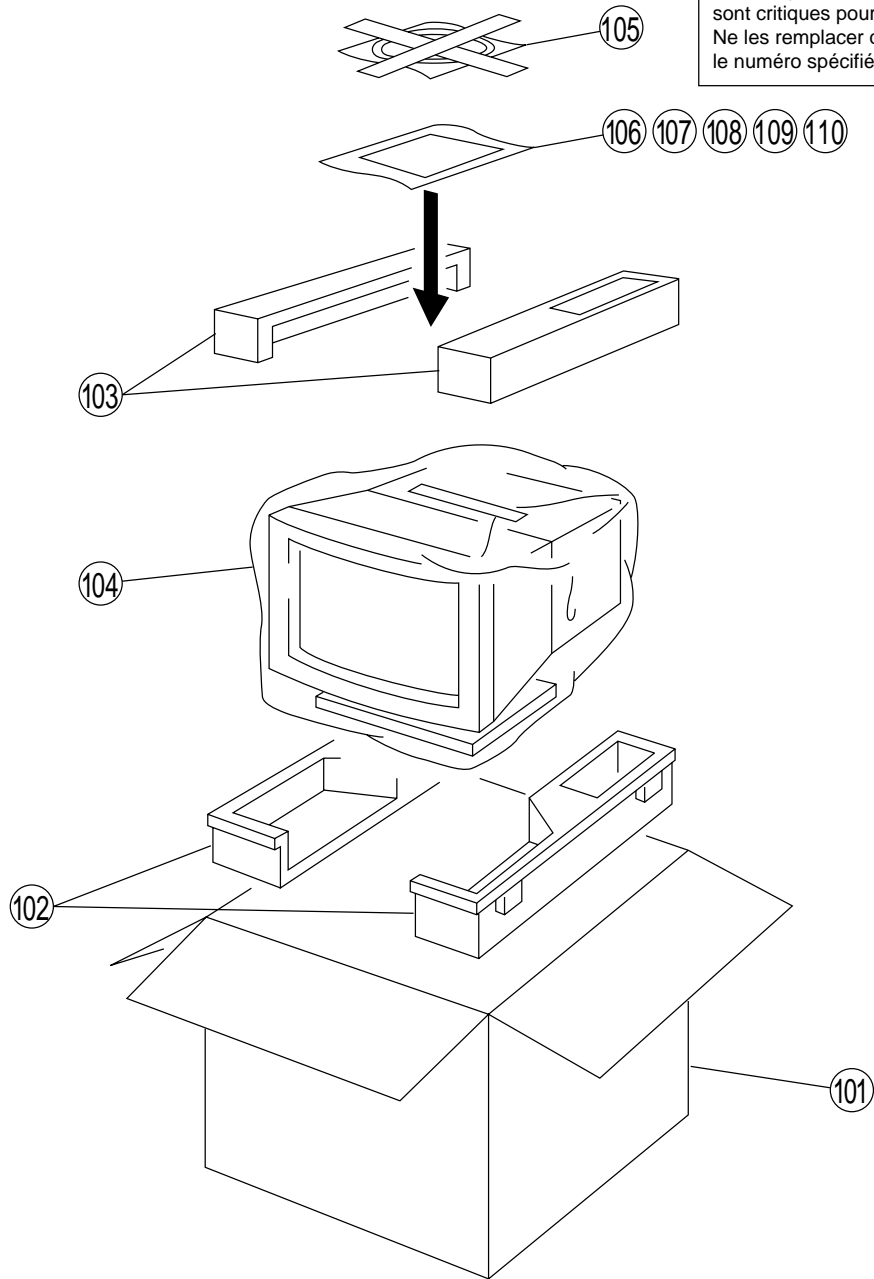

REF.NO.	PART NO.	DESCRIPTION	REMARK	REF.NO.	PART NO.	DESCRIPTION	REMARK
101	*4-075-397-01	INDIVIDUAL CARTON [AEP]		108	1-785-512-21	CONNECTOR, D SUB (15P CHANGER)	
101	*4-075-396-01	INDIVIDUAL CARTON [U/C]					[U/C]
102	*4-075-529-01	CUSHION (LOWER) (ASSY)		108	1-785-512-31	CONNECTOR, D SUB (15P CHANGER)	
103	*4-075-528-01	CUSHION (UPPER) (ASSY)					[AEP]
104	*4-041-927-31	BAG, POLYETHYLENE		109	$\Delta$ 1-782-783-31	CORD SET, POWER [U/C]	
105	1-791-692-11	CABLE ASSY (15P D SUB x2 CONNECTOR)		109	$\Delta$ 1-782-784-21	CORD SET, POWER [AEP]	
				110	4-075-035-11	MANUAL, INSTRUCTION [AEP]	
106	1-772-380-31	DISK, INFORMATION		110	4-075-035-21	MANUAL, INSTRUCTION [U/C]	
107	1-790-081-21	CABLE, USB					

## SECTION 7

### ELECTRICAL PARTS LIST

A

**NOTE:**

The components identified  $\Delta$  marked are critical for safety.  
Replace only with the part number specified.

Les composants identifiés par la marque  $\Delta$  sont critiques pour la sécurité.  
Ne les remplacer que par une pièce portant le numéro spécifié.

When indicating parts by reference number, please include the board name.

The components identified by  $\boxtimes$  in this manual have been carefully factory-selected for each set in order to satisfy regulations regarding X-ray radiation. Should replacement be required, replace only with the value originally used.

- All variable and adjustable resistors have characteristic curve B, unless otherwise noted.

• Items marked " \* " are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.

**RESISTORS**

- All resistors are in ohms
- F : nonflammable

REF.NO.	PART NO.	DESCRIPTION	REMARK	REF.NO.	PART NO.	DESCRIPTION	REMARK
	* 8-933-393-00	A BOARD, COMPLETE *****		C310	1-163-275-11	CERAMIC CHIP 0.001 $\mu$ F	5% 50V
	7-682-950-01	SCREW +PSW 3X12 (IC403)		C312	1-164-489-11	CERAMIC CHIP 0.22 $\mu$ F	10% 16V
	<CAPACITOR>			C313	1-164-489-11	CERAMIC CHIP 0.22 $\mu$ F	10% 16V
C101	1-163-021-91	CERAMIC CHIP 0.01 $\mu$ F	10% 50V	C314	1-164-004-11	CERAMIC CHIP 0.1 $\mu$ F	10% 25V
C102	1-104-664-11	ELECT 47 $\mu$ F	20% 25V	C315	1-104-341-11	FILM 0.1 $\mu$ F	10% 250V
C103	1-163-021-91	CERAMIC CHIP 0.01 $\mu$ F	10% 50V	C320	1-104-341-11	FILM 0.1 $\mu$ F	10% 250V
C104	1-104-664-11	ELECT 47 $\mu$ F	20% 25V	C401	1-126-964-11	ELECT 10 $\mu$ F	20% 50V
C107	1-164-004-11	CERAMIC CHIP 0.1 $\mu$ F	10% 25V	C402	1-104-664-11	ELECT 47 $\mu$ F	20% 25V
C108	1-164-004-11	CERAMIC CHIP 0.1 $\mu$ F	10% 25V	C403	1-163-259-91	CERAMIC CHIP 220pF	5% 50V
C109	1-163-229-11	CERAMIC CHIP 12pF	5% 50V	C404	1-163-259-91	CERAMIC CHIP 220pF	5% 50V
C110	1-163-275-11	CERAMIC CHIP 0.001 $\mu$ F	5% 50V	C405	1-164-004-11	CERAMIC CHIP 0.1 $\mu$ F	10% 25V
C112	1-164-489-11	CERAMIC CHIP 0.22 $\mu$ F	10% 16V	C406	1-163-021-91	CERAMIC CHIP 0.01 $\mu$ F	10% 50V
C113	1-164-489-11	CERAMIC CHIP 0.22 $\mu$ F	10% 16V	C407	1-163-021-91	CERAMIC CHIP 0.01 $\mu$ F	10% 50V
C114	1-164-004-11	CERAMIC CHIP 0.1 $\mu$ F	10% 25V	C408	1-163-021-91	CERAMIC CHIP 0.01 $\mu$ F	10% 50V
C115	1-104-341-11	FILM 0.1 $\mu$ F	10% 250V	C410	1-163-021-91	CERAMIC CHIP 0.01 $\mu$ F	10% 50V
C120	1-104-341-11	FILM 0.1 $\mu$ F	10% 250V	C411	1-126-934-11	ELECT 220 $\mu$ F	20% 25V
C201	1-163-021-91	CERAMIC CHIP 0.01 $\mu$ F	10% 50V	C413	1-163-021-91	CERAMIC CHIP 0.01 $\mu$ F	10% 50V
C202	1-104-664-11	ELECT 47 $\mu$ F	20% 25V	C415	1-164-489-11	CERAMIC CHIP 0.22 $\mu$ F	10% 16V
C203	1-163-021-91	CERAMIC CHIP 0.01 $\mu$ F	10% 50V	C416	1-126-961-11	ELECT 2.2 $\mu$ F	20% 50V
C204	1-104-664-11	ELECT 47 $\mu$ F	20% 25V	C417	1-104-574-11	CERAMIC 0.0047 $\mu$ F	10% 2KV
C205	1-163-021-91	CERAMIC CHIP 0.01 $\mu$ F	10% 50V	C419	1-162-318-11	CERAMIC 0.001 $\mu$ F	10% 500V
C206	1-109-982-11	CERAMIC CHIP 1 $\mu$ F	10% 10V	C420	1-164-489-11	CERAMIC CHIP 0.22 $\mu$ F	10% 16V
C207	1-164-004-11	CERAMIC CHIP 0.1 $\mu$ F	10% 25V	C421	1-163-021-91	CERAMIC CHIP 0.01 $\mu$ F	10% 50V
C208	1-164-004-11	CERAMIC CHIP 0.1 $\mu$ F	10% 25V	C422	1-164-489-11	CERAMIC CHIP 0.22 $\mu$ F	10% 16V
C209	1-163-227-11	CERAMIC CHIP 10pF	0.5pF 50V	C423	1-104-664-11	ELECT 47 $\mu$ F	20% 25V
C210	1-163-275-11	CERAMIC CHIP 0.001 $\mu$ F	5% 50V	C424	1-162-318-11	CERAMIC 0.001 $\mu$ F	10% 500V
C212	1-164-489-11	CERAMIC CHIP 0.22 $\mu$ F	10% 16V	C425	1-163-251-11	CERAMIC CHIP 100pF	5% 50V
C213	1-164-489-11	CERAMIC CHIP 0.22 $\mu$ F	10% 16V	C426	1-163-251-11	CERAMIC CHIP 100pF	5% 50V
C214	1-164-004-11	CERAMIC CHIP 0.1 $\mu$ F	10% 25V	C427	1-163-235-11	CERAMIC CHIP 22pF	5% 50V
C215	1-104-341-11	FILM 0.1 $\mu$ F	10% 250V	C430	1-163-021-91	CERAMIC CHIP 0.01 $\mu$ F	10% 50V
C216	1-163-021-91	CERAMIC CHIP 0.01 $\mu$ F	10% 50V	C431	1-163-275-11	CERAMIC CHIP 0.001 $\mu$ F	5% 50V
C220	1-104-341-11	FILM 0.1 $\mu$ F	10% 250V	C432	1-164-489-11	CERAMIC CHIP 0.22 $\mu$ F	10% 16V
C301	1-163-021-91	CERAMIC CHIP 0.01 $\mu$ F	10% 50V	C433	1-162-318-11	CERAMIC 0.001 $\mu$ F	10% 500V
C302	1-104-664-11	ELECT 47 $\mu$ F	20% 25V	C434	1-162-318-11	CERAMIC 0.001 $\mu$ F	10% 500V
C303	1-163-021-91	CERAMIC CHIP 0.01 $\mu$ F	10% 50V	C435	1-163-021-91	CERAMIC CHIP 0.01 $\mu$ F	10% 50V
C304	1-104-664-11	ELECT 47 $\mu$ F	20% 25V	C436	1-164-489-11	CERAMIC CHIP 0.22 $\mu$ F	10% 16V
C307	1-164-004-11	CERAMIC CHIP 0.1 $\mu$ F	10% 25V	C437	1-126-935-11	ELECT 470 $\mu$ F	20% 16V
C308	1-164-004-11	CERAMIC CHIP 0.1 $\mu$ F	10% 25V	C438	1-115-339-11	CERAMIC CHIP 0.1 $\mu$ F	10% 50V
C309	1-163-227-11	CERAMIC CHIP 10pF	0.5pF 50V	C440	1-163-021-91	CERAMIC CHIP 0.01 $\mu$ F	10% 50V
				C441	1-163-021-91	CERAMIC CHIP 0.01 $\mu$ F	10% 50V
				C442	1-163-021-91	CERAMIC CHIP 0.01 $\mu$ F	10% 50V
				C443	1-163-021-91	CERAMIC CHIP 0.01 $\mu$ F	10% 50V
				C444	1-162-318-11	CERAMIC 0.001 $\mu$ F	10% 500V

# GDM-F500R



Les composants identifiés par la marque  $\Delta$  sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.

The components identified  $\Delta$  marked are critical for safety. Replace only with the part number specified.

REF.NO.	PART NO.	DESCRIPTION	REMARK	REF.NO.	PART NO.	DESCRIPTION	REMARK
C446	1-104-664-11	ELECT	47 $\mu$ F 20% 25V			<IC>	
C449	1-109-982-11	CERAMIC CHIP	1 $\mu$ F 10% 10V	IC401	8-759-584-87	IC M52757FP-TP	
C450	1-107-823-11	CERAMIC CHIP	0.47 $\mu$ F 10% 16V	IC402	8-759-584-86	IC M52749FP-TP	
C456	1-164-489-11	CERAMIC CHIP	0.22 $\mu$ F 10% 16V	IC403	8-749-015-91	IC FA4301	
C457	1-163-021-91	CERAMIC CHIP	0.01 $\mu$ F 10% 50V	IC404	8-759-585-72	IC CXD9514M	
C458	1-115-339-11	CERAMIC CHIP	0.1 $\mu$ F 10% 50V	IC405	8-759-701-01	IC NJM2904M	
C459	1-128-560-11	ELECT	22 $\mu$ F 20% 100V	IC406	8-749-015-92	IC H8D2972	
C462	1-115-339-11	CERAMIC CHIP	0.1 $\mu$ F 10% 50V	IC407	8-759-925-74	IC SN74HC04ANS	
C463	1-163-021-91	CERAMIC CHIP	0.01 $\mu$ F 10% 50V			<COIL>	
C464	1-163-021-91	CERAMIC CHIP	0.01 $\mu$ F 10% 50V				
C467	1-107-957-11	ELECT	1 $\mu$ F 20% 250V				
		<CONNECTOR>		L402	1-412-529-11	INDUCTOR	22 $\mu$ H
CN401	1-793-183-11	CONNECTOR, D SUB	15P	L403	1-412-537-31	INDUCTOR	100 $\mu$ H
CN402*	1-564-509-11	PLUG, CONNECTOR	6P	L404	1-414-940-21	INDUCTOR	100 $\mu$ H
CN403	1-784-463-11	CONNECTOR, FFC/FPC	21P	L405	1-412-529-11	INDUCTOR	22 $\mu$ H
CN405*	1-564-524-11	PLUG, CONNECTOR	9P			<IC LINK>	
CN406*	1-766-179-11	PIN, CONNECTOR (PC BOARD)	2P	PS401 $\Delta$	1-533-590-31	LINK, IC (1A/90V AC, 60V DC)	
		<DIODE>				<TRANSISTOR>	
D101	8-719-062-51	DIODE	1PS226-115	Q101	8-729-120-28	TRANSISTOR	2SC1623-L5L6
D102	8-719-062-51	DIODE	1PS226-115	Q201	8-729-120-28	TRANSISTOR	2SC1623-L5L6
D103	8-719-066-10	DIODE	1PS181-115	Q301	8-729-120-28	TRANSISTOR	2SC1623-L5L6
D105	8-719-051-85	DIODE	HSS83TD	Q401	8-729-120-28	TRANSISTOR	2SC1623-L5L6
D106	8-719-052-12	DIODE	1SS376TE-17	Q402	8-729-050-41	TRANSISTOR	2SJ360TE12L
D107	8-719-052-12	DIODE	1SS376TE-17	Q406	8-729-216-22	TRANSISTOR	2SA1162-G
D201	8-719-062-51	DIODE	1PS226-115	Q407	8-729-028-74	TRANSISTOR	DTA114TUA-T106
D202	8-719-062-51	DIODE	1PS226-115	Q410	8-729-032-61	TRANSISTOR	2SC5022-02
D203	8-719-066-10	DIODE	1PS181-115			<RESISTOR>	
D205	8-719-051-85	DIODE	HSS83TD	R101	1-215-394-00	METAL	75 1% 1/4W
D206	8-719-052-12	DIODE	1SS376TE-17	R103	1-215-394-00	METAL	75 1% 1/4W
D207	8-719-052-12	DIODE	1SS376TE-17	R105	1-216-017-91	RES,CHIP	47 5% 1/10W
D301	8-719-062-51	DIODE	1PS226-115	R106	1-216-017-91	RES,CHIP	47 5% 1/10W
D302	8-719-062-51	DIODE	1PS226-115	R107	1-216-045-00	RES,CHIP	680 5% 1/10W
D303	8-719-066-10	DIODE	1PS181-115	R109	1-216-678-11	METAL,CHIP	13K 0.5% 1/10W
D305	8-719-051-85	DIODE	HSS83TD	R110	1-216-097-91	RES,CHIP	100K 5% 1/10W
D306	8-719-052-12	DIODE	1SS376TE-17	R111	1-216-041-00	RES,CHIP	470 5% 1/10W
D307	8-719-052-12	DIODE	1SS376TE-17	R112	1-216-009-91	RES,CHIP	22 5% 1/10W
D402	8-719-066-11	DIODE	1PS184-115	R113	1-216-017-91	RES,CHIP	47 5% 1/10W
D403	8-719-982-36	ZENER DIODE	MTZJ-39B	R114	1-216-009-91	RES,CHIP	22 5% 1/10W
D405	8-719-911-19	DIODE	1SS119-25	R115	1-219-742-11	CARBON	47 5% 1/2W
D406	8-719-062-51	DIODE	1PS226-115	R116	1-216-065-91	RES,CHIP	4.7K 5% 1/10W
D407	8-719-062-51	DIODE	1PS226-115	R117	1-216-121-91	RES,CHIP	1M 5% 1/10W
		<FERRITE BEAD>		R118	1-216-121-91	RES,CHIP	1M 5% 1/10W
FB102	1-500-419-22	FERRITE		R119	1-216-077-91	RES,CHIP	15K 5% 1/10W
FB202	1-500-419-22	FERRITE		R120	1-216-113-00	RES,CHIP	470K 5% 1/10W
FB302	1-500-419-22	FERRITE		R121	1-216-113-00	RES,CHIP	470K 5% 1/10W
FB402	1-412-911-11	FERRITE	1.1 $\mu$ H	R122	1-216-081-00	RES,CHIP	22K 5% 1/10W
FB403	1-412-911-11	FERRITE	1.1 $\mu$ H	R128	1-216-065-91	RES,CHIP	4.7K 5% 1/10W
FB404	1-412-911-11	FERRITE	1.1 $\mu$ H	R130	1-216-113-00	RES,CHIP	470K 5% 1/10W
FB405	1-412-911-11	FERRITE	1.1 $\mu$ H	R137	1-249-413-11	CARBON	470 5% 1/4W
FB406	1-412-911-11	FERRITE	1.1 $\mu$ H	R138	1-216-017-91	RES,CHIP	47 5% 1/10W
FB411	1-412-911-11	FERRITE	1.1 $\mu$ H	R161	1-216-041-00	RES,CHIP	470 5% 1/10W



# GDM-F500R



Les composants identifiés par la marque  $\Delta$  sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.

The components identified  $\Delta$  marked are critical for safety. Replace only with the part number specified.

REF.NO.	PART NO.	DESCRIPTION	REMARK	REF.NO.	PART NO.	DESCRIPTION	REMARK
		<SOCKET>		C661	1-107-429-11	CERAMIC	0.0022 $\mu$ F 10% 1KV
SK401	$\Delta$ 1-451-499-11	SOCKET, PICTURE TUBE		C662	1-137-370-11	FILM	0.01 $\mu$ F 5% 50V
		<CRYSTAL>		C663	1-126-965-11	ELECT	22 $\mu$ F 20% 50V
X401	1-781-472-21	VIBRATOR, CERAMIC (8MHz)		C665	1-107-909-11	ELECT	47 $\mu$ F 20% 10V
*****				C666	1-126-964-11	ELECT	10 $\mu$ F 20% 50V
		* 8-933-398-00 G BOARD, COMPLETE		C667	1-107-909-11	ELECT	47 $\mu$ F 20% 16V
		*****		C680	1-115-747-51	ELECT	0.0068F 20% 10V
		1-533-223-11 HOLDER, FUSE (F601)		C681	1-104-664-11	ELECT	47 $\mu$ F 20% 10V
		4-382-854-11 SCREW (M3X10), P, SW (+)		C682	1-137-368-11	FILM	0.0047 $\mu$ F 5% 50V
		(D610, D652, D680, IC610, IC654, Q603, Q630)		C683	1-104-664-11	ELECT	47 $\mu$ F 20% 10V
		<CAPACITOR>		C684	1-128-526-11	ELECT	100 $\mu$ F 20% 10V
C601	$\Delta$ 1-113-513-11	FILM	1 $\mu$ F 20% 275V	C685	1-128-526-11	ELECT	100 $\mu$ F 20% 10V
C602	$\Delta$ 1-113-513-11	FILM	1 $\mu$ F 20% 275V	C686	1-104-664-11	ELECT	47 $\mu$ F 20% 10V
C603	$\Delta$ 1-113-900-51	CERAMIC	470pF 10% 250V	C687	1-126-964-11	ELECT	10 $\mu$ F 20% 50V
C604	$\Delta$ 1-113-900-51	CERAMIC	470pF 10% 250V	C692	1-115-339-11	CERAMIC CHIP	0.1 $\mu$ F 10% 50V
C605	$\Delta$ 1-113-926-91	CERAMIC	0.0047 $\mu$ F 250V			<CONNECTOR>	
C606	$\Delta$ 1-113-926-91	CERAMIC	0.0047 $\mu$ F 250V	CN601*	1-580-689-11	PIN, CONNECTOR (PC BOARD)	4P
C607	1-113-900-11	CERAMIC	470pF 10% 250V	CN602*	1-691-960-11	PIN, CONNECTOR (PC BOARD)	3P
C610	1-117-849-11	ELECT	330 $\mu$ F 20% 450V	CN603*	1-691-960-11	PIN, CONNECTOR (PC BOARD)	3P
C611	1-137-479-11	FILM	1 $\mu$ F 10% 400V	CN650*	1-564-510-11	PLUG, CONNECTOR	7P
C612	1-136-169-00	FILM	0.22 $\mu$ F 5% 50V	CN651	1-564-507-51	PLUG, CONNECTOR	4P
C613	1-126-967-11	ELECT	47 $\mu$ F 20% 50V	CN652*	1-564-512-11	PLUG, CONNECTOR	9P
C614	1-163-251-11	CERAMIC CHIP	100pF 5% 50V	CN653*	1-564-509-11	PLUG, CONNECTOR	6P
C620	1-128-990-11	FILM	27000pF 5% 800V	CN654*	1-564-511-11	PLUG, CONNECTOR	8P
C621	1-104-330-91	CERAMIC	470pF 10% 1KV			<DIODE>	
C622	1-104-330-91	CERAMIC	470pF 10% 1KV	D610	$\Delta$ 8-719-510-53	DIODE D4SB60L	
C623	1-136-171-00	FILM	0.33 $\mu$ F 5% 50V	D612	8-719-911-19	DIODE 1SS119-25	
C624	1-136-171-00	FILM	0.33 $\mu$ F 5% 50V	D613	8-719-304-63	DIODE RM11C	
C625	1-136-167-00	FILM	0.15 $\mu$ F 5% 50V	D620	8-719-911-19	DIODE 1SS119-25	
C626	1-136-167-00	FILM	0.15 $\mu$ F 5% 50V	D631	8-719-063-73	DIODE D1NL20U-TR	
C627	1-104-330-91	CERAMIC	470pF 10% 1KV	D632	8-719-059-23	DIODE P6KE200AG23	
C629	1-137-370-11	FILM	0.01 $\mu$ F 5% 50V	D633	8-719-069-63	DIODE ERB38-06V1	
C630	1-163-005-11	CERAMIC CHIP	470pF 10% 50V	D634	8-719-911-19	DIODE 1SS119-25	
C631	1-104-665-11	ELECT	100 $\mu$ F 20% 25V	D635	8-719-110-53	ZENER DIODE RD20ESB2	
C633	1-164-161-11	CERAMIC CHIP	0.0022 $\mu$ F 10% 50V	D637	8-719-911-19	DIODE 1SS119-25	
C634	1-163-009-11	CERAMIC CHIP	0.001 $\mu$ F 10% 50V	D650	8-719-064-49	DIODE D4SBL40	
C650	1-107-656-11	ELECT	100 $\mu$ F 20% 250V	D651	8-719-063-73	DIODE D1NL20U-TR	
C651	1-107-651-11	ELECT	4.7 $\mu$ F 20% 250V	D652	8-719-052-91	DIODE D4SBS4-F	
C652	1-128-563-11	ELECT	100 $\mu$ F 20% 100V	D653	8-719-022-97	DIODE D2S4MF	
C653	1-128-581-11	ELECT	4.7 $\mu$ F 20% 100V	D654	8-719-022-97	DIODE D2S4MF	
C654	1-126-943-11	ELECT	2200 $\mu$ F 20% 25V	D655	8-719-063-73	DIODE D1NL20U-TR	
C655	1-104-664-11	ELECT	47 $\mu$ F 20% 25V	D656	8-719-911-19	DIODE 1SS119-25	
C656	1-126-943-11	ELECT	2200 $\mu$ F 20% 25V	D660	8-719-110-57	ZENER DIODE RD22ESB2	
C657	1-104-664-11	ELECT	47 $\mu$ F 20% 25V	D661	8-719-110-31	ZENER DIODE RD12ESB2	
C658	1-126-927-11	ELECT	2200 $\mu$ F 20% 10V	D663	8-719-911-19	DIODE 1SS119-25	
C659	1-128-339-11	ELECT	2200 $\mu$ F 20% 10V	D664	8-719-110-57	ZENER DIODE RD22ESB2	
C660	1-126-967-11	ELECT	47 $\mu$ F 20% 50V	D665	8-719-911-19	DIODE 1SS119-25	
				D666	8-719-911-19	DIODE 1SS119-25	
				D680	8-719-989-87	DIODE YG802C09	
				D681	8-719-109-89	ZENER DIODE RD5.6ESB2	
				D682	8-719-121-26	ZENER DIODE RD9.1ESL2	
				D683	8-719-911-19	DIODE 1SS119-25	

The components identified  $\Delta$  marked are critical for safety.  
Replace only with the part number specified.

Les composants identifiés par la marque  $\Delta$  sont critiques pour la sécurité.  
Ne les remplacer que par une pièce portant le numéro spécifié.

GDM-F500R



REF.NO.	PART NO.	DESCRIPTION	REMARK	REF.NO.	PART NO.	DESCRIPTION	REMARK
D690	8-719-911-19	DIODE 1SS119-25		Q667	8-729-026-49	TRANSISTOR 2SA1037AK-T146-R	
D692	8-719-911-19	DIODE 1SS119-25		Q670	8-729-026-49	TRANSISTOR 2SA1037AK-T146-R	
		<FUSE>		Q671	8-729-026-49	TRANSISTOR 2SA1037AK-T146-R	
F601	$\Delta$ 1-576-233-11	FUSE (H.B.C.) (6.3A/250V)		Q691	8-729-119-78	TRANSISTOR 2SC2785-HFE	
		<FERRITE BEAD>				<RESISTOR>	
FB630	1-410-396-41	FERRITE 0.45 $\mu$ H		R601	$\Delta$ 1-220-825-91	CARBON 330K 5% 1/2W	
FB632	$\Delta$ 1-410-397-31	FERRITE 1.1 $\mu$ H		R602	1-216-465-11	METAL OXIDE 27K 5% 2W F	
		<IC>		R603	1-247-895-91	CARBON 470K 5% 1/4W	
IC610	8-749-015-89	IC MZ1530		R604	1-216-113-00	RES,CHIP 470K 5% 1/10W	
IC630	8-759-535-32	IC FA13842P		R605	1-216-113-00	RES,CHIP 470K 5% 1/10W	
IC650	8-749-012-49	IC DM-57N		R606	1-216-097-91	RES,CHIP 100K 5% 1/10W	
IC651	8-759-592-79	IC BA00AST-V5		R607	1-216-097-91	RES,CHIP 100K 5% 1/10W	
IC652	8-759-496-15	IC BA05ST-V5		R608	1-216-073-00	RES,CHIP 10K 5% 1/10W	
IC653	8-759-450-47	IC BA05T		R609	1-216-069-00	RES,CHIP 6.8K 5% 1/10W	
IC654	8-759-643-66	IC $\mu$ PC2912HF (12)		R610	1-217-152-00	METAL 0.33 10% 2W	
IC680	8-759-321-95	IC HA17431PA		R611	1-217-153-00	METAL 0.47 10% 2W	
		<COIL>		R612	1-249-429-11	CARBON 10K 5% 1/4W	
L610	1-419-126-21	COIL, CHOKE (AFC) 216 $\mu$ H		R613	1-216-089-91	RES,CHIP 47K 5% 1/10W	
L611	1-411-674-11	INDUCTOR 68 $\mu$ H		R614	1-247-807-31	CARBON 100 5% 1/4W	
L650	1-414-742-21	INDUCTOR 22 $\mu$ H		R615	1-249-427-11	CARBON 6.8K 5% 1/4W	
L651	1-414-742-21	INDUCTOR 22 $\mu$ H		R616	1-216-671-11	METAL CHIP 6.8K 0.5% 1/10W	
L652	1-412-529-11	INDUCTOR 22 $\mu$ H		R617	1-249-417-11	CARBON 1K 5% 1/4W	
L653	1-412-529-11	INDUCTOR 22 $\mu$ H		R618	1-216-369-00	METAL OXIDE 1 5% 2W F	
L680	1-414-742-21	INDUCTOR 22 $\mu$ H		R620	1-202-933-61	FUSIBLE 0.1 10% 1/2W F	
		<PHOTO COUPLER>		R621	1-249-432-11	CARBON 18K 5% 1/4W	
PH620	8-749-924-35	PHOTO COUPLER ON3171-R		R622	1-216-089-91	RES,CHIP 47K 5% 1/10W	
PH630	8-749-924-35	PHOTO COUPLER ON3171-R		R623	1-218-642-11	METAL OXIDE 100K 5% 1W F	
		<IC LINK>		R624	1-218-642-11	METAL OXIDE 100K 5% 1W F	
PS650	$\Delta$ 1-533-593-31	LINK, IC (2A/90V AC, 60V DC)		R625	1-216-349-00	METAL OXIDE 1 5% 1W F	
		<TRANSISTOR>		R626	1-216-349-00	METAL OXIDE 1 5% 1W F	
Q603	8-729-045-39	TRANSISTOR MX0842AB-F		R627	1-216-683-11	METAL CHIP 22K 0.5% 1/10W	
Q610	8-729-119-76	TRANSISTOR 2SA1175-HFE		R628	1-216-695-11	METAL CHIP 68K 0.5% 1/10W	
Q621	8-729-119-78	TRANSISTOR 2SC2785-HFE		R629	1-216-683-11	METAL CHIP 22K 0.5% 1/10W	
Q630	8-729-045-03	TRANSISTOR 2SK2647-01MR-F91		R630	1-249-387-11	CARBON 3.3 5% 1/4W F	
Q631	8-729-041-66	TRANSISTOR 2SC4015TV2		R632	1-215-399-00	METAL 120 1% 1/4W	
Q632	8-729-041-66	TRANSISTOR 2SC4015TV2		R633	1-260-135-11	CARBON 1M 5% 1/2W	
Q633	8-729-120-28	TRANSISTOR 2SC1623-L5L6		R634	1-260-135-11	CARBON 1M 5% 1/2W	
Q650	8-729-119-76	TRANSISTOR 2SA1175-HFE		R635	1-216-465-11	METAL OXIDE 27K 5% 2W F	
Q651	8-729-230-45	TRANSISTOR 2SC2458-YGR		R636	1-247-863-91	CARBON 22K 5% 1/4W	
Q652	8-729-120-28	TRANSISTOR 2SC1623-L5L6		R637	1-219-134-11	FUSIBLE 0.1 10% 1/4W	
Q653	8-729-120-28	TRANSISTOR 2SC1623-L5L6		R638	1-219-134-11	FUSIBLE 0.1 10% 1/4W	
Q654	8-729-026-49	TRANSISTOR 2SA1037AK-T146-R		R649	1-249-437-11	CARBON 47K 5% 1/4W F	
				R650	1-216-057-00	RES,CHIP 2.2K 5% 1/10W	
				R652	1-216-113-00	RES,CHIP 470K 5% 1/10W	
				R653	1-249-413-11	CARBON 470 5% 1/4W	
				R654	1-211-796-11	FUSIBLE 1 5% 1/2W F	
				R655	1-216-065-91	RES,CHIP 4.7K 5% 1/10W	
				R656	1-260-292-11	CARBON 1 5% 1/2W	
				R657	1-249-443-11	CARBON 0.47 5% 1/4W F	
				R658	1-216-073-00	RES,CHIP 10K 5% 1/10W	
				R659	1-216-049-91	RES,CHIP 1K 5% 1/10W	
				R660	1-216-073-00	RES,CHIP 10K 5% 1/10W	
				R661	1-247-807-31	CARBON 100 5% 1/4W	
				R662	1-216-073-00	RES,CHIP 10K 5% 1/10W	

**GDM-F500R**



Les composants identifiés par la marque  $\Delta$  sont critiques pour la sécurité.  
Ne les remplacer que par une pièce portant le numéro spécifié.

The components identified  $\Delta$  marked are critical for safety.  
Replace only with the part number specified.

REF.NO.	PART NO.	DESCRIPTION	REMARK	REF.NO.	PART NO.	DESCRIPTION	REMARK
R663	1-216-073-00	RES,CHIP 10K	5% 1/10W	VDR602 $\Delta$	1-810-622-11	VARISTOR	
R664	1-216-073-00	RES,CHIP 10K	5% 1/10W				
R665	1-216-057-00	RES,CHIP 2.2K	5% 1/10W				
R666	1-216-073-00	RES,CHIP 10K	5% 1/10W				
R667	1-216-089-91	RES,CHIP 47K	5% 1/10W				
R668	1-215-457-00	METAL 33K	1% 1/4W				
R670	1-216-677-11	METAL CHIP 12K	0.5% 1/10W	* 8-933-389-00	D BOARD, COMPLETE		
R671	1-216-677-11	METAL CHIP 12K	0.5% 1/10W				
R672	1-216-664-11	METAL CHIP 3.6K	0.5% 1/10W				
R673	1-216-073-00	RES,CHIP 10K	5% 1/10W				
R674	1-216-097-91	RES,CHIP 100K	5% 1/10W				
R675	1-216-668-11	METAL CHIP 5.1K	0.5% 1/10W				
R676	1-216-663-11	METAL CHIP 3.3K	0.5% 1/10W				
R677	1-216-661-11	METAL CHIP 2.7K	0.5% 1/10W				
R678	1-216-391-11	METAL OXIDE 1.5	5% 3W F				
R680	1-215-475-00	METAL 180K	1% 1/4W	7-685-647-79	SCREW +BVTP 3X10 TYPE2 TT(B)		(D511, IC502, Q508, Q515, R547)
R681	1-216-073-00	RES,CHIP 10K	5% 1/10W				
R682	1-216-049-91	RES,CHIP 1K	5% 1/10W				
R683	1-216-057-00	RES,CHIP 2.2K	5% 1/10W				
R684	1-216-073-00	RES,CHIP 10K	5% 1/10W				
R685	1-216-049-91	RES,CHIP 1K	5% 1/10W				
R686	1-216-033-00	RES,CHIP 220	5% 1/10W				
R687	1-216-081-00	RES,CHIP 22K	5% 1/10W				
R688	1-215-473-00	METAL 150K	1% 1/4W				
R693	1-260-085-11	CARBON 68	5% 1/2W				
R694	1-216-073-00	RES,CHIP 10K	5% 1/10W				
R695	1-216-065-91	RES,CHIP 4.7K	5% 1/10W				
R696	1-249-407-11	CARBON 150	5% 1/4W				
		<RELAY>					
RY602 $\Delta$	1-755-318-11	RELAY, POWER					
RY603 $\Delta$	1-755-067-21	RELAY					
		<SPARK GAP>					
SG601 $\Delta$	1-533-982-11	GAP, SPARK					
		<TRANSFORMER>					
T601 $\Delta$	1-429-180-11	TRANSFORMER, LINE FILTER					
T620	1-433-894-11	TRANSFORMER, CONVERTER (PIT)					
T621	1-429-992-11	TRANSFORMER, CONVERTER (PRT)					
T630	1-433-895-31	TRANSFORMER, CONVERTER (SRT)					
		<THERMISTOR>					
TH601 $\Delta$	1-809-260-11	THERMISTOR, POWER					
THP601 $\Delta$	1-809-827-31	THERMISTOR, POSITIVE					
		<VARISTOR>					
VDR601 $\Delta$	1-801-268-51	VARISTOR TNR14V471K660					
				C501	1-163-021-91	CERAMIC CHIP 0.01 $\mu$ F	10% 50V
				C502	1-136-169-00	FILM 0.22 $\mu$ F	5% 50V
				C503	1-163-021-91	CERAMIC CHIP 0.01 $\mu$ F	10% 50V
				C504	1-163-017-00	CERAMIC CHIP 0.0047 $\mu$ F	10% 50V
				C505	1-163-021-91	CERAMIC CHIP 0.01 $\mu$ F	10% 50V
				C506	1-137-194-81	FILM 0.47 $\mu$ F	5% 50V
				C507	1-136-169-00	FILM 0.22 $\mu$ F	5% 50V
				C508	1-126-965-11	ELECT 22 $\mu$ F	20% 50V
				C509	1-117-670-31	FILM 0.82 $\mu$ F	5% 250V
				C510	1-117-398-11	ELECT 33 $\mu$ F	20% 250V
				C511	1-163-113-00	CERAMIC CHIP 68pF	5% 50V
				C512	1-163-259-91	CERAMIC CHIP 220pF	5% 50V
				C513	1-163-017-00	CERAMIC CHIP 0.0047 $\mu$ F	10% 50V
				C514	1-106-375-12	MYLAR 0.022 $\mu$ F	200V
				C515	1-163-021-91	CERAMIC CHIP 0.01 $\mu$ F	10% 50V
				C516	1-126-935-11	ELECT 470 $\mu$ F	20% 16V
				C517	1-163-021-91	CERAMIC CHIP 0.01 $\mu$ F	10% 50V
				C518	1-137-194-81	FILM 0.47 $\mu$ F	5% 50V
				C519	1-163-021-91	CERAMIC CHIP 0.01 $\mu$ F	10% 50V
				C520	1-107-914-11	ELECT 1000 $\mu$ F	20% 25V
				C521	1-117-666-11	FILM 0.39 $\mu$ F	5% 250V
				C522	1-137-368-11	FILM 0.0047 $\mu$ F	5% 50V
				C523	1-137-368-11	FILM 0.0047 $\mu$ F	5% 50V
				C524	1-163-133-00	CERAMIC CHIP 470pF	5% 50V
				C525	1-104-760-11	CERAMIC CHIP 0.047 $\mu$ F	10% 50V
				C526	1-163-021-91	CERAMIC CHIP 0.01 $\mu$ F	10% 50V
				C527	1-163-021-91	CERAMIC CHIP 0.01 $\mu$ F	10% 50V
				C528	1-117-663-31	FILM 0.22 $\mu$ F	5% 250V
				C529	1-104-665-11	ELECT 100 $\mu$ F	20% 25V
				C530	1-163-021-91	CERAMIC CHIP 0.01 $\mu$ F	10% 50V
				C531	1-107-846-11	FILM 0.1 $\mu$ F	5% 250V
				C532	1-163-009-11	CERAMIC CHIP 0.001 $\mu$ F	10% 50V
				C533	1-107-889-11	ELECT 220 $\mu$ F	20% 25V
				C534	1-107-889-11	ELECT 220 $\mu$ F	20% 25V
				C535	1-163-021-91	CERAMIC CHIP 0.01 $\mu$ F	10% 50V
				C536	1-126-967-11	ELECT 47 $\mu$ F	20% 50V
				C537	1-113-694-11	FILM 0.056 $\mu$ F	5% 400V
				C538	1-163-021-91	CERAMIC CHIP 0.01 $\mu$ F	10% 50V



REF.NO.	PART NO.	DESCRIPTION	REMARK	REF.NO.	PART NO.	DESCRIPTION	REMARK
C539	1-163-017-00	CERAMIC CHIP 0.0047μF	10% 50V	C910	1-126-962-11	ELECT 3.3μF	20% 50V
C540	1-106-343-00	MYLAR 0.001μF	10% 200V	C912	1-106-383-00	MYLAR 0.047μF	10% 200V
C541	1-164-161-11	CERAMIC CHIP 0.0022μF	10% 50V	C913	1-119-748-11	ELECT 33μF	20% 400V
C542	1-163-021-91	CERAMIC CHIP 0.01μF	10% 50V	C914	1-106-383-00	MYLAR 0.047μF	10% 200V
C543	1-135-350-11	FILM 3600pF	3% 1.8KV	C915	1-136-169-00	FILM 0.22μF	5% 50V
C544	1-125-925-11	FILM MELF 0.027μF	5% 400V	C916	1-117-626-11	FILM 2000pF	3% 1.2KV
C545	1-107-597-11	CERAMIC 22pF	5% 500V	C917	1-117-665-11	FILM 0.33μF	5% 250V
C546	1-107-444-11	CERAMIC 100pF	5% 2KV	C918	1-106-359-00	MYLAR 0.0047μF	10% 100V
C547	1-130-061-91	FILM 0.0015μF	5% 630V	C919	1-115-350-51	CERAMIC 0.0047μF	2KV
C548	1-162-134-11	CERAMIC 470pF	10% 2KV	C920	1-137-372-11	FILM 0.022μF	5% 50V
C549	1-130-495-00	FILM 0.1μF	5% 50V	C921	1-106-228-00	MYLAR 0.22μF	10% 100V
C550	1-127-833-11	FILM 0.15μF	5% 400V	C922	1-106-220-00	MYLAR 0.1μF	10% 100V
C551	1-163-017-00	CERAMIC CHIP 0.0047μF	10% 50V	C923	1-106-355-12	MYLAR 0.0033μF	10% 200V
C552	1-163-021-91	CERAMIC CHIP 0.01μF	10% 50V	C924	1-106-220-00	MYLAR 0.1μF	10% 100V
C554	1-107-444-11	CERAMIC 100pF	5% 2KV	C925	1-126-967-11	ELECT 47μF	20% 50V
C555	1-107-683-11	ELECT 2.2μF	250V	C926	1-126-964-11	ELECT 10μF	20% 50V
C556	1-115-356-11	FILM 1.2μF	5% 250V	C927	1-163-243-11	CERAMIC CHIP 47pF	5% 50V
C557	1-163-021-91	CERAMIC CHIP 0.01μF	10% 50V	C928	1-163-133-00	CERAMIC CHIP 470pF	5% 50V
C558	1-104-665-11	ELECT 100μF	20% 25V	C929	1-164-004-11	CERAMIC CHIP 0.1μF	10% 25V
C559	1-107-649-11	ELECT 2.2μF	20% 250V	C930	1-163-227-11	CERAMIC CHIP 10pF	0.5pF 50V
C560	1-163-021-91	CERAMIC CHIP 0.01μF	10% 50V	C931	1-126-964-11	ELECT 10μF	20% 50V
C561	1-104-664-11	ELECT 47μF	20% 25V	C932	1-163-021-91	CERAMIC CHIP 0.01μF	10% 50V
C562	1-163-021-91	CERAMIC CHIP 0.01μF	10% 50V	C933	1-126-960-11	ELECT 1μF	20% 50V
C563	1-163-011-11	CERAMIC CHIP 0.0015μF	10% 50V	C935	1-163-275-11	CERAMIC CHIP 0.001μF	5% 50V
C564	1-126-960-11	ELECT 1μF	20% 50V	<CONNECTOR>			
C565	1-164-004-11	CERAMIC CHIP 0.1μF	10% 25V	CN501*	1-564-509-11	PLUG, CONNECTOR 6P	
C566	1-137-370-11	FILM 0.01μF	5% 50V	CN502*	1-564-510-11	PLUG, CONNECTOR 7P	
C567	1-164-161-11	CERAMIC CHIP 0.0022μF	10% 50V	CN503*	1-508-879-11	BASE POST	
C568	1-104-760-11	CERAMIC CHIP 0.047μF	10% 50V	CN504	1-784-786-11	CONNECTOR, FFC 25P	
C571	1-163-227-11	CERAMIC CHIP 10pF	0.5pF 50V	CN505	1-784-786-11	CONNECTOR, FFC 25P	
C572	1-163-009-11	CERAMIC CHIP 0.001μF	10% 50V	CN506	1-764-101-11	PIN, CONNECTOR (PC BOARD) 2P	
C573	1-106-375-12	MYLAR 0.022μF	200V	CN508*	1-564-511-11	PLUG, CONNECTOR 8P	
C574	1-163-017-00	CERAMIC CHIP 0.0047μF	10% 50V	CN509*	1-778-955-11	PIN, CONNECTOR (PC BOARD) 10P	
C575	1-163-021-91	CERAMIC CHIP 0.01μF	10% 50V	<DIODE>			
C577	1-126-964-11	ELECT 10μF	20% 50V	D504	8-719-988-61	DIODE 1SS355TE-17	
C701	1-128-560-11	ELECT 22μF	20% 100V	D505	8-719-110-36	ZENER DIODE RD13ESB2	
C702	1-128-562-11	ELECT 47μF	20% 100V	D506	8-719-991-33	DIODE 1SS133T-77	
C703	1-104-331-11	CERAMIC 0.0022μF	10% 1KV	D507	8-719-063-89	DIODE YG911S3R	
C704	1-104-568-11	CERAMIC 470pF	10% 2KV	D508	8-719-031-79	DIODE D5SC4M	
C706	1-164-004-11	CERAMIC CHIP 0.1μF	10% 25V	D509	8-719-991-33	DIODE 1SS133T-77	
C707	1-130-495-00	FILM 0.1μF	5% 50V	D510	8-719-109-85	ZENER DIODE RD5.1ESB2	
C708	1-126-942-61	ELECT 1000μF	20% 25V	D511	8-719-066-36	DIODE FMQ-G5GS	
C709	1-163-021-91	CERAMIC CHIP 0.01μF	10% 50V	D512	8-719-988-61	DIODE 1SS355TE-17	
C710	1-107-894-11	ELECT 220μF	20% 35V	D513	8-719-991-33	DIODE 1SS133T-77	
C711	1-163-019-00	CERAMIC CHIP 0.0068μF	10% 50V	D514	8-719-991-33	DIODE 1SS133T-77	
C712	1-106-228-00	MYLAR 0.22μF	10% 100V	D515	8-719-109-89	ZENER DIODE RD5.6ESB2	
C713	1-126-942-61	ELECT 1000μF	20% 25V	D516	8-719-991-33	DIODE 1SS133T-77	
C715	1-164-004-11	CERAMIC CHIP 0.1μF	10% 25V	D517	8-719-951-30	DIODE ERA91-02	
C720	1-126-964-11	ELECT 10μF	20% 50V	D519	8-719-988-61	DIODE 1SS355TE-17	
C901	1-163-021-91	CERAMIC CHIP 0.01μF	10% 50V	D520	8-719-988-61	DIODE 1SS355TE-17	
C902	1-104-665-11	ELECT 100μF	20% 25V	D522	8-719-988-61	DIODE 1SS355TE-17	
C903	1-126-964-11	ELECT 10μF	20% 50V	D701	8-719-991-33	DIODE 1SS133T-77	
C905	1-163-127-00	CERAMIC CHIP 270pF	5% 50V				
C907	1-163-257-11	CERAMIC CHIP 180pF	5% 50V				
C908	1-163-021-91	CERAMIC CHIP 0.01μF	10% 50V				
C909	1-126-935-11	ELECT 470μF	20% 16V				



# GDM-F500R



REF.NO.	PART NO.	DESCRIPTION	REMARK	REF.NO.	PART NO.	DESCRIPTION	REMARK
D702	8-719-991-33	DIODE 1SS133T-77		JR011	1-216-295-91	SHORT	0
D703	8-719-991-33	DIODE 1SS133T-77		JR012	1-216-296-91	SHORT	0
D706	8-719-979-58	DIODE EGP10D		JR013	1-216-295-91	SHORT	0
D707	8-719-109-85	ZENER DIODE RD5.1ESB2		JR014	1-216-296-91	SHORT	0
D708	8-719-908-03	DIODE GP08D		JR015	1-216-296-91	SHORT	0
D709	8-719-948-45	DIODE ERA22-08		JR016	1-216-295-91	SHORT	0
D710	8-719-109-85	ZENER DIODE RD5.1ESB2					
D901	8-719-991-33	DIODE 1SS133T-77			<COIL>		
D902	8-719-110-31	ZENER DIODE RD12ESB2		L501	1-412-537-31	INDUCTOR	100μH
D904	8-719-988-61	DIODE 1SS355TE-17		L502	1-406-673-11	COIL, CHOKE	2.2mH
D905	8-719-110-36	ZENER DIODE RD13ESB2		L503	1-406-671-11	COIL, CHOKE	1mH
D906	8-719-063-89	DIODE YG911S3R		L504	1-406-675-11	COIL, CHOKE	4.7mH
D907	8-719-930-97	ZENER DIODE HZS16NB2TD		L505	1-416-401-31	COIL, CHOKE	5mH
D908	8-719-018-82	DIODE RGP02-20EL-6394					
D909	8-719-930-97	ZENER DIODE HZS16NB2TD		L901	1-412-537-31	INDUCTOR	100μH
D910	8-719-991-33	DIODE 1SS133T-77		L902	1-406-660-41	COIL, CHOKE	15μH
D912	8-719-979-58	DIODE EGP10D					
D913	8-719-991-33	DIODE 1SS133T-77			<TRANSISTOR>		
D914	8-719-991-33	DIODE 1SS133T-77		Q501	8-729-048-49	TRANSISTOR 2SK3262-01MR-F119	
D915	8-719-929-72	ZENER DIODE HZS33NB2		Q502	8-729-120-28	TRANSISTOR 2SC1623-L5L6	
D917	8-719-988-61	DIODE 1SS355TE-17		Q503	8-729-901-97	TRANSISTOR 2SA1036K-Q	
D918	8-719-991-33	DIODE 1SS133T-77		Q504	8-729-901-87	TRANSISTOR 2SC2411K-CQ	
D919	8-719-991-33	DIODE 1SS133T-77		Q505	8-729-901-97	TRANSISTOR 2SA1036K-Q	
D920	8-719-928-85	ZENER DIODE HZS4.7NB2		Q506	8-729-048-49	TRANSISTOR 2SK3262-01MR-F119	
D921	8-719-988-61	DIODE 1SS355TE-17		Q507	8-729-048-49	TRANSISTOR 2SK3262-01MR-F119	
D922	8-719-018-82	DIODE RGP02-20EL-6394		Q508	8-729-048-53	TRANSISTOR 2SJ569LS-CB11	
D923	8-719-988-61	DIODE 1SS355TE-17		Q509	8-729-820-73	TRANSISTOR 2SC3746	
		<FERRITE BEAD>		Q510	8-729-048-49	TRANSISTOR 2SK3262-01MR-F119	
FB501	1-410-397-21	FERRITE	1.1μH	Q511	8-729-048-49	TRANSISTOR 2SK3262-01MR-F119	
FB502	1-410-397-21	FERRITE	1.1μH	Q512	8-729-048-49	TRANSISTOR 2SK3262-01MR-F119	
FB503	1-412-911-11	FERRITE	1.1μH	Q513	8-729-048-49	TRANSISTOR 2SK3262-01MR-F119	
FB504	1-412-911-11	FERRITE	1.1μH	Q514	8-729-140-50	TRANSISTOR 2SC3209LK	
FB505	1-412-911-11	FERRITE	1.1μH	Q515	8-729-048-48	TRANSISTOR 2SC5570 (LBSONY)	
FB506	1-410-397-21	FERRITE	1.1μH	Q516	8-729-024-95	TRANSISTOR 2SB1565EF	
FB507	1-410-397-21	FERRITE	1.1μH	Q517	8-729-048-49	TRANSISTOR 2SK3262-01MR-F119	
FB901	1-410-397-21	FERRITE	1.1μH	Q518	8-729-019-01	TRANSISTOR 2SD2394-EF	
		<IC>		Q519	8-729-033-25	TRANSISTOR DTC114GKA	
IC501	8-759-585-82	IC BA9759F-E2		Q520	8-729-120-28	TRANSISTOR 2SC1623-L5L6	
IC502	8-759-803-42	IC LA6500-FA		Q521	8-729-120-28	TRANSISTOR 2SC1623-L5L6	
IC503	8-759-058-50	IC XRA10324AF		Q522	8-729-120-28	TRANSISTOR 2SC1623-L5L6	
IC701	8-759-444-82	IC LA7841L		Q523	8-729-120-28	TRANSISTOR 2SC1623-L5L6	
IC901	8-759-585-81	IC BA9758FS-E2		Q524	8-729-026-49	TRANSISTOR 2SA1037AK-T146-R	
		<CHIP CONDUCTOR>		Q525	8-729-048-49	TRANSISTOR 2SK3262-01MR-F119	
JR002	1-216-296-91	SHORT	0	Q526	8-729-027-35	TRANSISTOR DTA143TKA-T146	
JR003	1-216-295-91	SHORT	0	Q701	8-729-800-32	TRANSISTOR 2SC2362K-G	
JR004	1-216-295-91	SHORT	0	Q702	8-729-178-43	TRANSISTOR 2SC2784-E	
JR005	1-216-296-91	SHORT	0	Q703	8-729-204-91	TRANSISTOR 2SA1049-GR	
JR006	1-216-295-91	SHORT	0	Q704	8-729-207-82	TRANSISTOR 2SC3421-Y	
JR008	1-216-295-91	SHORT	0	Q705	8-729-207-89	TRANSISTOR 2SA1358-Y	
JR009	1-216-295-91	SHORT	0	Q706	8-729-026-49	TRANSISTOR 2SA1037AK-T146-R	
JR010	1-216-295-91	SHORT	0	Q707	8-729-046-80	TRANSISTOR 2SC4634LS-CB11	
				Q903	8-729-901-87	TRANSISTOR 2SC2411K-CQ	
				Q904	8-729-901-97	TRANSISTOR 2SA1036K-Q	
				Q905	8-729-048-53	TRANSISTOR 2SJ569LS-CB11	
				Q906	8-729-044-21	TRANSISTOR 2SK2655-01R-F165	



REF.NO.	PART NO.	DESCRIPTION	REMARK	REF.NO.	PART NO.	DESCRIPTION	REMARK
Q907	8-729-033-26	TRANSISTOR DTA114GKAT146		R552	1-216-097-91	RES,CHIP 100K	5% 1/10W
Q908	8-729-033-25	TRANSISTOR DTC114GKA		R553	1-247-815-91	CARBON 220	5% 1/4W
		<RESISTOR>		R554	1-216-679-11	METAL CHIP 15K	0.5% 1/10W
				R555	1-216-675-91	METAL CHIP 10K	0.5% 1/10W
R501	1-215-884-11	METAL OXIDE 47	5% 2W F	R556	1-216-683-11	METAL CHIP 22K	0.5% 1/10W
R502	1-216-059-00	RES,CHIP 2.7K	5% 1/10W	R557	1-216-423-11	METAL OXIDE 27	5% 1W F
R503	1-216-049-91	RES,CHIP 1K	5% 1/10W	R558	1-249-437-11	CARBON 47K	5% 1/4W
R504	1-216-049-91	RES,CHIP 1K	5% 1/10W	R559	1-216-073-00	RES,CHIP 10K	5% 1/10W
R505	1-216-049-91	RES,CHIP 1K	5% 1/10W	R560	1-216-675-91	METAL CHIP 10K	0.5% 1/10W
R506	1-216-049-91	RES,CHIP 1K	5% 1/10W	R561	1-215-443-00	METAL 8.2K	1% 1/4W
R507	1-216-097-91	RES,CHIP 100K	5% 1/10W	R562	1-216-677-11	METAL CHIP 12K	0.5% 1/10W
R508	1-247-815-91	CARBON 220	5% 1/4W	R563	1-216-049-91	RES,CHIP 1K	5% 1/10W
R509	1-216-049-91	RES,CHIP 1K	5% 1/10W	R564	1-216-677-11	METAL CHIP 12K	0.5% 1/10W
R510	1-216-675-91	METAL CHIP 10K	0.5% 1/10W	R565	1-216-097-91	RES,CHIP 100K	5% 1/10W
R511	1-216-065-91	RES,CHIP 4.7K	5% 1/10W	R566	1-216-687-11	METAL CHIP 33K	0.5% 1/10W
R512	1-215-453-00	METAL 22K	1% 1/4W	R567	1-214-840-00	METAL 100	1% 1/2W
R513	1-216-049-91	RES,CHIP 1K	5% 1/10W	R568	1-216-665-11	METAL CHIP 3.9K	0.5% 1/10W
R514	1-216-097-91	RES,CHIP 100K	5% 1/10W	R569	1-216-691-11	METAL CHIP 47K	0.5% 1/10W
R515	1-216-049-91	RES,CHIP 1K	5% 1/10W	R570	1-260-332-51	CARBON 2.2K	5% 1/2W
R516	1-216-049-91	RES,CHIP 1K	5% 1/10W	R571	1-249-425-11	CARBON 4.7K	5% 1/4W
R517	1-216-687-11	METAL CHIP 33K	0.5% 1/10W	R572	1-216-385-11	METAL OXIDE 0.47	5% 3W F
R518	1-216-691-11	METAL CHIP 47K	0.5% 1/10W	R573	1-249-437-11	CARBON 47K	5% 1/4W
R519	1-216-081-00	RES,CHIP 22K	5% 1/10W	R574	1-216-097-91	RES,CHIP 100K	5% 1/10W
R520	1-247-791-91	CARBON 22	5% 1/4W	R575	1-216-672-11	METAL CHIP 7.5K	0.5% 1/10W
R521	1-216-667-11	METAL CHIP 4.7K	0.5% 1/10W	R576	1-215-869-11	METAL OXIDE 1K	5% 1W F
R522	1-249-437-11	CARBON 47K	5% 1/4W	R577	1-260-310-71	CARBON 33	5% 1/2W
R523	1-216-033-00	RES,CHIP 220	5% 1/10W	R578	1-216-049-91	RES,CHIP 1K	5% 1/10W
R524	1-216-049-91	RES,CHIP 1K	5% 1/10W	R579	1-216-049-91	RES,CHIP 1K	5% 1/10W
R525	1-216-065-91	RES,CHIP 4.7K	5% 1/10W	R580	1-214-840-00	METAL 100	1% 1/2W
R526	1-216-097-91	RES,CHIP 100K	5% 1/10W	R581	1-260-316-51	CARBON 100	5% 1/2W
R527	1-216-673-11	METAL CHIP 8.2K	0.5% 1/10W	R582	1-214-840-00	METAL 100	1% 1/2W
R528	1-216-677-11	METAL CHIP 12K	0.5% 1/10W	R583	1-249-437-11	CARBON 47K	5% 1/4W
R529	1-216-057-00	RES,CHIP 2.2K	5% 1/10W	R584	1-249-437-11	CARBON 47K	5% 1/4W
R530	1-216-049-91	RES,CHIP 1K	5% 1/10W	R585	1-216-073-00	RES,CHIP 10K	5% 1/10W
R531	1-216-097-91	RES,CHIP 100K	5% 1/10W	R586	1-216-683-11	METAL CHIP 22K	0.5% 1/10W
R532	1-215-860-11	METAL OXIDE 33	5% 1W F	R587	1-215-886-11	METAL OXIDE 100	5% 2WF
R533	1-211-796-11	FUSIBLE 1	5% 1/2W F	R588	1-260-085-11	CARBON 68	5% 1/2W
R534	1-216-689-11	METAL CHIP 39K	0.5% 1/10W	R589	1-216-057-00	RES,CHIP 2.2K	5% 1/10W
R535	1-216-065-91	RES,CHIP 4.7K	5% 1/10W	R590	1-216-057-00	RES,CHIP 2.2K	5% 1/10W
R536	1-216-683-11	METAL CHIP 22K	0.5% 1/10W	R591	1-247-807-31	CARBON 100	5% 1/4W
R537	1-249-437-11	CARBON 47K	5% 1/4W	R593	1-216-073-00	RES,CHIP 10K	5% 1/10W
R538	1-216-049-91	RES,CHIP 1K	5% 1/10W	R594	1-216-683-11	METAL CHIP 22K	0.5% 1/10W
R539	1-216-097-91	RES,CHIP 100K	5% 1/10W	R595	1-216-659-11	METAL CHIP 2.2K	0.5% 1/10W
R540	1-215-909-11	METAL OXIDE 47	5% 3W F	R597	1-216-073-00	RES,CHIP 10K	5% 1/10W
R541	1-216-295-91	SHORT 0		R598	1-216-675-91	METAL CHIP 10K	0.5% 1/10W
R542	1-249-437-11	CARBON 47K	5% 1/4W	R599	1-216-657-11	METAL CHIP 1.8K	0.5% 1/10W
R543	1-216-677-11	METAL CHIP 12K	0.5% 1/10W	R701	1-216-049-91	RES,CHIP 1K	5% 1/10W
R544	1-216-049-91	RES,CHIP 1K	5% 1/10W	R702	1-249-393-11	CARBON 10	5% 1/4W F
R545	1-216-097-91	RES,CHIP 100K	5% 1/10W	R703	1-215-459-00	METAL 39K	1% 1/4W
R546	1-216-381-11	METAL OXIDE 0.22	5% 3W F	R704	1-216-655-11	METAL CHIP 1.5K	0.5% 1/10W
R547	1-219-726-11	METAL 2.2	5% 10W	R705	1-249-413-11	CARBON 470	5% 1/4W F
R548	1-249-437-11	CARBON 47K	5% 1/4W	R706	1-249-389-11	CARBON 4.7	5% 1/4W F
R549	1-260-288-11	CARBON 0.47	5% 1/2W	R707	1-249-389-11	CARBON 4.7	5% 1/4W F
R550	1-260-288-11	CARBON 0.47	5% 1/2W	R708	1-215-881-11	METAL OXIDE 15	5% 2W F
R551	1-216-049-91	RES,CHIP 1K	5% 1/10W	R709	1-216-049-91	RES,CHIP 1K	5% 1/10W
				R710	1-216-073-00	RES,CHIP 10K	5% 1/10W

# GDM-F500R



The components identified by **D** in this manual have been carefully factory-selected for eachset in order to satisfy regulations regarding X-ray radiation. Should replacement be required, replace only with the value originally used.


Les composants identifiés par la marque **△** sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.

The components identified **△** marked are critical for safety. Replace only with the part number specified.

REF.NO.	PART NO.	DESCRIPTION	REMARK	REF.NO.	PART NO.	DESCRIPTION	REMARK
R711	1-216-049-91	RES,CHIP 1K	5% 1/10W	R943	1-216-065-91	RES,CHIP 4.7K	5% 1/10W
R713	1-216-059-00	RES,CHIP 2.7K	5% 1/10W	R945	1-216-025-91	RES,CHIP 100	5% 1/10W
R714	1-216-057-00	RES,CHIP 2.2K	5% 1/10W				
R715	1-249-389-11	CARBON 4.7	5% 1/4W F	R1501	1-216-049-91	RES,CHIP 1K	5% 1/10W
R716	1-216-689-11	RES,CHIP 39K	5% 1/10W	R1502	1-216-033-00	RES,CHIP 220	5% 1/10W
R717	1-216-073-00	RES,CHIP 10K	5% 1/10W	R1503	1-216-682-11	METAL CHIP 20K	0.5% 1/10W
R718	1-216-681-11	METAL CHIP 18K	0.5% 1/10W	R1504	1-216-665-11	METAL CHIP 3.9K	0.5% 1/10W
R719	1-216-663-11	METAL CHIP 3.3K	0.5% 1/10W	R1505	1-216-667-11	METAL CHIP 4.7K	0.5% 1/10W
R720	1-216-073-00	RES,CHIP 10K	5% 1/10W	R1506	1-216-049-91	RES,CHIP 1K	5% 1/10W
R721	1-216-073-00	RES,CHIP 10K	5% 1/10W	R1507	1-216-097-91	RES,CHIP 100K	5% 1/10W
R722	1-260-292-11	CARBON 1	5% 1/2W	R1510	1-216-073-00	RES,CHIP 10K	5% 1/10W
R723	1-216-663-11	METAL CHIP 3.3K	0.5% 1/10W	R1515	1-215-909-11	METAL OXIDE 47	5% 3W F
R724	1-216-659-11	METAL CHIP 2.2K	0.5% 1/10W	R1517	1-216-089-91	RES,CHIP 47K	5% 1/10W
R725	1-214-798-21	METAL 1.8	1% 1/2W	R1518	1-216-025-91	RES,CHIP 100	5% 1/10W
R726	1-214-798-21	METAL 1.8	1% 1/2W				
R727	1-249-381-11	CARBON 1	5% 1/4W F			<VARIABLE RESISTOR>	
R728	1-215-865-11	METAL OXIDE 220	5% 1W F	RV901	△ 1-241-767-21	RES, ADJ, CERMET	100K (HV ADJ)
R729	1-260-292-11	CARBON 1	5% 1/2W				
R730	1-216-073-00	RES,CHIP 10K	5% 1/10W			<RELAY>	
R731	1-216-059-00	RES,CHIP 2.7K	5% 1/10W				
R732	1-219-510-11	CARBON 470K	5% 1/2W	RY501	1-755-198-11	RELAY	
R901	1-216-097-91	RES,CHIP 100K	5% 1/10W				
R902	1-216-117-00	RES,CHIP 680K	5% 1/10W			<SPARK GAP>	
R903	1-216-089-91	RES,CHIP 47K	5% 1/10W				
R904	1-216-033-00	RES,CHIP 220	5% 1/10W	SG901	1-517-499-21	GAP, SPARK	
R906	1-216-033-00	RES,CHIP 220	5% 1/10W	SG902	1-519-422-11	GAP, SPARK	
R907	1-216-081-00	RES,CHIP 22K	5% 1/10W	SG903	1-519-422-11	GAP, SPARK	
R908	1-216-399-00	METAL OXIDE 6.8	5% 3W F				
R911	1-216-041-00	RES,CHIP 470	5% 1/10W			<TRANSFORMER>	
R912	1-216-049-91	RES,CHIP 1K	5% 1/10W	T501	1-435-070-11	TRANSFORMER, HORIZONTAL DRIVE	
R914	1-247-791-91	CARBON 22	5% 1/4W	T502	1-429-301-11	TRANSFORMER, FERRITE (HCT)	
R915	1-216-065-91	RES,CHIP 4.7K	5% 1/10W	T503	1-431-413-21	TRANSFORMER, FERRITE (HST)	
R916	1-249-397-11	CARBON 22	5% 1/4W F	T505	1-419-127-11	COIL, HORIZONTAL LINEARITY	
R917	1-211-824-71	FUSIBLE 220	5% 1/2W F	T701	1-431-414-11	TRANSFORMER, FERRITE (DFT)	
R918	1-219-727-11	METAL 68	5% 10W	T901	1-416-402-11	INDUCTOR 500μH	
R919	1-219-748-11	CARBON 4.7K	5% 1/2W	T902	△ X-4560-175-1	TRANSFORMER ASSY, FLYBACK (NX-4502/J1D4)	
R920	1-216-089-91	RES,CHIP 47K	5% 1/10W				
R921	1-249-429-11	CARBON 10K	5% 1/4W			<THERMISTOR>	
R922	1-249-389-11	CARBON 4.7	5% 1/4W F	TH501	1-807-796-11	THERMISTOR	
R923	1-218-762-11	METAL CHIP 270K	0.5% 1/10W	TH502	1-807-796-11	THERMISTOR	
R924	1-216-073-00	RES,CHIP 10K	5% 1/10W				
R925	1-220-825-11	CARBON 330K	5% 1/2W				
R926	1-219-746-11	CARBON 1K	5% 1/2W				
R927	1-219-746-11	CARBON 1K	5% 1/2W				
R928	1-216-668-11	METAL CHIP 5.1K	0.5% 1/10W				
R929	1-216-675-91	METAL CHIP 10K	0.5% 1/10W				
R930	1-216-653-11	METAL CHIP 1.2K	0.5% 1/10W				
R931	1-216-653-11	METAL CHIP 1.2K	0.5% 1/10W				
R932	1-216-049-91	RES,CHIP 1K	5% 1/10W				
R933	1-216-687-11	METAL CHIP 33K	0.5% 1/10W				
R934	1-216-667-11	METAL CHIP 4.7K	0.5% 1/10W				
R935	1-216-089-91	RES,CHIP 47K	5% 1/10W				
R937	1-216-065-91	RES,CHIP 4.7K	5% 1/10W				
R939	1-216-049-91	RES,CHIP 1K	5% 1/10W				
R940	1-216-073-00	RES,CHIP 10K	5% 1/10W				
R941	1-216-025-91	RES,CHIP 100	5% 1/10W				

The components identified  $\Delta$  marked are critical for safety. Replace only with the part number specified.

Les composants identifiés par la marque  $\Delta$  sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.



REF.NO.	PART NO.	DESCRIPTION	REMARK	REF.NO.	PART NO.	DESCRIPTION	REMARK
H5 BOARD, COMPLETE *****				H6 BOARD, COMPLETE *****			
<CAPACITOR>				<DIODE>			
C860	1-126-791-11	ELECT	10 $\mu$ F 20% 16V	D881	8-719-060-26	DIODE SLR-325YCT31	
C864	1-124-589-11	ELECT	47 $\mu$ F 20% 16V	D882	8-719-060-26	DIODE SLR-325YCT31	
<CONNECTOR>				<RESISTOR>			
CN861*	1-564-526-11	PLUG, CONNECTOR	11P	R881	1-216-039-00	RES,CHIP 390 5% 1/10W	
<DIODE>				R882	1-216-039-00	RES,CHIP 390 5% 1/10W	
D861	8-719-064-11	DIODE SPR-325MVW		<SWITCH>			
<TRANSISTOR>				S881	1-554-118-00	SWITCH, PUSH (INPUT1/INPUT2)	
Q861	8-729-119-78	TRANSISTOR 2SC2785-HFE		S882	1-572-200-11	SWITCH, TACTILE (RESET)	
Q862	8-729-119-78	TRANSISTOR 2SC2785-HFE		S883	1-572-200-11	SWITCH, TACTILE (ASC)	
Q863	8-729-029-40	TRANSISTOR DTA124ESA		*****			
Q864	8-729-029-40	TRANSISTOR DTA124ESA		* 8-933-429-00 J BOARD, COMPLETE *****			
<RESISTOR>				<CONNECTOR>			
R861	1-216-049-91	RES,CHIP	1K 5% 1/10W	CN891*	1-691-960-11	PIN, CONNECTOR (PC BOARD) 3P	
R862	1-216-025-91	RES,CHIP	100 5% 1/10W	<SWITCH>			
R863	1-216-025-91	RES,CHIP	100 5% 1/10W	S891 $\Delta$	1-571-433-31	SWITCH, PUSH (AC POWER)	
R864	1-216-033-00	RES,CHIP	220 5% 1/10W	*****			
R865	1-216-033-00	RES,CHIP	220 5% 1/10W	* 8-933-394-00 N BOARD, COMPLETE *****			
R866	1-216-041-00	RES,CHIP	470 5% 1/10W	<CAPACITOR>			
R867	1-216-049-91	RES,CHIP	1K 5% 1/10W	C001	1-163-009-11	CERAMIC CHIP 0.001 $\mu$ F 10% 50V	
R868	1-216-073-00	RES,CHIP	10K 5% 1/10W	C002	1-163-009-11	CERAMIC CHIP 0.001 $\mu$ F 10% 50V	
R869	1-216-073-00	RES,CHIP	10K 5% 1/10W	C003	1-163-021-91	CERAMIC CHIP 0.01 $\mu$ F 10% 50V	
R870	1-216-081-00	RES,CHIP	22K 5% 1/10W	C005	1-163-255-91	CERAMIC CHIP 150pF 5% 50V	
R871	1-216-097-91	RES,CHIP	100K 5% 1/10W	C006	1-163-255-91	CERAMIC CHIP 22pF 5% 50V	
R872	1-216-675-91	METAL CHIP	10K 0.5% 1/10W	C007	1-163-235-11	CERAMIC CHIP 22pF 5% 50V	
R873	1-216-029-00	RES,CHIP	150 5% 1/10W	C008	1-164-004-11	CERAMIC CHIP 0.1 $\mu$ F 10% 25V	
R874	1-216-041-00	RES,CHIP	470 5% 1/10W	C011	1-115-339-11	CERAMIC CHIP 0.1 $\mu$ F 10% 50V	
R875	1-216-049-91	RES,CHIP	1K 5% 1/10W	C012	1-126-967-11	ELECT 47 $\mu$ F 20% 50V	
R876	1-216-053-00	RES,CHIP	1.5K 5% 1/10W	C013	1-126-965-11	ELECT 22 $\mu$ F 20% 50V	
R877	1-216-049-91	RES,CHIP	1K 5% 1/10W	C014	1-163-021-91	CERAMIC CHIP 0.01 $\mu$ F 10% 50V	
<SWITCH>				C015	1-163-021-91	CERAMIC CHIP 0.01 $\mu$ F 10% 50V	
S861	1-771-464-11	SWITCH, STICK (CONT +/-, BRT +/-)		C016	1-163-021-91	CERAMIC CHIP 0.01 $\mu$ F 10% 50V	
<THERMISTOR>				C017	1-163-021-91	CERAMIC CHIP 0.01 $\mu$ F 10% 50V	
TH861	1-807-796-11	THERMISTOR		*****			

# GDM-F500R



REF.NO.	PART NO.	DESCRIPTION	REMARK	REF.NO.	PART NO.	DESCRIPTION	REMARK
C018	1-163-021-91	CERAMIC CHIP 0.01μF	10% 50V	C080	1-126-967-11	ELECT 47μF	20% 50V
C019	1-163-021-91	CERAMIC CHIP 0.01μF	10% 50V	C082	1-104-664-11	ELECT 47μF	20% 25V
C020	1-163-021-91	CERAMIC CHIP 0.01μF	10% 50V	C083	1-163-021-91	CERAMIC CHIP 0.01μF	10% 50V
C021	1-163-021-91	CERAMIC CHIP 0.01μF	10% 50V	C084	1-126-964-11	ELECT 10μF	20% 50V
C022	1-163-021-91	CERAMIC CHIP 0.01μF	10% 50V	C085	1-163-021-91	CERAMIC CHIP 0.01μF	10% 50V
C023	1-163-021-91	CERAMIC CHIP 0.01μF	10% 50V	C086	1-163-021-91	CERAMIC CHIP 0.01μF	10% 50V
C024	1-164-161-11	CERAMIC CHIP 0.0022μF	10% 50V	C087	1-126-964-11	ELECT 10μF	20% 50V
C025	1-163-009-11	CERAMIC CHIP 0.001μF	10% 50V	C089	1-163-021-91	CERAMIC CHIP 0.01μF	10% 50V
C026	1-104-665-11	ELECT 100μF	20% 25V	C090	1-163-021-91	CERAMIC CHIP 0.01μF	10% 50V
C027	1-115-339-11	CERAMIC CHIP 0.1μF	10% 50V	C091	1-126-933-11	ELECT 100μF	20% 16V
C028	1-163-220-11	CERAMIC CHIP 3pF	0.25pF 50V	C094	1-164-004-11	CERAMIC CHIP 0.1μF	10% 25V
C029	1-163-241-11	CERAMIC CHIP 39pF	5% 50V	C095	1-117-722-11	ELECT 2200μF	20% 10V
C031	1-126-964-11	ELECT 10μF	20% 50V	C096	1-163-021-91	CERAMIC CHIP 0.01μF	10% 50V
C033	1-163-021-91	CERAMIC CHIP 0.01μF	10% 50V	C097	1-126-964-11	ELECT 10μF	20% 50V
C036	1-163-037-11	CERAMIC CHIP 0.022μF	10% 50V	C098	1-163-021-91	CERAMIC CHIP 0.01μF	10% 50V
C037	1-126-964-11	ELECT 10μF	20% 50V	C099	1-164-004-11	CERAMIC CHIP 0.1μF	10% 25V
C038	1-126-964-11	ELECT 10μF	20% 50V	C1003	1-104-664-11	ELECT 47μF	20% 25V
C039	1-126-964-11	ELECT 10μF	20% 50V	C1004	1-163-021-91	CERAMIC CHIP 0.01μF	10% 50V
C040	1-126-964-11	ELECT 10μF	20% 50V	C1005	1-163-005-11	CERAMIC CHIP 470pF	10% 50V
C041	1-126-964-11	ELECT 10μF	20% 50V	C1006	1-164-161-11	CERAMIC CHIP 0.0022μF	10% 50V
C042	1-163-021-91	CERAMIC CHIP 0.01μF	10% 50V	C1007	1-115-339-11	CERAMIC CHIP 0.1μF	10% 50V
C043	1-126-965-11	ELECT 22μF	20% 50V	C5002	1-126-964-11	ELECT 10μF	20% 50V
C044	1-163-037-11	CERAMIC CHIP 0.022μF	10% 50V	C5003	1-126-933-11	ELECT 100μF	20% 16V
C045	1-163-037-11	CERAMIC CHIP 0.022μF	10% 50V	C5004	1-104-664-11	ELECT 47μF	20% 25V
C046	1-163-037-11	CERAMIC CHIP 0.022μF	10% 50V	C5005	1-104-664-11	ELECT 47μF	20% 25V
C047	1-163-037-11	CERAMIC CHIP 0.022μF	10% 50V	C5008	1-104-664-11	ELECT 47μF	20% 25V
C048	1-163-021-91	CERAMIC CHIP 0.01μF	10% 50V	C5009	1-164-004-11	CERAMIC CHIP 0.1μF	10% 25V
C049	1-126-964-11	ELECT 10μF	20% 50V	C5101	1-164-004-11	CERAMIC CHIP 0.1μF	10% 25V
C050	1-126-964-11	ELECT 10μF	20% 50V	C5103	1-164-004-11	CERAMIC CHIP 0.1μF	10% 25V
C051	1-163-021-91	CERAMIC CHIP 0.01μF	10% 50V	C5105	1-104-664-11	ELECT 47μF	20% 25V
C052	1-126-933-11	ELECT 100μF	20% 16V	C5106	1-164-004-11	CERAMIC CHIP 0.1μF	10% 25V
C053	1-163-021-91	CERAMIC CHIP 0.01μF	10% 50V	C5108	1-164-004-11	CERAMIC CHIP 0.1μF	10% 25V
C054	1-115-339-11	CERAMIC CHIP 0.1μF	10% 50V	C5110	1-104-664-11	ELECT 47μF	20% 25V
C055	1-104-664-11	ELECT 47μF	20% 25V	C5203	1-164-004-11	CERAMIC CHIP 0.1μF	10% 25V
C056	1-126-965-11	ELECT 22μF	20% 50V	C5205	1-164-004-11	CERAMIC CHIP 0.1μF	10% 25V
C057	1-126-964-11	ELECT 10μF	20% 50V	C5206	1-163-021-91	CERAMIC CHIP 0.01μF	10% 50V
C058	1-164-690-91	CERAMIC CHIP 0.0022μF	5% 50V	C5301	1-164-004-11	CERAMIC CHIP 0.1μF	10% 25V
C059	1-126-964-11	ELECT 10μF	20% 50V	C5303	1-164-004-11	CERAMIC CHIP 0.1μF	10% 25V
C061	1-163-021-91	CERAMIC CHIP 0.01μF	10% 50V	C5304	1-163-021-91	CERAMIC CHIP 0.01μF	10% 50V
C062	1-126-925-11	ELECT 470μF	20% 10V	C5305	1-104-664-11	ELECT 47μF	20% 25V
C063	1-164-690-91	CERAMIC CHIP 0.0022μF	5% 50V	C5306	1-164-004-11	CERAMIC CHIP 0.1μF	10% 25V
C064	1-115-419-11	CERAMIC CHIP 3300pF	5% 25V	C5308	1-164-004-11	CERAMIC CHIP 0.1μF	10% 25V
C065	1-126-960-11	ELECT 1μF	20% 50V	C5310	1-104-664-11	ELECT 47μF	20% 25V
C066	1-164-690-91	CERAMIC CHIP 0.0022μF	5% 50V	C5401	1-164-004-11	CERAMIC CHIP 0.1μF	10% 25V
C067	1-164-004-11	CERAMIC CHIP 0.1μF	10% 25V	C5403	1-163-021-91	CERAMIC CHIP 0.01μF	10% 50V
C068	1-136-169-00	FILM 0.22μF	5% 50V	C5404	1-163-021-91	CERAMIC CHIP 0.01μF	10% 50V
C069	1-115-339-11	CERAMIC CHIP 0.1μF	10% 50V	C5406	1-164-004-11	CERAMIC CHIP 0.1μF	10% 25V
C070	1-126-767-11	ELECT 1000μF	20% 16V	C5408	1-163-005-11	CERAMIC CHIP 470pF	10% 50V
C071	1-163-007-11	CERAMIC CHIP 680pF	10% 50V	C5409	1-163-021-91	CERAMIC CHIP 0.01μF	10% 50V
C072	1-126-942-61	ELECT 1000μF	20% 25V	C5413	1-164-004-11	CERAMIC CHIP 0.1μF	10% 25V
C073	1-115-339-11	CERAMIC CHIP 0.1μF	10% 50V	C5501	1-126-967-11	ELECT 47μF	20% 50V
C074	1-163-137-00	CERAMIC CHIP 680pF	5% 50V	C5602	1-115-339-11	CERAMIC CHIP 0.1μF	10% 50V
C075	1-163-251-11	CERAMIC CHIP 100pF	5% 50V	C5606	1-163-021-91	CERAMIC CHIP 0.01μF	10% 50V
C077	1-115-339-11	CERAMIC CHIP 0.1μF	10% 50V	C5607	1-164-004-11	CERAMIC CHIP 0.1μF	10% 25V
C078	1-136-169-00	FILM 0.22μF	5% 50V				
C079	1-163-021-91	CERAMIC CHIP 0.01μF	10% 50V				



REF.NO.	PART NO.	DESCRIPTION	REMARK	REF.NO.	PART NO.	DESCRIPTION	REMARK
<CONNECTOR>				<SENSOR>			
CN001	1-784-500-11	CONNECTOR, FFC/FPC 21P		GS5001	1-418-473-11	SENSOR UNIT, GEOMAGNETIC	
CN002*	1-564-511-11	PLUG, CONNECTOR 8P		<IC>			
CN007*	1-564-512-11	PLUG, CONNECTOR 9P		IC001	8-759-650-78	IC CXD8744Q-0005	
CN010	1-784-504-11	CONNECTOR, FFC 25P		IC002	8-759-162-80	IC MM1170BFB	
CN011	1-784-504-11	CONNECTOR, FFC 25P		IC003	8-759-527-77	IC M24C16-MN6T	
CN5001*	1-564-509-11	PLUG, CONNECTOR 6P		IC004	8-759-491-55	IC SN74AHCT74PWR	
CN5002*	1-564-511-11	PLUG, CONNECTOR 8P		IC005	8-759-491-55	IC SN74AHCT74PWR	
CN5003*	1-564-505-11	PLUG, CONNECTOR 2P		IC006	8-759-700-78	IC NJM082M	
<DIODE>				IC010	8-759-585-70	IC LA7865M-TLM	
D001	8-719-062-51	DIODE 1PS226-115		IC011	8-759-442-20	IC 24LC21AT/SN	
D002	8-719-062-51	DIODE 1PS226-115		IC5101	8-759-822-07	IC LA6515	
D003	8-719-062-51	DIODE 1PS226-115		IC5201	8-759-822-07	IC LA6515	
D004	8-719-062-51	DIODE 1PS226-115		IC5301	8-759-822-07	IC LA6515	
D008	8-719-109-89	ZENER DIODE RD5.6ESB2		IC5401	8-759-822-07	IC LA6515	
D009	8-719-109-89	ZENER DIODE RD5.6ESB2		<COIL>			
D010	8-719-109-89	ZENER DIODE RD5.6ESB2		L002	1-406-665-11	COIL, CHOKE 100μH	
D012	8-719-109-89	ZENER DIODE RD5.6ESB2		L003	1-406-671-11	COIL, CHOKE 1mH	
D013	8-719-110-17	ZENER DIODE RD10ESB2		<TRANSISTOR>			
D015	8-719-066-11	DIODE 1PS184-115		Q001	8-729-026-49	TRANSISTOR 2SA1037AK-T146-R	
D016	8-719-109-89	ZENER DIODE RD5.6ESB2		Q002	8-729-026-49	TRANSISTOR 2SA1037AK-T146-R	
D017	8-719-109-89	ZENER DIODE RD5.6ESB2		Q003	8-729-026-49	TRANSISTOR 2SA1037AK-T146-R	
D018	8-719-109-89	ZENER DIODE RD5.6ESB2		Q004	8-729-028-83	TRANSISTOR DTA124EUA-T106	
D020	8-719-988-61	DIODE 1SS355TE-17		Q005	8-729-033-26	TRANSISTOR DTA114GKAT146	
D021	8-719-988-61	DIODE 1SS355TE-17		Q006	8-729-027-49	TRANSISTOR DTC123EKA-T146	
D022	8-719-066-11	DIODE 1PS184-115		Q007	8-729-901-00	TRANSISTOR DTC124EK	
D023	8-719-066-11	DIODE 1PS184-115		Q008	8-729-033-25	TRANSISTOR DTC114GKA	
D024	8-719-066-11	DIODE 1PS184-115		Q010	8-729-026-49	TRANSISTOR 2SA1037AK-T146-R	
D025	8-719-062-51	DIODE 1PS226-115		Q011	8-729-026-49	TRANSISTOR 2SA1037AK-T146-R	
D026	8-719-062-51	DIODE 1PS226-115		Q012	8-729-901-00	TRANSISTOR DTC124EK	
D027	8-719-988-61	DIODE 1SS355TE-17		<RESISTOR>			
D028	8-719-988-61	DIODE 1SS355TE-17		R003	1-216-025-91	RES,CHIP 100 5% 1/10W	
D029	8-719-109-85	ZENER DIODE RD5.1ESB2		R004	1-216-025-91	RES,CHIP 100 5% 1/10W	
D036	8-719-109-89	ZENER DIODE RD5.6ESB2		R005	1-216-025-91	RES,CHIP 100 5% 1/10W	
D038	8-719-045-99	ZENER DIODE RD2.2M-T1		R006	1-216-025-91	RES,CHIP 100 5% 1/10W	
D040	8-719-109-89	ZENER DIODE RD5.6ESB2		R007	1-216-057-00	RES,CHIP 2.2K 5% 1/10W	
<FERRITE BEAD>				R008	1-216-057-00	RES,CHIP 2.2K 5% 1/10W	
FB001	1-410-397-21	FERRITE 1.1μH		R009	1-216-057-00	RES,CHIP 2.2K 5% 1/10W	
FB002	1-410-397-21	FERRITE 1.1μH		R010	1-216-057-00	RES,CHIP 2.2K 5% 1/10W	
FB003	1-410-397-21	FERRITE 1.1μH		R014	1-216-049-91	RES,CHIP 1K 5% 1/10W	
FB5101	1-412-911-11	FERRITE 1.1μH		R015	1-249-389-11	CARBON 4.7 5% 1/4W F	
FB5103	1-412-911-11	FERRITE 1.1μH		R016	1-216-017-91	RES,CHIP 47 5% 1/10W	
FB5201	1-412-911-11	FERRITE 1.1μH		R017	1-216-017-91	RES,CHIP 47 5% 1/10W	
FB5301	1-412-911-11	FERRITE 1.1μH		R018	1-216-049-91	RES,CHIP 1K 5% 1/10W	
FB5303	1-412-911-11	FERRITE 1.1μH		R019	1-216-025-91	RES,CHIP 100 5% 1/10W	
FB5401	1-412-911-11	FERRITE 1.1μH		R020	1-216-025-91	RES,CHIP 100 5% 1/10W	
FB5403	1-412-911-11	FERRITE 1.1μH		R021	1-216-025-91	RES,CHIP 100 5% 1/10W	
FB5601	1-412-911-11	FERRITE 1.1μH					

# GDM-F500R



REF.NO.	PART NO.	DESCRIPTION	REMARK	REF.NO.	PART NO.	DESCRIPTION	REMARK
R022	1-216-025-91	RES,CHIP	100 5% 1/10W	R095	1-216-049-91	RES,CHIP	1K 5% 1/10W
R023	1-216-065-91	RES,CHIP	4.7K 5% 1/10W	R096	1-216-065-91	RES,CHIP	4.7K 5% 1/10W
R024	1-216-025-91	RES,CHIP	100 5% 1/10W	R097	1-216-073-00	RES,CHIP	10K 5% 1/10W
R025	1-216-025-91	RES,CHIP	100 5% 1/10W	R098	1-216-073-00	RES,CHIP	10K 5% 1/10W
R026	1-216-025-91	RES,CHIP	100 5% 1/10W	R099	1-216-049-91	RES,CHIP	1K 5% 1/10W
R029	1-216-073-00	RES,CHIP	10K 5% 1/10W	R1001	1-216-049-91	RES,CHIP	1K 5% 1/10W
R030	1-216-049-91	RES,CHIP	1K 5% 1/10W	R1002	1-216-049-91	RES,CHIP	1K 5% 1/10W
R031	1-216-669-11	METAL CHIP	5.6K 0.5% 1/10W	R1003	1-216-049-91	RES,CHIP	1K 5% 1/10W
R032	1-216-665-11	METAL CHIP	3.9K 0.5% 1/10W	R1004	1-216-049-91	RES,CHIP	1K 5% 1/10W
R034	1-216-049-91	RES,CHIP	1K 5% 1/10W	R1005	1-216-049-91	RES,CHIP	1K 5% 1/10W
R035	1-216-065-91	RES,CHIP	4.7K 5% 1/10W	R1006	1-216-049-91	RES,CHIP	1K 5% 1/10W
R036	1-216-659-11	METAL CHIP	2.2K 0.5% 1/10W	R1007	1-216-049-91	RES,CHIP	1K 5% 1/10W
R037	1-216-073-00	RES,CHIP	10K 5% 1/10W	R1008	1-216-667-11	METAL CHIP	4.7K 0.5% 1/10W
R039	1-216-025-91	RES,CHIP	100 5% 1/10W	R1009	1-216-049-91	RES,CHIP	1K 5% 1/10W
R040	1-216-025-91	RES,CHIP	100 5% 1/10W	R1010	1-216-049-91	RES,CHIP	1K 5% 1/10W
R042	1-216-073-00	RES,CHIP	10K 5% 1/10W	R1011	1-216-049-91	RES,CHIP	1K 5% 1/10W
R043	1-216-049-91	RES,CHIP	1K 5% 1/10W	R1012	1-216-057-00	RES,CHIP	2.2K 5% 1/10W
R044	1-216-657-11	METAL CHIP	1.8K 0.5% 1/10W	R1013	1-216-057-00	RES,CHIP	2.2K 5% 1/10W
R045	1-216-049-91	RES,CHIP	1K 5% 1/10W	R1014	1-216-049-91	RES,CHIP	1K 5% 1/10W
R046	1-216-073-00	RES,CHIP	10K 5% 1/10W	R1015	1-216-049-91	RES,CHIP	1K 5% 1/10W
R047	1-216-049-91	RES,CHIP	1K 5% 1/10W	R1016	1-216-049-91	RES,CHIP	1K 5% 1/10W
R048	1-216-049-91	RES,CHIP	1K 5% 1/10W	R1017	1-216-049-91	RES,CHIP	1K 5% 1/10W
R049	1-216-073-00	RES,CHIP	10K 5% 1/10W	R1018	1-216-049-91	RES,CHIP	1K 5% 1/10W
R050	1-216-295-91	SHORT	0	R1019	1-216-049-91	RES,CHIP	1K 5% 1/10W
R051	1-216-049-91	RES,CHIP	1K 5% 1/10W	R1020	1-216-065-91	RES,CHIP	4.7K 5% 1/10W
R052	1-216-049-91	RES,CHIP	1K 5% 1/10W	R1021	1-216-065-91	RES,CHIP	4.7K 5% 1/10W
R053	1-216-065-91	RES,CHIP	4.7K 5% 1/10W	R1022	1-216-659-11	METAL CHIP	2.2K 0.5% 1/10W
R054	1-216-077-91	RES,CHIP	15K 5% 1/10W	R1023	1-216-659-11	METAL CHIP	2.2K 0.5% 1/10W
R055	1-216-077-91	RES,CHIP	15K 5% 1/10W	R1024	1-216-681-11	METAL CHIP	18K 0.5% 1/10W
R056	1-216-073-00	RES,CHIP	10K 5% 1/10W	R1025	1-216-025-91	RES,CHIP	100 5% 1/10W
R057	1-216-073-00	RES,CHIP	10K 5% 1/10W	R1026	1-216-109-00	RES,CHIP	330K 5% 1/10W
R058	1-216-067-00	RES,CHIP	5.6K 5% 1/10W	R1027	1-216-659-11	METAL CHIP	2.2K 0.5% 1/10W
R059	1-216-057-00	RES,CHIP	2.2K 5% 1/10W	R1028	1-216-647-11	METAL CHIP	680 0.5% 1/10W
R060	1-216-057-00	RES,CHIP	2.2K 5% 1/10W	R1029	1-216-025-91	RES,CHIP	100 5% 1/10W
R061	1-216-049-91	RES,CHIP	1K 5% 1/10W	R1030	1-216-025-91	RES,CHIP	100 5% 1/10W
R062	1-216-613-11	METAL CHIP	27 0.5% 1/10W	R1031	1-216-025-91	RES,CHIP	100 5% 1/10W
R063	1-216-613-11	METAL CHIP	27 0.5% 1/10W	R1032	1-216-025-91	RES,CHIP	100 5% 1/10W
R064	1-216-613-11	METAL CHIP	27 0.5% 1/10W	R1033	1-216-025-91	RES,CHIP	100 5% 1/10W
R066	1-216-049-91	RES,CHIP	1K 5% 1/10W	R1034	1-216-025-91	RES,CHIP	100 5% 1/10W
R067	1-216-073-00	RES,CHIP	10K 5% 1/10W	R1035	1-216-025-91	RES,CHIP	100 5% 1/10W
R075	1-215-407-00	METAL	270 1% 1/4W	R1036	1-216-025-91	RES,CHIP	100 5% 1/10W
R076	1-215-407-00	METAL	270 1% 1/4W	R1037	1-216-025-91	RES,CHIP	100 5% 1/10W
R077	1-216-073-00	RES,CHIP	10K 5% 1/10W	R1038	1-216-025-91	RES,CHIP	100 5% 1/10W
R078	1-216-121-91	RES,CHIP	1M 5% 1/10W	R1039	1-216-025-91	RES,CHIP	100 5% 1/10W
R079	1-216-295-91	SHORT	0	R1040	1-216-025-91	RES,CHIP	100 5% 1/10W
R080	1-216-295-91	SHORT	0	R1041	1-216-025-91	RES,CHIP	100 5% 1/10W
R081	1-216-049-91	RES,CHIP	1K 5% 1/10W	R1042	1-216-025-91	RES,CHIP	100 5% 1/10W
R082	1-216-049-91	RES,CHIP	1K 5% 1/10W	R1043	1-216-025-91	RES,CHIP	100 5% 1/10W
R084	1-216-073-00	RES,CHIP	10K 5% 1/10W	R1044	1-216-667-11	METAL CHIP	4.7K 0.5% 1/10W
R085	1-216-049-91	RES,CHIP	1K 5% 1/10W	R1045	1-216-065-91	RES,CHIP	4.7K 5% 1/10W
R086	1-216-049-91	RES,CHIP	1K 5% 1/10W	R1047	1-216-073-00	RES,CHIP	10K 5% 1/10W
R090	1-216-073-00	RES,CHIP	10K 5% 1/10W	R1049	1-216-065-91	RES,CHIP	4.7K 5% 1/10W
R091	1-216-049-91	RES,CHIP	1K 5% 1/10W	R1050	1-216-073-00	RES,CHIP	10K 5% 1/10W
R092	1-216-049-91	RES,CHIP	1K 5% 1/10W	R1051	1-216-097-91	RES,CHIP	100K 5% 1/10W
R093	1-216-049-91	RES,CHIP	1K 5% 1/10W	R1052	1-216-073-00	RES,CHIP	10K 5% 1/10W
R094	1-216-049-91	RES,CHIP	1K 5% 1/10W	R1053	1-216-049-91	RES,CHIP	1K 5% 1/10W



REF.NO.	PART NO.	DESCRIPTION	REMARK	REF.NO.	PART NO.	DESCRIPTION	REMARK	
R1054	1-216-073-00	RES,CHIP	10K	5%	1/10W			
R1055	1-216-049-91	RES,CHIP	1K	5%	1/10W			
R1056	1-216-073-00	RES,CHIP	10K	5%	1/10W			
R1057	1-216-049-91	RES,CHIP	1K	5%	1/10W			
R1058	1-216-073-00	RES,CHIP	10K	5%	1/10W			
R1059	1-216-049-91	RES,CHIP	1K	5%	1/10W			
R1061	1-216-073-00	RES,CHIP	10K	5%	1/10W			
R1062	1-216-049-91	RES,CHIP	1K	5%	1/10W			
R1063	1-216-065-91	RES,CHIP	4.7K	5%	1/10W			
R1064	1-216-049-91	RES,CHIP	1K	5%	1/10W			
R1065	1-216-125-00	RES,CHIP	1.5M	5%	1/10W			
R1066	1-216-073-00	RES,CHIP	10K	5%	1/10W			
R1067	1-216-057-00	RES,CHIP	2.2K	5%	1/10W			
R1068	1-216-057-00	RES,CHIP	2.2K	5%	1/10W			
R1069	1-216-049-91	RES,CHIP	1K	5%	1/10W			
R1070	1-216-057-00	RES,CHIP	2.2K	5%	1/10W			
R1071	1-216-081-00	RES,CHIP	22K	5%	1/10W			
R5003	1-216-295-91	SHORT	0					
R5005	1-216-081-00	RES,CHIP	22K	5%	1/10W			
R5006	1-216-073-00	RES,CHIP	10K	5%	1/10W			
R5007	1-216-049-91	RES,CHIP	1K	5%	1/10W			
R5010	1-216-295-91	SHORT	0					
R5011	1-216-073-00	RES,CHIP	10K	5%	1/10W			
R5015	1-216-049-91	RES,CHIP	1K	5%	1/10W			
R5108	1-216-308-00	RES,CHIP	4.7	5%	1/10W			
R5109	1-216-308-00	RES,CHIP	4.7	5%	1/10W			
R5110	1-216-073-00	RES,CHIP	10K	5%	1/10W			
R5113	1-216-073-00	RES,CHIP	10K	5%	1/10W			
R5115	1-215-859-00	METAL OXIDE	22	5%	1W F			
R5116	1-216-073-00	RES,CHIP	10K	5%	1/10W			
R5119	1-216-073-00	RES,CHIP	10K	5%	1/10W			
R5122	1-215-859-00	METAL OXIDE	22	5%	1W F			
R5205	1-216-073-00	RES,CHIP	10K	5%	1/10W			
R5206	1-215-859-00	METAL OXIDE	22	5%	1W F			
R5207	1-216-073-00	RES,CHIP	10K	5%	1/10W			
R5208	1-216-069-00	RES,CHIP	6.8K	5%	1/10W			
R5209	1-216-308-00	RES,CHIP	4.7	5%	1/10W			
R5308	1-216-308-00	RES,CHIP	4.7	5%	1/10W			
R5309	1-216-308-00	RES,CHIP	4.7	5%	1/10W			
R5310	1-216-073-00	RES,CHIP	10K	5%	1/10W			
R5313	1-216-073-00	RES,CHIP	10K	5%	1/10W			
R5315	1-215-859-00	METAL OXIDE	22	5%	1W F			
R5316	1-216-073-00	RES,CHIP	10K	5%	1/10W			
R5319	1-216-073-00	RES,CHIP	10K	5%	1/10W			
R5322	1-215-859-00	METAL OXIDE	22	5%	1W F			
R5406	1-216-083-00	RES,CHIP	27K	5%	1/10W			
R5407	1-216-085-00	RES,CHIP	33K	5%	1/10W			
R5408	1-216-308-00	RES,CHIP	4.7	5%	1/10W			
R5409	1-216-308-00	RES,CHIP	4.7	5%	1/10W			
R5410	1-216-081-00	RES,CHIP	22K	5%	1/10W			
R5413	1-216-097-91	RES,CHIP	100K	5%	1/10W			
R5415	1-215-887-00	METAL OXIDE	150	5%	2W F			
R5416	1-216-081-00	RES,CHIP	22K	5%	1/10W			
R5419	1-216-097-91	RES,CHIP	100K	5%	1/10W			
R5422	1-216-451-11	METAL OXIDE	120	5%	2W F			
R5502	1-216-081-00	RES,CHIP	22K	5%	1/10W			
R5503	1-216-081-00	RES,CHIP	22K	5%	1/10W			
R5504	1-216-089-91	RES,CHIP	47K	5%	1/10W			
R5505	1-216-089-91	RES,CHIP	47K	5%	1/10W			
R5506	1-216-069-00	RES,CHIP	6.8K	5%	1/10W			
R5507	1-249-382-11	CARBON	1.2	5%	1/4W F			
R5508	1-249-382-11	CARBON	1.2	5%	1/4W F			
R5509	1-249-382-11	CARBON	1.2	5%	1/4W F			
R5510	1-249-382-11	CARBON	1.2	5%	1/4W F			
R5602	1-216-081-00	RES,CHIP	22K	5%	1/10W			
R5603	1-216-077-91	RES,CHIP	15K	5%	1/10W			
R5604	1-216-081-00	RES,CHIP	22K	5%	1/10W			
R5605	1-216-097-91	RES,CHIP	100K	5%	1/10W			
R5607	1-215-862-11	METAL OXIDE	68	5%	1W F			
R5610	1-216-308-00	RES,CHIP	4.7	5%	1/10W			
		<CRYSTAL>						
X001	1-760-682-21	VIBRATOR, CRYSTAL (24.756MHz)						
*****								
		* 8-933-430-00 US BOARD, COMPLETE						
*****								
		<CAPACITOR>						
C2601	1-163-021-91	CERAMIC CHIP	0.01μF	10%	50V			
C2602	1-104-664-11	ELECT	47μF	20%	25V			
C2603	1-104-664-11	ELECT	47μF	20%	25V			
C2605	1-104-664-11	ELECT	47μF	20%	25V			
C2606	1-104-664-11	ELECT	47μF	20%	25V			
C2607	1-126-934-11	ELECT	220μF	20%	10V			
C2608	1-126-934-11	ELECT	220μF	20%	10V			
C2609	1-126-934-11	ELECT	220μF	20%	10V			
C2610	1-126-934-11	ELECT	220μF	20%	10V			
C2617	1-163-021-91	CERAMIC CHIP	0.01μF	10%	50V			
C2901	1-164-004-11	CERAMIC CHIP	0.1μF	10%	25V			
C2902	1-104-664-11	ELECT	47μF	20%	25V			
C2903	1-104-664-11	ELECT	47μF	20%	25V			
C2904	1-163-021-91	CERAMIC CHIP	0.01μF	10%	50V			
C2905	1-164-489-11	CERAMIC CHIP	0.22μF	10%	16V			
C2909	1-163-237-11	CERAMIC CHIP	27μF	5%	50V			
C2911	1-104-664-11	ELECT	47μF	20%	25V			
C2912	1-163-235-11	CERAMIC CHIP	22pF	5%	50V			
C2914	1-164-489-11	CERAMIC CHIP	0.22μF	10%	16V			
C2916	1-164-004-11	CERAMIC CHIP	0.1μF	10%	25V			
C2917	1-164-004-11	CERAMIC CHIP	0.1μF	10%	25V			
C2918	1-164-004-11	CERAMIC CHIP	0.1μF	10%	25V			
C2923	1-163-021-91	CERAMIC CHIP	0.01μF	10%	50V			
		<CONNECTOR>						
CN2601*	1-785-120-11	PIN, CONNECTOR (PC BOARD) 9P						
CN2901	1-779-677-11	CONNECTOR, USB (B)						
CN2902	1-779-676-11	CONNECTOR, USB (A)						
CN2903	1-779-676-11	CONNECTOR, USB (A)						
CN2904	1-779-676-11	CONNECTOR, USB (A)						





REF.NO.	PART NO.	DESCRIPTION	REMARK	REF.NO.	PART NO.	DESCRIPTION	REMARK
CN2905	1-779-676-11	CONNECTOR, USB (A)		IC2602	8-759-157-22	IC PQ05TZ1U	
		<DIODE>		IC2603	8-759-157-22	IC PQ05TZ1U	
D2601	8-719-911-19	DIODE 1SS119-25		IC2604	8-759-157-22	IC PQ05TZ1U	
D2602	8-719-911-19	DIODE 1SS119-25		IC2605	8-759-157-22	IC PQ05TZ1U	
D2603	8-719-911-19	DIODE 1SS119-25					
D2604	8-719-911-19	DIODE 1SS119-25		IC2901	8-759-591-27	IC KC82C160H-B	
D2605	8-719-988-61	DIODE 1SS355TE-17		IC2902	8-759-165-87	IC PST600J-T	
						<TRANSISTOR>	
D2606	8-719-988-61	DIODE 1SS355TE-17		Q2601	8-729-119-76	TRANSISTOR 2SA1175-HFE	
D2607	8-719-988-61	DIODE 1SS355TE-17		Q2602	8-729-119-76	TRANSISTOR 2SA1175-HFE	
D2608	8-719-988-61	DIODE 1SS355TE-17		Q2603	8-729-119-76	TRANSISTOR 2SA1175-HFE	
D2609	8-719-158-15	ZENER DIODE RD5.6S-B		Q2604	8-729-119-76	TRANSISTOR 2SA1175-HFE	
D2610	8-719-988-61	DIODE 1SS355TE-17		Q2605	8-729-028-74	TRANSISTOR DTA114TUA-T106	
				Q2606	8-729-029-06	TRANSISTOR DTC124EUA-T106	
D2902	8-719-422-12	ZENER DIODE MA8039		Q2607	8-729-028-83	TRANSISTOR DTA124EUA-T106	
D2903	8-719-422-12	ZENER DIODE MA8039		Q2608	8-729-028-83	TRANSISTOR DTA124EUA-T106	
D2904	8-719-158-15	ZENER DIODE RD5.6S-B		Q2609	8-729-028-83	TRANSISTOR DTA124EUA-T106	
D2905	8-719-158-15	ZENER DIODE RD5.6S-B		Q2910	8-729-028-83	TRANSISTOR DTA124EUA-T106	
D2906	8-719-158-15	ZENER DIODE RD5.6S-B					
				Q2911	8-729-028-74	TRANSISTOR DTA114TUA-T106	
D2907	8-719-158-15	ZENER DIODE RD5.6S-B		Q2912	8-729-028-74	TRANSISTOR DTA114TUA-T106	
D2908	8-719-422-12	ZENER DIODE MA8039		Q2913	8-729-028-74	TRANSISTOR DTA114TUA-T106	
D2909	8-719-422-12	ZENER DIODE MA8039					
D2910	8-719-422-12	ZENER DIODE MA8039				<RESISTOR>	
D2911	8-719-422-12	ZENER DIODE MA8039					
				R2601	1-216-081-00	RES,CHIP 22K	5% 1/10W
D2912	8-719-422-12	ZENER DIODE MA8039		R2602	1-216-369-00	METAL OXIDE 1	5% 2W F
D2913	8-719-422-12	ZENER DIODE MA8039		R2603	1-216-346-00	METAL OXIDE 0.56	5% 1W F
D2914	8-719-422-12	ZENER DIODE MA8039		R2604	1-216-049-91	RES,CHIP 1K	5% 1/10W
D2915	8-719-422-12	ZENER DIODE MA8039		R2605	1-216-369-00	METAL OXIDE 1	5% 2W F
		<FERRITE BEAD>		R2606	1-216-346-00	METAL OXIDE 0.56	5% 1W F
FB2601	1-412-911-11	FERRITE 1.1μ H		R2607	1-216-049-91	RES,CHIP 1K	5% 1/10W
FB2901	1-412-911-11	FERRITE 1.1μ H		R2608	1-216-369-00	METAL OXIDE 1	5% 2W F
FB2903	1-412-911-11	FERRITE 1.1μ H		R2609	1-216-346-00	METAL OXIDE 0.56	5% 1W F
FB2904	1-412-911-11	FERRITE 1.1μ H		R2610	1-216-049-91	RES,CHIP 1K	5% 1/10W
FB2905	1-412-911-11	FERRITE 1.1μ H					
				R2611	1-216-369-00	METAL OXIDE 1	5% 2W F
FB2906	1-412-911-11	FERRITE 1.1μ H		R2612	1-216-346-00	METAL OXIDE 0.56	5% 1W F
FB2911	1-412-911-11	FERRITE 1.1μ H		R2613	1-216-049-91	RES,CHIP 1K	5% 1/10W
FB2912	1-216-295-91	SHORT 0		R2614	1-216-073-00	RES,CHIP 10K	5% 1/10W
FB2913	1-216-295-91	SHORT 0		R2615	1-216-073-00	RES,CHIP 10K	5% 1/10W
FB2914	1-216-295-91	SHORT 0					
				R2616	1-216-073-00	RES,CHIP 10K	5% 1/10W
FB2915	1-216-295-91	SHORT 0		R2620	1-216-049-91	RES,CHIP 1K	5% 1/10W
FB2916	1-216-295-91	SHORT 0		R2621	1-216-049-91	RES,CHIP 1K	5% 1/10W
FB2917	1-216-295-91	SHORT 0		R2622	1-216-129-00	RES,CHIP 2.2M	5% 1/10W
FB2918	1-216-295-91	SHORT 0		R2623	1-216-049-91	RES,CHIP 1K	5% 1/10W
FB2919	1-216-295-91	SHORT 0					
				R2624	1-216-049-91	RES,CHIP 1K	5% 1/10W
FB2920	1-216-295-91	SHORT 0		R2625	1-216-049-91	RES,CHIP 1K	5% 1/10W
FB2921	1-216-295-91	SHORT 0		R2626	1-216-049-91	RES,CHIP 1K	5% 1/10W
FB2922	1-216-295-91	SHORT 0		R2627	1-216-049-91	RES,CHIP 1K	5% 1/10W
FB2924	1-216-295-91	SHORT 0		R2628	1-216-049-91	RES,CHIP 1K	5% 1/10W
FB2925	1-216-295-91	SHORT 0					
				R2901	1-216-013-00	RES,CHIP 33	5% 1/10W
FB2936	1-414-766-22	INDUCTOR CHIP		R2902	1-216-057-00	RES,CHIP 2.2K	5% 1/10W
				R2903	1-216-121-91	RES,CHIP 1M	5% 1/10W
		<IC>		R2904	1-216-065-91	RES,CHIP 4.7K	5% 1/10W
IC2601	8-759-431-14	IC PQ3TZ53U		R2905	1-216-073-00	RES,CHIP 10K	5% 1/10W
				R2906	1-216-022-00	RES,CHIP 75	5% 1/10W



REF.NO.	PART NO.	DESCRIPTION		REMARK
R2907	1-216-039-00	RES,CHIP	390	5% 1/10W
R2908	1-216-073-00	RES,CHIP	10K	5% 1/10W
R2909	1-216-065-91	RES,CHIP	4.7K	5% 1/10W
R2915	1-216-053-00	RES,CHIP	1.5K	5% 1/10W
R2916	1-216-077-91	RES,CHIP	15K	5% 1/10W
R2919	1-216-077-91	RES,CHIP	15K	5% 1/10W
R2920	1-216-077-91	RES,CHIP	15K	5% 1/10W
R2923	1-216-077-91	RES,CHIP	15K	5% 1/10W
R2924	1-216-077-91	RES,CHIP	15K	5% 1/10W
R2925	1-216-077-91	RES,CHIP	15K	5% 1/10W
R2926	1-216-077-91	RES,CHIP	15K	5% 1/10W
R2927	1-216-013-00	RES,CHIP	33	5% 1/10W
R2928	1-216-013-00	RES,CHIP	33	5% 1/10W
R2930	1-216-009-91	RES,CHIP	22	5% 1/10W
R2931	1-216-009-91	RES,CHIP	22	5% 1/10W
R2932	1-216-077-91	RES,CHIP	15K	5% 1/10W
R2933	1-216-013-00	RES,CHIP	33	5% 1/10W
R2934	1-216-013-00	RES,CHIP	33	5% 1/10W
R2935	1-216-013-00	RES,CHIP	33	5% 1/10W
R2941	1-216-013-00	RES,CHIP	33	5% 1/10W
R2942	1-216-013-00	RES,CHIP	33	5% 1/10W

## &lt;TRANSFORMERL&gt;

T2601 1-416-762-11 INDUCTOR 10 $\mu$ H

## &lt;CRYSTAL&gt;

X2901 1-767-925-21 VIBRATOR, CRYSTAL (12MHz)

